

# Engine Air Filtration for Light, Medium &

**Heavy Dust Conditions** 

Air Cleaners • Pre-cleaners & Inlet Hoods • Rubber Adapters/Elbows • Filter Indicators • Mounting Bands







No matter the dust conditions or engine airflow requirements, you will find a Donaldson air cleaner or intake system accessory that will deliver clean air when your engine needs it most!

Distributed by:




# **Total Filtration Solutions Vehicles • Engines • Equipment**


# www.buydonaldson.com





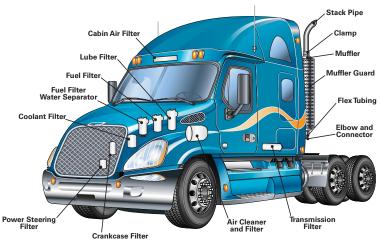


# How to Read Air Cleaner Performance Curves

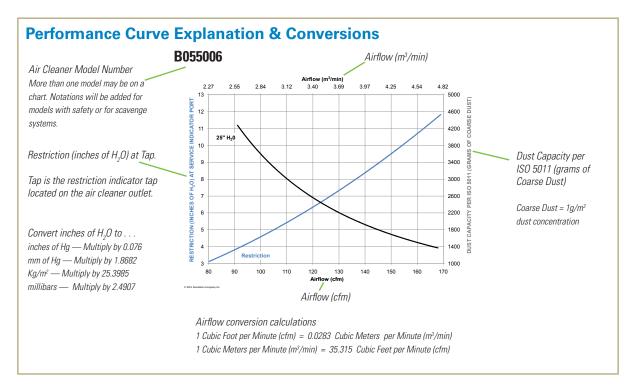


# To determine the Restriction of an air cleaner . . .

- Find the desired airflow in either cfm or m³/min on the horizontal axis. (Red Arrows cfm = cubic feet per minute (cfm) m³/min = cubic meters per minute
- Find the clean air cleaner restriction level (in inches of H<sub>2</sub>O) on the vertical left hand axis that intersects with the airflow level on the blue restriction curve. (Green Arrow)

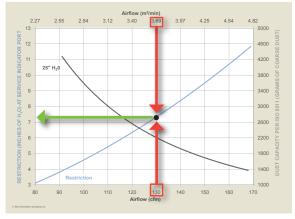

# To determine the Dust Capacity of an air cleaner . . .

- Find the desired airflow in either cfm or m³/min on the horizontal axis. (Red arrows) cfm = cubic feet per minute (cfm) m³/min = cubic meters per minute
- 2) Follow the point on the H<sub>2</sub>O black curve to the right hand axis in the chart. The axis intersect point is the "Dust Capacity" in grams at the stated H<sub>2</sub>O restriction. (Orange Arrow)

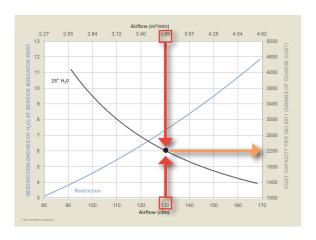

# Air Intake Systems Product Guide

### **Table of Contents**

This publication contains a wide selection of standard, in-stock air cleaner models for both original equipment manufacturers and replacement parts vehicles, and equipment that operate in light to heavy dust conditions. For a variation or a custom designed intake system, please call your current supplier of Donaldson products.

	Overview	1
	Industry Shaping Technology	2
	On- & Off-Road Air Filtration Evolution	3
	Unique Filtration Solutions	
	Standard Models with Donaldson Technology	
	Newer Filtration Technology for Mining	
	Donaldson Blue™ Air Filters	
	Intake System Accessories	
	Air Cleaner Finishes & Construction	
	Filter Features  Quality Commitment	
	Air Cleaner Selection	
	Air Cleaner Flow Direction	
	whybuydonaldson.com	
		40
	Shoptalk — The Simple Facts	19
8888	PowerCore® Series	29
	PSD (Medium to Heavy Dust)	
	PowerCore® Retrofit Kit (Ford)PCD (Light Dust)	
	FCD (Light Dust)	CD IIISeri
	Light Dust — E Series	45
	DuraLite™ ECB, ECC, ECD	
	ECO® / ECOLITE® Air Cleaners	
	EPG	
	ERA	
	EBA Konepac™	
	ECG Konepac™	
	EBB	74
	Medium Dust — F & X Series	79
	FKB (Light to Medium Dust)	
	XRB FPG	
	FRG	
	FTG	
	FVG Cycloflow™	
	Heavy Dust — S Series	131
	SSG Donaclone™	132
	STG Donaclone™	142
	SRG to SSG Conversion Kit	
	SRG Donaclone <sup>™</sup> & Conversion Kits	
	STB Strata <sup>™</sup>	160
	Air Intake Accessories	162
	All Illiake Accessories	103
	Air Cleaner Service Parts	199
	Technical Reference	219
	Engine Air Consumption Guide	251
2000	Porto Listing by Number	250
	Parts Listing by Number	
	ECO and ECOLITE are registered trademarks of Parker-Hannifin Corp., Racor Divisi	on

# Industry Shaping Technology Air Filtration Trends and Evolution

### Air Filtration System Trends — Smaller Air Cleaner Systems


Over the past decade numerous emission standards and engineering achievements have come together to create advanced, clean, and flexible engines. These diesel engines and the vehicles they power are requiring smaller air cleaner system package sizes, increased contaminant loading performance, improved contaminant separation efficiency, and higher temperature performance; all the while maintaining low initial restriction to airflow. Emissions compliant engines, extended oil drains and oils, and tighter component tolerances all contribute to the need for increased air filtration system performance.

### **Donaldson Delivers!**

### PowerCore® Filtration Technology — Big Performance, Small Footprint

Pleated filter designs have given way to PowerCore® Filtration Technology and now, to PowerCore® G2, the next generation. The need for shrinking intake system size will continue as emissions regulations continue and manufacturers design smaller, lighter, and more efficient vehicles.

### PowerCore® Evolution

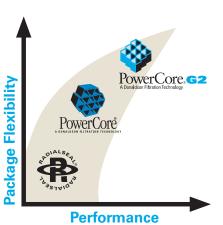

More than 11,000,000 PowerCore® Filters Sold

PowerCore® G2 Filtration
Technology delivers longer life
and/or less restriction in less
space than our original PowerCore
design.

- System design flexibility
- Metal-free, lightweight materials
- Rugged construction
- Straight-through airflow technology invented by Donaldson
- Advanced sealing technology
- Superior filtration performance



For given filter life and efficiency targets, PowerCore® G2 configurations can result in a 30% reduction in size from the first generation of PowerCore filters and a 60% reduction in size from pleated, cylindrical filters.

### **Sealing Technology Guarantees a Reliable, Sure Fit**



Donaldson pioneered the RadialSeal™ design for air filtration more than 20 years ago, creating a superior seal and vibration-resistant interface between the air cleaner and filter. This industry changing sealing technology combines two components into one — the end cap and sealing gasket. The flexible sealing material creates a sure-fit and simplifies filter maintenance. The reliable seal helps protect engines

in extreme operating conditions and in challenging heavy-duty applications.

Donaldson air cleaners, including PowerCore systems, use an advanced RadialSeal sealing technology. The combination of RadialSeal and PowerCore Technologies offer you best-in-class air intake system solutions for you and your customers.



Close-up of RadialSeal endcap and gasket.

# Industry Shaping Technology Air Filtration Trends and Evolution

### **Pre-cleaning for Extreme Dust Conditions**



Close-up of pre-cleaner section of a PowerCore® air cleaner. Pre-cleaning tubes can be arranged in various patterns, depending on the space and efficiency requirements of your application.


Pre-cleaners expel dust and debris before it reaches your air cleaner — extending air cleaner life, extending maintenance intervals, boosting air intake system efficiency and extending engine life.

Donaldson inertial particle separation technology offers maintenance-free air filtration for turbines, diesel engines and environmental applications. Inertial separation technology is used extensively on ground vehicles, rotorcraft, offroad vehicles and other critical equipment exposed to harsh environments.

Our light-weight pre-cleaning tubes have no moving parts to wear out or break. They are self-cleaning and do not require regular maintenance.



See the Accessories Section for our pre-cleaner / rain hood product offering.

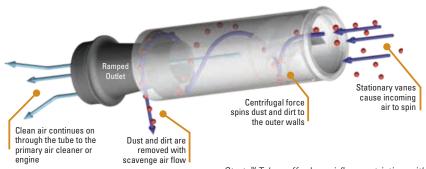

Strata™ Tubes offer low airflow restriction with efficient contaminant removal up to 99%.

### On- & Off-Road Air Filtration Evolution

### **On-Road Housings**

Bright Stainless Air Cleaner (Cowl Mount)











### **Off-Road Housings**



### **Unique Filtration Solutions**

# Crankcase Filtration — An Emissions Device or Air Filter?

Actually, it's both. Donaldson Spiracle™ Systems filter contaminant and aerosols from blow-by gasses.

For engine manufacturers, regulators now recognize that engine blow-by gas emitted from the crankcase is a major emissions source and requires that the vent be closed or filtered with high efficiency filtration.

Our Spiracle™ Crankcase
Filtration Systems for closed
(CCV) or open (OCV) ventilation
systems reduce or eliminate
harmful and unwanted
crankcase emissions.





Small, small extended and mid-sized standard models are available for engine blow-by flow ranges up to 300 lpm / 10.6 cfm and with blow-by mass flow rates up to 15 gms/hr.

For more on Spiracle™ crankcase filtration technology, refer to the technical reference section.

### What's the Right Intake System?

As you develop the future design of your engine or application, it is important to consider the filtration system. Depending on your objectives, it may be beneficial to choose from a catalog offering or partner with Donaldson for a filtration solution tailored to your needs.


### **Reasons to Select a Traditional System**

- No or low budget for engineering collaboration, development time or cost, or component tooling
- Prefer to have parts readily available want to avoid manufacturing lead times (8 – 12 weeks) and not interested in warehousing service parts
- Prefer an established brand for filtration

### Reasons to Consider a Custom, Integrated System

- Engine design team is integrating new components that require a higher degree of filtration
- Looking for a system that does more, which may include pre-cleaning, sensors, unique intake plenums
- Have budget for engineering collaboration, development time/cost
- Interest in component / supplier consolidation solutions that bridge a wide range of engine/vehicles.
- Offering a unique solution with ease of maintenance

### Molded Plastic Intake Systems

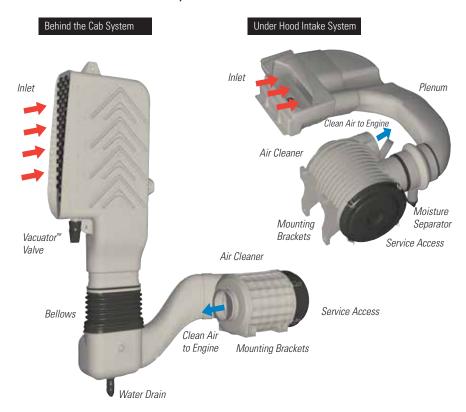

# Filtration Solutions Global Capabilities — Design & Logistics

Donaldson has accumulated numerous engineering, design, and testing tools that are used during the design process.

### **Engineering Capabilities**

Design centers in three key regions
 United States, Asia and Europe

### **Prediction and Simulation**

- CAD
- Proprietary, internally developed filter modeling software
- Fundamental fluid mechanics
- Computational fluid dynamic methods
- Structural analysis
- Thermal analysis

# Development and Validation

### **Analytical Evaluation**

- Particle Characterization
- Chemical Analysis Laboratory
- Acoustic Analysis

### **Filter Durability**

- Filtration performance testing per applicable SAE and ISO standards
- Fabrication integrity
- Environmental conditions
  - Salt spray and thermal cycling
- Pressure fatique
- Flow fatigue
- Hydrostatic burst
- Flow benches
- Vibration benches
- Gravimetric analysis

### **Rapid Prototyping**

- SLA, SLS
- Investment casting
- RTV molding

### **Test & Evaluation Tools**

### **Structural Analysis**

- Per SAE, ISO, and NFPA standards
- Ansys & Abagus
- Collapse
- Pressure impulse and fatigue

### **Tensile Compression**

 Used to test material, component and assembly properties

### **Environmental Chambers**

 Allows testing at hot or cold temperature, with humidity control

### Flow Test Benches

- Allows measurement of static and dynamic flow and restriction for a device
- Allows calculation of device restriction at varying flows and temperatures
- System simulation

### **Performance Testing**

- ISO, SAE, NFPA
- Filter performance
- Efficiency testing
  - Gravimetric
  - Fractional
  - Capacity testing per ISO5011
- Customer standards
- Crankcase ventilation tests
- Soot loading bench
- MAFS Test Bench
- Acoustic Test Chambers

### **Design Validation**

### **Diesel Engine Test Cells**

- Test cell locations in three key regions — United States, Asia and Europe
- Up to 600 kW / 800 hp capability
- Measurement of gaseous and particulate emissions
- Component durability
- Soot test bench
- 24/7 durability testing
- Web-based test cell monitoring access
- Tensile/Compression Tester
- Temperature Chambers

### Vibration/Shaker

- Multiple benches
- Performance vibration with flow test
- Can apply sine, random, shock or custom variable vibration profiles
- Capable of hot or cold tests

### Field Testing

- On and off highway
- Heavy-duty
- Tests conducted on both end user and OEM vehicles

### **Field Data Acquisition**

- Real time measurements
- Remote communications
- On-line collection tools
- Review daily, weekly and monthly reports to analyze operational trends

### Filter Media

- Wide selection
- Media characterization testing
- In-house media capabilities



Donaldson European Technical Center. Expanded testing capabilities for engine filtration businesses in October 2010.

### Standard Models with Donaldson Technology Newer designs offer improved features and performance!



XRB Housings: left XRB12; middle XRB10; and right XRB08

### **XRB Air Cleaners**

The XRB family is ideal for light- to medium-duty diesel engine trucks, agriculture, construction, mining, and industrial engine applications. The XRB air cleaner is smaller, lighter and easier to install and it effectively reduces contaminants, providing a high level of engine protection. Available in three diameter sizes.



FKB Housings and Filters: top center, FKB06; bottom left, FKB05; and bottom right, FKB04

For smaller sizes, check out the FKB air cleaner family.



PSD08, PSD09, PSD10, PSD12 and PSD14 housings

### **PSD PowerCore® Air Cleaners**

Air cleaners with PowerCore filtration technology offer maximum design flexibility. You gain equal performance in significantly less space, freedom to design unique configurations to fit tight spots, and overall design simplicity. See the PowerCore air cleaner section for all the details.




The smallest of our PSD family, this D080056 Side Service model is designed for in airflow ranges of 180-245 cfm, see the PowerCore section for more details.





### **PowerCore Air Cleaner Scavenge System Components**

This catalog features new Exhaust Ejectors, Check Valves, and Adapters that work with the PSD Air Cleaner family. To learn more, see the PowerCore Air Cleaner section.

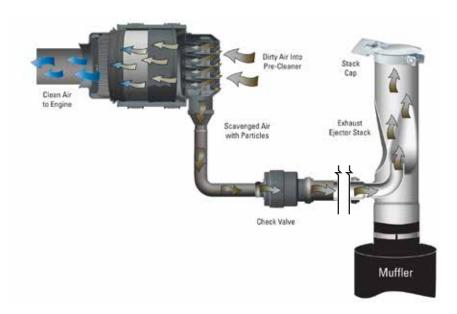

# Newer Filtration Technology for Mining Trucks Enhancements offer improved features and performance!





Conversion kit includes all you need to replace the upper unit of an old SRG air cleaner, including the filters.

### SSG Style — Our Largest Engine Air Cleaner

The SSG Air Cleaner offers design improvements over our older SRG air cleaner style — including filters with RadialSeal™ sealing technology, and a filter access cover with a quick release cover latches and chain.

### Upgrade to newer filtration technology . . . with our Conversion Kit

Replacing an older SRG housing with the new SSG housing allows you to simplify your routine filter service — no more separate gaskets at each filter change or removing a bolted

on cover. SSG filters have radial seal end caps that provide a more reliable, consistent seal.

Choose from an upper assembly conversion kit or you may want to install a complete new housing if your current SRG assembly needs repair or is reaching the end of its useful life.

Dust Dumpa kits allow for visual inspection related to dust-cup servicing and Vacuator™ Valve purging. See page 9 or the accessories section.



No more bolt to unscrew for a filter change — simply unlatch the cover and let it hang from the housing during service.



### Donaldson Blue<sup>™</sup> Air Filters with Ultra-Web<sup>®</sup> Advanced Nanofiber Filtration Technology

# Donaldson.



### **ULTRA-WEB**

- Invented by Donaldson
- Engineered to perform in extreme temperature and humidity conditions, unlike ordinary nanofibers
- Optimized fiber structure and fiber diameter so it's stronger and lasts longer in all environmental conditions
- Filtration Technology
   High efficiency longer filter life
- High capacity holds more contaminant

**Advanced Nanofiber** 

- Identifiable by the blue media color
- Proven used in diesel engine market for nearly two decades

### Finding a Donaldson Endurance air filter in this catalog

Part numbers starting with DBA are Donaldson Blue™ Air Filters. DBA part numbers, if available for an air cleaner model, are listed in the service parts listing with an ES (Extended Service) in the description.

A150138	ERA
bolt	P119463
cover	P544238
filter, primary -	SM P544301
filter, primary -	Donaldson Blue™ DBA515
gasket, cover	P535559
mounting band	, black P016845
	P119325
retaining ring	P129469
Vacuator™ Valv	e P149099

# Intake System Accessories Pre-Cleaners • Hoods • Indicators • Elbows • Connectors • Mounting Bands

# Designed to solve your customer's specific problems — such as excessive moisture or noise — or to simply help maintain the overall system



- Inlet Hoods protect air intake from large debris and rain
- Pre-cleaners extend air filter life and boost system efficiency
- Filter Gauges and Indicators maximize filter life and reduce maintenance costs
- Rubber Elbows and Connectors

   minimize air intake flow
   resistance, reduce noise levels in severe operating condition
- Vacuator<sup>™</sup> Valves automatically dispel dust and water from the air cleaner

### **New Pre-cleaning Device for Heavy-Dust Conditions!**

Donaldson air cleaners for heavy-dust conditions have pre-cleaning inertial separation technology built-in to the inlet side of the housing — you'll find this technology in our industry shaping PSD, STB, STG, SRG and SSG air cleaner models.

Finally, the same durable, reliable, particle separation technology is now available in a stand-alone pre-cleaner — the Strata<sup>™</sup> Cap!







Donaldson developed the first air particle separator system in the early 1960s to protect helicopter turbine engines from sand ingestion. Today, this technology continues to be used on defense equipment and other turbine and diesel engine applications that operate in extreme dust conditions.



The Strata™ Cap pre-cleaner expels up to 96% of dust and debris BEFORE it ever reaches the air cleaner.

# Intake System Accessories Pre-Cleaners • Hoods • Indicators • Elbows • Connectors • Mounting Bands





Dust Dumpa tube extensions ship fully assembled. *Left:* Part No. X006561 and Part No. X006562 on right.

# **Dust Dumpa for PowerCore**, SRG, and SSG Style Air Cleaners

In extreme dust conditions (mining, construction and quarrying), the dust is so concentrated that maintenance personnel have to empty the dust cups or check the Vacuator™ Valves more frequently than they like.

Both Dust Dumpa kits incorporate rubber connections that improve dust evacuation from the housing during normal vehicle vibration. The clear tube allows you to easily see what's happening during daily inspections without climbing up to open or check out the Vacuator Valve.



The addition of Dust Dumpa tube extensions to this double PSD air cleaner application resulted in extended filter life on this Australian geothermal drill rig.

# Air Cleaner Materials, Finishes & Construction Designed for long life, rust resistance and good looks!





### **Injection and Blow-Molded Air Cleaners**

Our non-metal finish is always black plastic and can be found on DuraLite,™ PowerCore® (PSD and PCD) and other RadialSeal™ air cleaners (FPG, XRB, FKB). Advantages include:

- Lighter weight than metal air cleaners
- · Corrosion and chemical resistant
- Impact, mar and vibration resistant

### **Polymer Coating Resists Corrosion**

Donaldson's gloss black finish — on most of our metal air cleaners (ERA, FVG, FRG) — is resistant to chemicals and corrosion. Advantages include:

- Corrosion and chemical resistance. This polymer coating lasts five to 10 times longer than traditional paint.
- Impact and mar resistance. Polymer coating is up to 17 times harder than most solvent-based paint.
- Consistent thickness coating over the entire air cleaner, even in crevices and small, hard-to-reach places.

### **Buff Prime Finish (not shown)**

Our large SRG, SSG & STG air cleaners have a buff prime finish — ready for you to apply paint to match the overall look of your equipment. (Exception: the SRG to SSG conversion kit contains an upper unit that has a white polymer coating.)

# Filter Features Seals • Media • End Caps • Beading • Liners

# Donaldson brand performance air filters give you consistent performance over the life of your engine



RadialSeal filters slip easily on and off the outlet tube during installation and service. This design eliminates the separate gaskets used with metal endcap filters.

### **Axial filter seals**

Strong, pliable gasket ensures a leak-free seal when properly installed. The gasket won't harden or deteriorate over the useful life of the filter.

### Pleatloc™ media spacing

Ensures uniform pleat spacing, keeps filter media from bunching during operation and promotes longer filter service life.



designed to stabilize the media

and prevent pleat tip wear.

### RadialSeal™ filter seals

integrity.

media and provide structural

Our RadialSeal technology on PowerCore filters provides a tight critical seal on unique filter shapes.



### **Non-metal construction**

Weighs less and with less disposal impact.



Pour Coro

liners support the filter media

airflow.

during operation and maximize

To learn more about the PowerCore advantages, see the PowerCore® Section.

### Donaldson's Commitment to Quality & Continuous Improvement

# Donaldson Quality Commitment

Our employees are committed to providing our Customers with products and services that consistently meet or exceed their expectations.

### We will work toward:

- Continuous improvement of products, processes, and services for the benefit of our Customers;
- Complete Customer satisfaction;
- Elimination of waste and variation;
- World-class standards and benchmarks.

### We believe in:


- The development and empowerment of our people;
- Standardization of processes and measurement of progress;
- Simplicity, visibility and capability of all activities;
- Continuous improvement in our management and quality systems.

For the long-term success of our company, our first operating priority is the satisfaction of our Customers. Understanding their needs and serving them will benefit both our shareholders and our employees. Our management is responsible for ensuring that this policy is understood, implemented and maintained at all levels of our organization.

Tod Carpenter President, CEO





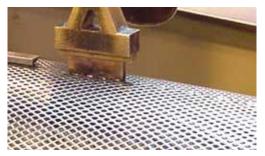










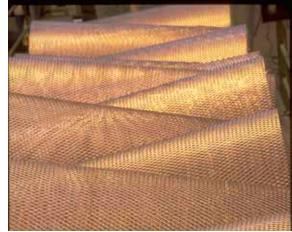

### Air Cleaner Selection

With the multitude of sizes and styles of air cleaners available from Donaldson, how do you choose the proper model that will reliably protect your engine and deliver maximum filter service life? Selection is based on two primary factors — airflow requirements of your engine and the environment the air cleaner will be operating in. Use our five-step selection method on the next few pages to make the right choice for your application:

# 1 Determine the combustion air requirements of the engine

For the most accurate engine airflow specifications, Donaldson recommends using the intake airflow rate specified by the engine manufacturer. If this information is not readily available, you can calculate your own numbers by using the preferred or alternative methods shown below. If the air cleaner may see excessive engine vibration, include a pulsation factor into your calculations.

# **Ideal Method Obtain from Engine Manufacturer**

For the most accurate engine airflow specifications, Donaldson recommends using the intake airflow rate specified by the engine manufacturer. This information may be obtained from the manufacturer.

### Preferred Method Engine Displacement Formula

### 4-Stroke (Cycle) Engine Formula

### **English Units**

Airflow (CFM) = (Engine Size (CID)  $\times$  RPM)  $\times$  VE / 3456

### **Metric Units**

Airflow (m<sup>3</sup>/min) = (Engine Size (Liters) x RPM)  $\times$  VE / 2000

### VE = Volumetric Efficiency — 4-Stroke\*

0.90 for naturally aspirated gas engine

0.90 for naturally aspirated diesel engine

1.60 for turbo charged diesel engine

1.85 for turbo charged after cooled diesel engine

### 2-Stroke (Cycle) Engine Formula

### **English Units**

Airflow (CFM) = (Engine Size (CID)  $\times$  RPM)  $\times$  VE / 1728

### **Metric Units**

Airflow (m<sup>3</sup>/min) = (Engine Size (Liters) x RPM)  $\times$  VE / 1000

### VE = Volumetric Efficiency — 2-Stroke\*

0.90 for naturally aspirated diesel engine

1.40 for scavenge blower diesel engine

1.90 for turbo charged diesel engine

# \* The VE values are guidelines. It is always best to use manufacturer ratings when they are available. Electronic controls on modern engines can raise VE ratings to 2.0 or greater.

### Alternative Method Engine Horsepower Formula

### **English Units**

Airflow (CFM) = HP (SAE)  $\times$  SA

### SA = (Specific Airflow) per Horsepower

4-stroke naturally aspirated diesel engine — 2.0 4-stroke turbo charged diesel engine — 2.3

4-stroke turbo charged after cooled diesel engine — 2.3

2-stroke naturally aspirated diesel engine — 2.0

2-stroke scavenge blower diesel engine — 3.3

2-stroke turbo charged diesel engine — 3.6

### **Metric Units**

Airflow  $(m^3/min) = HP (SAE) \times SA$ 

### SA = (Specific Airflow) per Horsepower

4-stroke naturally aspirated diesel engine — 0.057

4-stroke turbo charged diesel engine — 0.065

4-stroke turbo charged after cooled diesel engine — 0.065

2-stroke naturally aspirated diesel engine — 0.057

2-stroke scavenge blower diesel engine — 0.093

2-stroke turbo charged diesel engine — 0.102

### **The Pulsation Factor (PF)**

On naturally aspirated\*\* engines, intake airflow to the air cleaner can negatively affect the cubic displacement of the air into the engine. To compensate for the loss, we recommend you multiply the engine airflow by one of the following factors:

### English Units

2.1 for 1 cyl.

1.5 for 2 cyl.

1.2 for 3 cyl.

1.0 for 4 or more cyl.

### Metric Units

1.2 m3/min.

# 2 Determine the dust condition for the engine/machine and typical operating environment

For example, a standby hospital generator set would probably see light dust; whereas, a rock crusher would almost always be surrounded by an extremely heavy dust concentration of large dirt particles. Our air cleaner selection chart, on the next page, is a visual guide to select your vehicle type and operating environment.

<sup>\*\*</sup> No airflow adjustment is required for turbo-charged engines on Donaldson air cleanerswith high pulsation filter media (e.g., Donaldson DuraLite™ ECB, ECC, ECD air cleaners).

### Air Cleaner Selection

### **3** Select an air cleaner series

Key design differences are color coded in our selection chart including PowerCore® filtration technology, axial seal, RadialSeal™ and disposable air cleaners.

**Dust Environments** 


PowerCore®

RadialSeal™

**Axial Seal** 

**Disposables** 

Application notes, dimensional, locations of the inlet and outlet, and mounting configurations are appropriately considered at this step. These parameters are sometimes critical and may lead you to an alternative model or series that is better suited to your application.

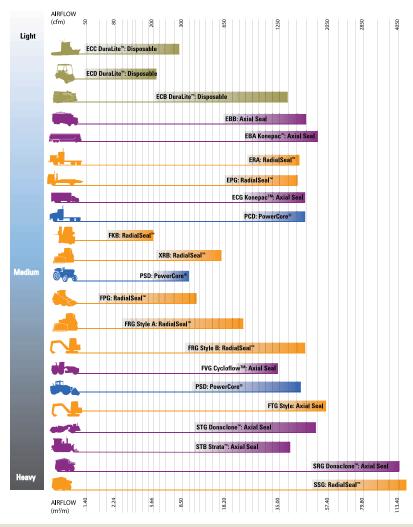

### Looking for **Engine Airflow** Reference Guide?

See Engine HP & Air Consumption Rating Guide Reference Section of this catalog.



Please note, this information should not be used for the application of retrofit emissions devices.



### 4 Choose a specific air cleaner family or series

Use the table of contents from this guide to locate the choices for a particular air cleaner family according to the cfm your engine needs. Refer to the Initial Airflow Restriction table for the style you're considering. If there are two air cleaner models that fit your parameters, choose the one with the **lowest** restriction to ensure maximum service life from that air cleaner/filter.

### 5 Choose intake accessories

Even though they're called accessories, things like inlet hoods, mounting bands, rubber connectors, and clamps are important parts of the overall intake system. See our accessories section for more information.

Donaldson has air cleaner housings that work in a variety of dust conditions and air flow patterns (A – D and G).

For improved filtration reliability and quicker filter service compared to older axial seal style air cleaners, Donaldson recommends installing either PowerCore® air cleaners or housings with RadialSeal™ sealing technology, whenever possible.

### **Flow Direction Legend**


# DescriptionPart No. ExampleA = Air in the End, Out the SideA042511, A112018B = Air in the Side, Out the EndB045008, B120271C = Air in the End, Out the Same EndC080025, C065003D = Air in the End, Out the Opposite EndD100030, D055004


**G** = Air in the Side, Out the End

**G**290010, **G**110214

### **Standard & Reverse Flow Filters**

These filters look exactly the same except there are dark lines viewable on the filter media of one of the filters. What's different? One is a standard flow filter, the other reverse flow. They fit housings that have specific flow requirements and are not interchangeable even thought they look like they could be.

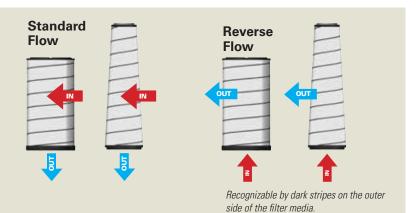

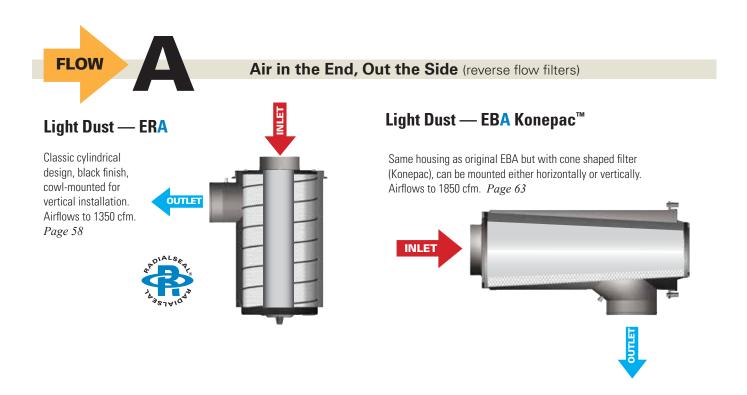



### Air in the Side, out the End (standard flow filters)

### Medium Dust — XRB

The RadialSeal, plastic, two-stage air cleaner with side inlet for horizontal installation. Body diameters in 8," 10" and 12". Handles airflows of 265-630 cfm. Mount under hood or behind cab. *Page 88* 



### **Light and Medium Dust — FKB**


A compact housing high dust holding capacity and comparable airflow to FPG. Two-stage filtration, side inlet, horizontal installation. Body diameters in 4, 5, and 6. Mount under hood or behind cab. Handles airflows from 70–207 cfm. *Page 80* 



### **Light Dust — EBB**

A small housing with higher dust holding capacity and comparable airflow. Side inlet, horizontal installation. Airflows to 1640 cfm. *Page 74* 




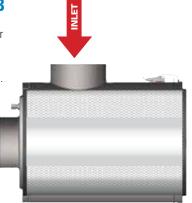

### **Light Dust — ECB**

Disposable, small, lightweight and unitized (housing and filter in one). For high-vibration engines. Can be vertically or horizontally mounted. Airflows to 2118 cfm.

Page 46

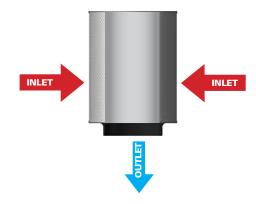




### Air in and out the Same End (standard flow filters)

### **Light Dust — ECC**

Disposable, small, lightweight and unitized (housing and filter in one). For high-vibration engines. Can be vertically or horizontally mounted. Airflows to 760 cfm.

Page 46

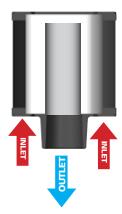



### Air in the End, out Opposite End

### Medium to Heavy Dust — PSD



### **Light Dust — ECD**

Disposable, small, lightweight and unitized (housing and filter in one). For high-vibration engines. Can be vertically or horizontally mounted. Airflows to 185 cfm.

Page 46





### Air in the Side, Out the End (standard flow filters)


### **Light Dust — EPG**

Single stage filtration. Smaller than ECG and lightweight, sturdy, and totally plastic. Horizontal installation. Airflows to 1325 cfm.

Page 52





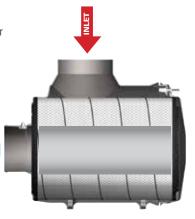


### **Light Dust** — **ECG** Konepac<sup>™</sup>

Second generation Konepac with a coneshaped filter has a long and narrow housing. Designed for horizontal installation; usually mounted under hood or behind cab. Airflows to 1600 cfm.

Page 68



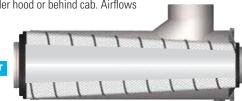

### Medium Dust — FPG

The first fully plastic air cleaner in our two-stage filtration line. Tangential inlet, with or without safety element, body diameters from 4" to 8". Handles airflows of 55-346 cfm. Flexible mounting horizontally, vertically or at an angle. Page 96






### Medium Dust — FVG

A heavy-duty housing, our FVG has high airflow throughput and safety filter. Adds a vane in the inlet for a more aggressive first stage of cleaning. Horizontal mounting required. Airflows of 690-1200 cfm. Page 126



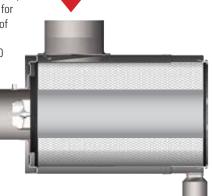


16 • Engine Air Filtration

# Medium to Heavy Dust — FRG This two-stage filtration housing is available in body diameters of 5" to 18". This style is the ideal upgrade from our older FWA, FWG, FHG and FTG housings. Horizontal mount required. Style A handles airflows up to 795 cfm and our new Style B handles airflows up to 1390 cfm. Page 107 OUTLET


### **Heavy Dust — FTG**

Two models available and designed for the engines on large equipment. Both have exact same airflow (from 1480-1870). Inlet tube position on housing body is only difference between

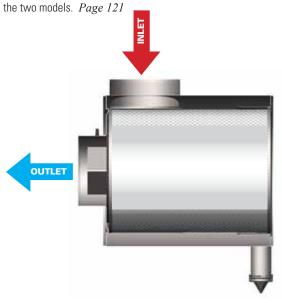

### Heavy (Severe) Dust — STG

The efficient "T" design of the STG allows high airflow and strong two-stage filtration. Two styles available — one with a peripheral inlet and another with a tubular inlet. Handles airflows from 390-1760 cfm. Can be mounted vertically or horizontally. Page 142

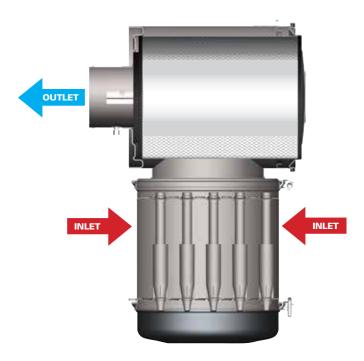

### Heavy (Severe) Dust — SSG


These new models are replacing our older SRG models. Donaldson's largest two-stage engine air cleaner, designed for the engines on large equipment. Handles airflows up to 4800 cfm per air cleaner. Multiple units can be used on very large equipment. The best protection for 500 to 3000+ horsepower diesel engines. This model uses RadialSeal™ sealing technology for filter retention. Page 132

OUTLET

### www.buydonaldson.com A Single Location to a Global Aftermarket Resource

Donaldson serves industrial and engine markets including in-plant air cleaning, compressed air and gas purification, power generation, disk drive filtration, off-road equipment, vehicles and on-road trucks.

Donaldson filtration solutions serve diverse markets all around the world.

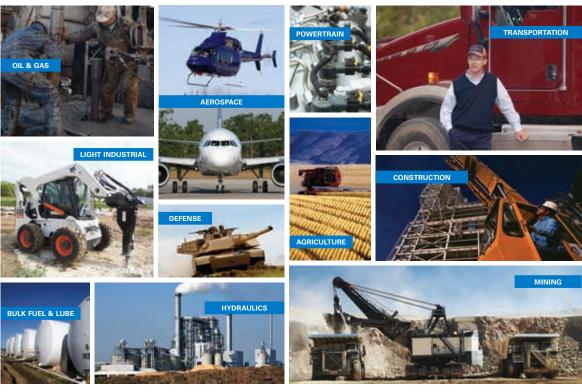










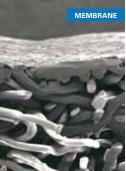



# Shoptalk Simple Facts about Air Filtration

# Simple Facts for Owners of Diesel-Powered Equipment

### Catch-up on the latest information!

The following Shoptalk section contains maintenance tips, cost reduction ideas, and product features and benefits.

If you're interested in reading Shoptalk online, you can find it at: www.shoptalk.donaldson.com



Section Index Air Filtration — Best Practices
Don't remove an air filter from its housing
simply to inspect it20
Ideally, service your air filter by restriction measurement or follow your regular maintenance schedule20
Never hit a filter to try cleaning it20
Do not clean a primary or safety filter instead of replacing it20
Never operate a system with only a safety filter in place
For longer service between filter changes, consider upgrading to an extended service filter20
Don't use a dented or damaged filter20
Check any intake hoods and pre-cleaner devices during maintenance routines21
Do not judge the filter's remaining life by looking at it21
Never leave an air cleaner open longer than necessary. 21
Don't ignore a worn or damaged gasket21
At filter change-out, check to ensure that there is no damage to the air cleaner housing itself21
Check for any air leaks in the ducting on both sides of the air cleaner21
Don't take chances with weather-worn Vacuator™ Valves21
Never substitute one filter with another one that has a different model number
A water manometer is the most accurate method to verify airflow restriction
Installing RadialSeal™ filters22
Filter service & maintenance records22
Avoid, cross contamination during filter service22
Inspect the entire air induction system22
Filter Storage & Handling23
Air Filtration Pictogram23
Take a Look at Filter Efficiency and Dust Handling24
All Nanofibers are NOT Created Equally24
Don't Throw Out a Good Filter Just Because it Looks Dirty25
Will Using Aftermarket Filters or Mufflers Void My Warranty?26
Worried About Water in Your Air Intake System?26
Keep Those ECG Konepac™ Air Cleaner Latches Inspected27
No Matter What Dust Condition, Pre-cleaners Extend Air Filter Life27
Did You Know that Your Truck, Tractor and Airplane Can All Use Donaldson Filters?28
Donaldson Keeps Military Vehicles Moving28

# Shoptalk Air Filter Service — Best Practices



### Air Filter Service — Best Practices

Here are some dos and don'ts from Donaldson about air filter servicing and handling. This servicing information is provided as a best practices guide. It is not however intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

### Don't remove an air filter from its housing simply to inspect it.



- Removing and replacing the same filter can do more harm than good.
- Ridges of dirt on the gasket sealing surface can drop on the clean filter side when the gasket is released.

# Ideally, service your air filter by restriction measurement or follow your regular maintenance schedule.

- If you don't trust your current filter service indicator, getting a new one is a good idea.
- Restriction indicators, mounted on the air cleaner system are recommended for keeping an eye on restriction levels and indicating when servicing is due.
- For testing of initial restriction and confirming remaining filter life, we recommend the greater accuracy of a clock-type restriction gauge or water manometer.





When the indicator window shows "RED," it's time to replace the air filter. A "GREEN" window indicates all is OK.

### Never hit a filter to try cleaning it.

- Rapping hard enough to knock off dust damages the filter and can place your engine at risk for dust ingestion.
- Deeply embedded dirt is never released by tapping.
- It is always safer to keep operating until you can change to a new filter than to try and tap out the dirt.



### Do not clean a primary or safety filter instead of replacing it.

- Heavy-duty air filtration manufacturers do not recommend any type of cleaning process to be used on their products.
- Once an air filter has been cleaned or washed, the Donaldson filter warranty is no longer valid.
- The dirt holding capacity of a filter is reduced 20 – 40% with each cleaning attempt.
- There is also the real risk of dirt reaching the clean side of the filter if cleaning is attempted.
- The risk of filter damage from washing, tapping, high pressure water, or compressed air cleaning is very real.
- The potential savings from risky attempts at filter cleaning won't come close to offsetting potential damage to engine components.
- Increased engine wear and damage is the result of the ingression of contaminant over time.





### Never operate a system with only a safety filter in place.

- Safety or secondary filters used alone will let harmful contaminant enter the engine.
- Safety or secondary air filters are designed to compliment the primary filtration or provide protection during primary filtration service.

For longer service between filter changes, consider upgrading to an extended service filter such as Donaldson Blue™ air filters. Then service the filter by restriction only.



### Don't use a dented or damaged filter.





### Tips and Maintenance Practices for Equipment Longevity!

### Check any intake hoods and precleaner devices during maintenance routines.

- A missing inlet hood will significantly shorten filter life. If your unit had a hood or pre-cleaner originally, make sure you replace it.
- Check openings and tubes on pre-cleaners to make sure they are not plugged
- Replace any units that are damaged.

  Damaged or dented units will not operate properly.



### Never leave an air cleaner open longer than necessary. An open air cleaner with filter removed is a direct entry to the engine.

- Keep your engine protected during filter changes.
- Contaminants that are smaller than the eye can see can be damaging to an engine.
- If the air cleaner housing is not going to be reassembled immediately, be sure to cover the opening.



# At filter change-out, check to ensure that there is no damage to the air cleaner housing itself.



### Check for any air leaks in the ducting on both sides of the air cleaner.

An air leak between the air cleaner and the engine gives dirt a direct path into the engine.

### Do not judge the filter's remaining life by looking at it. A dirty-looking filter may still have plenty of life left.

- On the other hand, a clean-looking filter can also be deceiving.
- You can't see the dirt that's embedded deep within the filter media, and carbon contamination may not be visible to the eye.
- One of the best options for lowest filter maintenance costs and best engine protection is to monitor air filter life with a restriction indicator.
- It's a low-cost and smart investment.







Both of these filters look ready for replacement, but neither have reached their final servicing point.

# Don't ignore a worn or damaged gasket. If your air cleaner has a cover gasket, replace it with a new one when changing filters.

- Some air cleaners, such as the EBA and ERA models, specifically call for a new gasket with each filter change-out.
- Never reuse the old one. Replace it according to the service instructions.







# Don't take chances with weatherworn Vacuator™ Valves which can admit dirt instead of expelling it.

- Replace any missing or damaged Vacuator Valves and any air cleaner fasteners.
- Make sure the valve is flexible and not inverted, damaged or plugged. Replace it if damaged or if it looks like any of these images. A damaged or missing Vacuator Valve will disrupt the designed flow of air through the air cleaner.









# Shoptalk Air Filter Service — Best Practices



### More Tips and Maintenance Practices for Equipment Longevity!

# Never substitute one filter with another one that has a different model number.

- The only exception is in cases where another filter is recommended as an upgrade to an older style filter.
- Filters may look almost identical, but even a small difference in size can prevent a good seal or affect airflow.
- Selecting a filter by fit alone may also give you the wrong media with potentially serious consequences for your engine over time.

# A water manometer is the most accurate method to verify airflow restriction.

- For testing of initial restriction and confirming remaining filter life, we recommend the greater accuracy of a clock type restriction gauge or water manometer.
- Use the restriction tap provided on the air cleaner or at the transfer pipe.
- Replace the filter only when the restriction level has reached the maximum recommended by the engine or equipment manufacturer.
- Restriction indicators that are mounted on the air cleaner system are recommended for keeping an eye on restriction levels and indicating when servicing is due.



### Installing RadialSeal™ filters

- Donaldson RadialSeal filters have a dry lubricant on the seal which aids in installation and removal. Do not remove the lubricant.
- No cover pressure is required to hold the seal in place and one should NEVER use the service cover to apply pressure.
- Forcing a cover could damage the housing, filter and fasteners and void the warranty.
- If the service cover presses against the filter before the cover is fully in place, remove the cover, push the filter further into the air cleaner by hand and then the cover will go on with no extra force.



### Filter service & maintenance records

- Vehicle and engine manufacturers provide filter maintenance practices for the equipment they sell. Make sure to follow their recommendations for routine filter service.
   Being able to show/reveal your maintenance records for potential warranty claims is essential.
- Like all components, air intake systems have evolved and older styles and filters have different maintenance procedures. Make sure your maintenance personnel are familiar with the proper service techniques.
- Log or track your filter changes. Whether your are going to service by miles, hours or restriction.
- Many maintenance shops find it helpful to record the date of filter change directly on the filter.
- If you have to replace an entire air cleaner housing, consider designs that offer improved filtration performance (high efficiency filtration) or enhanced sealing (Donaldson RadialSeal™ housings).



### Avoid cross contamination during filter service.

When a dirty filter is at its service point — the inlet side of the filter is loaded with contaminant — take these precautions to eliminate contaminant from getting on the outlet side of your new filter or clean sealing surfaces (gaskets or RadialSeal™ end caps).

- If you wear gloves during service, remove them prior to handling the new filter.
- If you don't use gloves, wash or clean your hands before handling the new filter.
- Keep your new filter in its box until your ready to replace.
- If product box has layers of contaminant, take care that the contaminant doesn't get on the new filter as you remove it from the box.



The clean side of your air filter can vary depending on the application. Some filters load on the outer surface (shown above — referred to as standard flow), and some load on the inside surfaces of the filter (referred to as reverse flow).

### Inspect the entire air induction system

The last step to any air filter service, is to inspect and tighten all air cleaner system connections.

- Immediately replace or repair any visible holes or damaged components.
- Inspect all air ducting for worn spots or damage — elbows, connections and seals.
- Check all clamps, making sure they're secure and tight.
- Inspect your pre-cleaners or inlet hoods (if equipped).
- Annual replacement of air cleaner system gaskets is recommended.
- · Reset manual filter indicators
- Record action items taken in your filter service records.






### Tips and Recommendations for Storage and Handling

Whether it's an empty trailer or building, it's important to practice good storage and handling techniques when it comes to filters. Before installing any filter on a piece of equipment make sure the filter is clean, unused and free of damage and is not more than six years old from the manufacturing date.

- Never store an air filter on a shelf without it being in a box or totally sealed from outside contaminant.
- When you see an open box of filters on the shelf, tape it shut unless the filters inside the box are individually sealed.
- Handle filters with care to prevent filter damage; for example, don't throw filters into the back of a truck.
- If transporting filters from one job site to another, don't let them roll around on the floorboard or in the back of the truck, as this may cause damage.
- Metal storage shelves may cause condensation to form on filters if sitting directly on metal. Over time the filter may get rusty. This is another good reason to store filters in boxes.
- If the product box has layers of contaminant, take care that the contaminant doesn't get on the new filter when you remove it from the box.
- Practice "first-in, first-out" with your inventory. When possible, always use the oldest inventory first.
- Make sure any labels with product information and manufacturing dates are visible to personnel pulling from the shelves.
- The conditions under which the filters are stored can have a significant impact
  upon the shelf life of the filter; e.g., conditions of excessive temperatures or
  exposures to certain chemical environments can have an adverse effect on shelf
  life
- Avoid cross contamination from an old filter to a new one. Make sure your hands are clean when handling the new filter and avoid touching/handling the outlet side of the filter.

### Air Filter/Air Cleaner Pictogram

The Donaldson pictogram for air filters and housings is a combination of three industry shapes. You'll also see the pictogram on Donaldson branded product boxes.

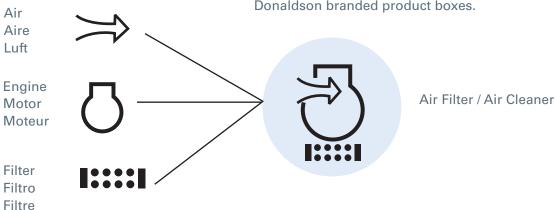

# Shoptalk Simple Facts about Air Filtration



### Take a Look at Air Filtration Efficiency and Dust Holding Capacity

Compare for yourself — see how much dust can pass through your air filter during 100 hours of operation.

Donaldson Blue™ Air Filters Ultra-Web® Filter Media **Donaldson Air Filters** Standard Filter Media Will-fit Air Filters Standard Filter Media



### You Can See the Difference!

These dust vials show the actual amount of Arizona fine test dust that passes through the air filter media for every one kilogram of dust fed to the air filter, which is equivalent to 100 hours\* of equipment operation.

Will-fit filters can allow up to 100 times more dirt to pass through the filter into the engine than Donaldson Blue air filters with Ultra-Web filter media.

\* Estimate based upon typical medium dust operating conditions with 92% pre-cleaner efficiency. Actual results may vary.

# Donaldson Ultra-Web® nanofiber filtration technology delivers cost saving benefits:

- · Superior filtration
- Long filter life with submicron contaminant
- · Highest efficiency
- Ideal for extended maintenance intervals
- · Longer engine life

### Don't leave engine protection to chance!

Use Donaldson Blue air filters with the blue Ultra-Web nanofiber media for maximum filtration efficiency and superior dust holding capacity.

# All Nanofibers are Not Created Equal

Since Donaldson introduced Ultra-Web® to industrial applications nearly 30 years ago and to the diesel engine market almost 20 years ago, the technology has been continually advanced and perfected to deliver longer filter life and higher efficiency while protecting the environment.

### **ULTRA-WEB**

### High Efficiency Nanofiber Filters Built to Last

Ultra-Web nanofiber filtration technology strikes just the right balance between the strength of the fiber density of the web and the level of filtration. Ultra-Web nanofibers produce a very fine,




continuous fiber that form a permanent web-like net that traps dust on the surface of the filter media.

### **Longer Filter Life**

Ultra-Web technology is proven and perfected to last up to two times longer than

Axial filters. What's the secret? Ultra-Web technology keeps particulate on the surface of the media. Filtration scientists attribute surface loading of dust with lower operating pressure drop over a much longer period of time. This means less energy is required to pulse off the dust and allows the filter to perform longer. Conversely with other types of filters, pressure drop starts higher and continues to rise quickly, which shortens the life of the filter and uses more energy.

### **Ultra-Web Nanofiber Technology**

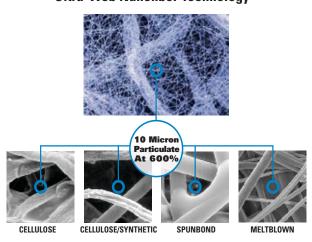

Ref: Shoptalk Card F115240

Ref: Shoptalk Card F115279



### Don't Throw Away a Good Filter Just Because it Looks "Dirty"



Although this air filter may look "dirty" — it can go plenty more miles. Installation of a restriction indicator can save you money and time.

### Why Service By Restriction?

Proper air cleaner servicing will result in maximum engine protection against the ravages of dust. Proper servicing can also save you time and money by increasing filter life and dust cleaning efficiency.

By using proper filter restriction measurement tools you will use the full life of the filter at maximum efficiency. DON'T BE FOOLED by filter appearance: it should look dirty.



The only way to determine when a filter is plugged or plugging is to measure the restriction on the system with the engine working at max airflow.

# Two of the most common air cleaner servicing problems are:

- 1. Over-servicing: the least efficient time in the life of the filter is when it is new. Filter elements increase in efficiency as dust builds up on the media.
- Improper servicing: your engine is highly vulnerable to abrasive dust contaminants during the servicing process when the filter is removed from the housing. A leading cause of engine damage is due to careless servicing procedures.

# Choose Restriction Measurement Tools that Best Fit Your Applications

Donaldson offers a variety of restriction measuring devices that help you get maximum filter utilization. All measure restriction in inches of water vacuum. All are resistant to vibration, breakage, weather, corrosion, dust, and dirt to assure reliable filter restriction readings.



**Continuous Reading** devices show how much life is left in the filter are:

- The Informer<sup>™</sup>
- Service Gauge for Instrument Panel

**Go/No-Go** restriction readings on heavy-duty vehicles are:

- ServiSignal<sup>™</sup>
- Visual Restriction Indicator
- Electrical Indicator
- SafetySignal<sup>™</sup> for safety filters

**In-Field** restriction readings or for more accurate readings use the In-Field Service Gauge Kit #X003903




Ref: Shoptalk Card F115236 & Air Cleaner Catalog F110027



# Will Using Aftermarket Filters or Mufflers Void My Warranty?

Answer: Good News! No need to worry about voiding your warranty — you can use aftermarket products! You still need to follow your manufacturer's recommended maintenance practices, but your warranty is protected under the Magnuson-Moss Warranty Act. Information on the Magnuson-Moss Warranty Act is available at http://www.ftc.gov/bcp/edu/pubs/business/adv/bus01.shtm#Magnuson-Moss.

In addition, Donaldson warrants its aftermarket products against failure due to defects in materials and workmanship for the period specified under the Terms and Conditions for the particular product. More information is available at www.donaldson.com/en/engine/support/datalibrary/000194.pdf.

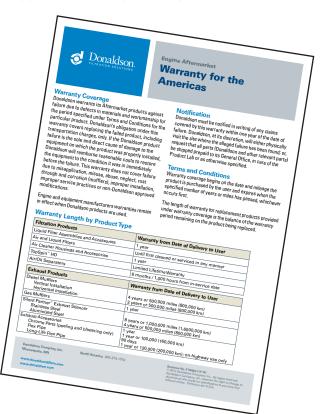

Ref: Shoptalk Card F115222

# Worried About Water in Your Air Intake System?





Sometimes you can't help operating equipment in extreme moisture environments, but it's good to know a few things to help keep your air intake system running at top efficiency.

### **Typical Symptoms of Water Ingestion:**

- High restriction indications
- Mud caked in the Vacuator<sup>™</sup> Valve
- · Wet, wavy air filter media
- System rust, corrosion and/or water damage
- · Moisture-related environmental problems such as icing

## Simple Tips to Keep Water Out of Your System:

- · Check and clear the VacValve daily
- Make sure the air cleaner cover and filter are installed properly
- · Inspect air intake system for any leaks




Caution: A water-soaked air filter will occasionally lock-up a restriction indicator!

A restriction indicator's "lock-up" restriction level is generally marked on the indicator itself. To check an indicator, remove it, wipe the base clean, then apply a small amount of vacuum. If the indicator locks up, it is okay. If not, replace the indicator.



### Keep Those ECG Konepac<sup>™</sup> Air Cleaner Latches Inspected

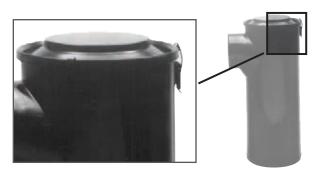

ECG style air cleaners have three cover latches that need to perform correctly to ensure the element gasket is sealing properly. These latches should be checked for tightness and wear. To check for tightness, close all three latches, then open and close them one at a time. There should be good tension and should snap tightly when closed. If any latches seem loose or rattle, they should be replaced.



The spring clip and pin repair kit is X009291 and fits all ECG style air cleaners.



The most obvious place to check for wear is the spring latch tip (the part that hooks into the notch on the filter cover). The tip may become sharp and cut into the filter cover with extended wear. The tip may also wear to the point where it will not hook onto the filter cover at all. If any of these conditions are evident, the latch should be replaced.

### No Matter What Dust Condition, Pre-cleaners Extend Air Filter Life



Six pre-cleaner styles offer the broadest product range in the industry

Pre-cleaners remove contaminant of varying sizes from entering the intake duct; they don't require any engine power to operate. Some devices collect the contaminant (Full-View), others just eject or drop the contaminant (TopSpin, Top Spin HD / in-line separator), or are connected via a scavenge system and route debris out the exhaust system (Donaspin / Strata Cap).

- Strata Cap and Donaspin are units for scavenge air system option for heavy dust condition operating environments. Additional components required for scavenge system (hoses, check valves, clamps and exhaust ejector)
- Pre-cleaners extend life of vehicle air filters and serve as rain caps
- Units are made of durable materials either metal or impact resistant plastic
- Units install outside of engine compartment leaving more space under hood for other components (exceptionin-line separator)
- Pre-cleaners have no wires or power requirements
- Requires additional components for scavenge system (hoses, check valves, clamps and exhaust ejector)

### **Quick Comparison**

More characteristics about our pre-cleaner line. For more details, contact your local distributor or dealer.

Dust Condition	Max. Sept Efficiency	r Pre-Cleaner Family	Scavenge Required		
Heavy	96%	Strata™ Cap	Yes	Yes	Plastic
	90%	Donaspin™	Yes	No	Steel
Medium	85%	TopSpin™	No	No	Plastic
	80%	TopSpin™ HD	No	No	Aluminum/
					Stainless Steel
	70%	In-Line Separator	No	No	Steel
	75%	Full-View	No	Yes	Steel/Plastic

Ref: Shoptalk Card F115246

# Donaldson, FILTRATION SOLUTIONS

# Did You Know that Your Truck, Tractor and Airplane Can All Use Donaldson Filters?



If you own or operate a Beechcraft, Piper, Cessna or Mooney airplane, or a Bell, Aerospatiale (Eurocopter) or MD Hughes rotorcraft, chances are it was delivered with Donaldson filters onboard. Airframe and engine manufacturers trust Donaldson quality. We've been providing superior pleated media engine air intake, fuel, lube and hydraulic filters for piston-powered aircraft for more than 40 years. When it comes time for your next maintenance check, don't compromise the integrity of your airplane! Ask your mechanic to install Donaldson OEM filters for maximum performance and filter life.



Donaldson General Aviation Engine Air Intake Filters

Ref: Shoptalk Card F115232

# Contact Information for Filtration Systems for the Aerospace & Defense Industry

North America 1-866-323-0394 Europe Aerospace +00 800-63-29-2750 Europe Defense +00 800-28-00-2900

For additional locations and contact information, visit: www.donaldsonaerospace-defense.com

# Donaldson Keeps Military Vehicles Moving



The Bradley M2/A3 Fighting Vehicle relies on a Donaldson air cleaner and muffler.

### Did you know . . .

Donaldson designs and manufactures filtration and exhaust products for a large variety of defense applications and equipment? For example . . .



The LCAC Hovercraft uses Donaldson Strata™ panel filters to supply clean air to its engine.



Donaldson Defense Group introduced the Strata™ tube pre-cleaner on the Sikorksy CH-53 Helicopter.

We've designed filters to perform in extreme environments. Our filters are used worldwide in the roughest military applications, effectively filtering air and exhaust, as well as transmission fluid, hydraulic systems, lube oil, coolant, and fuel.

Ref: Shoptalk Card F115223

### PowerCore® Air Cleaners Two-Stage



# Our Original PowerCore Brand is Changing!









### **Section Index**

PSD	30
Scavenge System Components	38
PowerCore Air Cleaners	
for Cummins® Engines	43
Ford 7.3L Retrofit Kit	44


# Our PowerCore® air cleaners deliver . . .

- System design flexibility
- Metal-free, lightweight materials
- Rugged construction
- Straight-through airflow technology invented by Donaldson
- Advanced sealing technology
- 3x more efficient than the average Axial pleated filter
- RadialSeal<sup>™</sup> advanced sealing technology
- Inertial particle separation technology

This new air cleaner family offers two-stage filtration in a single, compact unit that delivers superior filtration performance using our PowerCore Filtration Technology.

For greater filtration, our PSD air cleaners are adaptable to a scavenged air system.

# PowerCore® Straight-Through Airflow Schematic

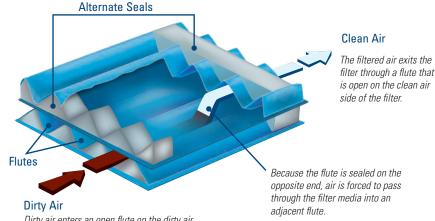


Dirty air enters an open flute on the dirty air side of the filter.

### **Dust Holding Capacity**

# PowerCore Conventional 2.0 2.0 Cain over 100% more dust-holding capacity in a given volume. 1.0 1.0

### **Overall Efficiency**

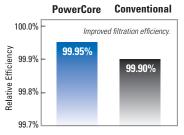


Cummins is a registered trademark of Cummins Filtration, Inc.





### Millions of PowerCore® Filters Installed on Original Equipment

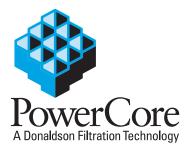

This air cleaner family offers two-stage filtration in a single, compact unit that delivers superior filtration performance using our PowerCore® Filtration Technology.

This non-metal air cleaner (except for cover clamps) is ideal for equipment operating in medium to heavy dust environments.

### **Applications**


- Off-road equipment operating in medium to heavy dust conditions with engine airflow ranges up to 1490 cfm
- Scavenged system components

   exhaust ejectors and check
   valves now available. See page

   38 for more details.
- Obround housing shape allows for a narrow or wide mounting orientation.
- Models have either end or side filter service access
- Sustained temperature tolerance: -40 °F to 180 °F / -40 °C to 82 °C


### Service Access on Inlet End — PSD08

Exploded view of D080020

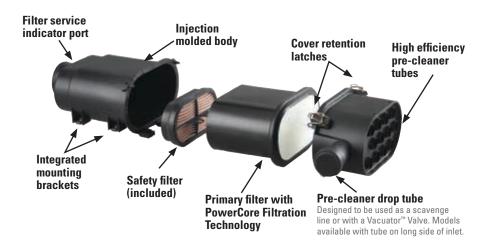

### Service Access on Side — PSD08, PSD09, PSD10, PSD12 and PSD14

Exploded view of D090073

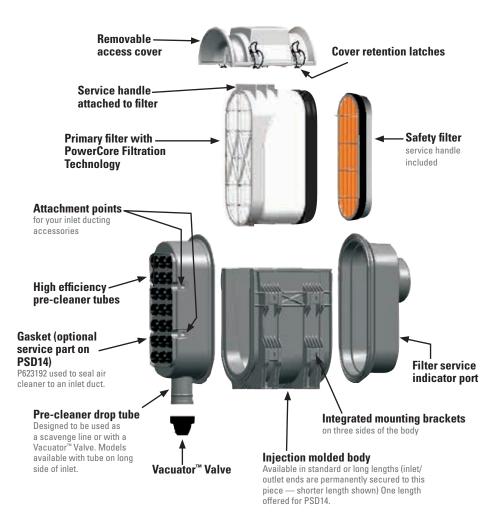





### **Excellent Performance in Half the Space**

### **Features**

- More compact at a given performance level than standard pleated filters
- Non-metal filters
- Improved engine protection: no media movement, expansion, contraction or bunching
- Improved contaminant encapsulation: dust and dirt stay contained in filter during service
- High efficiency integrated pre-cleaner improves filter life
- Improved handling and maintenance: lighter and smaller, changing filters is a snap
- Easily serviced; no tools required to remove or replace cover
- Can be used with scavenge line or Vacuator<sup>™</sup> Valve
- Built in mounting brackets eliminate the need to purchase separate mounting bands



The filter on the side-service access models can be easily removed with the built-in grab handle.



A PSD10 mounted horizontally was the equipment manufacturer's choice on this diesel-powered (285 HP @ 2,000 RPM) feller buncher.





D080056 — Vertical

### **Mounting Flexibility**

With mounting locations on three sides of the housing (exception D080020 & D080026) and two separate drop tube orientations, the PSD series offers the greatest amount of flexibility for a wide variety of installations.

U-clips are shipped with each air cleaner. Affix these to the mounting location (all in the same direction) and slide the housing into place. See dimensional illustration for u-clip mounting hole pattern on pages 35, 36 and 37.



The air cleaner is not to be mounted using U-clips on both sides adjacent to the access cover. Fixation Points use M8 fasteners. Maximum torque is 18 N•m.

The PSD14 air cleaner MUST be mounted with nine U-clips — four on the side opposite the access cover and all five U-Clips on ONE of the two sides.









### PowerCore® PSD Air Cleaners





### When Selecting an Air Cleaner . . .

Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table below. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.

### Initial Airflow Restriction (non-scavenged)

CF	:M @ "H₂		Air Cleaner
6"	8"	10"	Model
MODE	LS WITH	SERVICE A	CCESS ON END
176	206	232	D080020
176	206	232	D080026
MODE	LS WITH	SERVICE A	CCESS ON SIDE
180	216	245	D080056
267	315	357	D090055
284	329	370	D090101
284	329	370	D090121
293	345	391	D090073
293	345	391	D090120
500	580	652	D100029
500	580	652	D100030
500	580	652	D100072
532	622	700	D100031
532	622	700	D100032
532	622	700	D100068
700	810	915	D120035
700	810	915	D120036
700	810	915	D120037
700	810	915	D120038
1133	1323	1490	D140078
1133	1323	1490	D140079

### **PSD Air Cleaners and Scavenge Air Systems**

PSD air cleaners are designed to operate with or without aspiration, otherwise known as scavenging. PSD performance charts are provided for both non-scavenged and scavenged.


The advantages to scavenging are:


- Higher pre-cleaner efficiency (resulting in longer filter service life)
- Completely self-servicing (no regular maintenance needed on pre-cleaner)

Aspirating an intake system through the use of a scavenging device adds more components (an ejector and some plumbing) to the overall system, but will enhance the separator efficiency of the pre-cleaner and consequently extend the filter service life.

The PSD air cleaner and pre-cleaner will function adequately without scavenge — the result is less filter service life than with scavenging. However, it is recommended to use a scavenge system for horizontally mounted PSD12 and PSD14 applications.

### **PSD Air Cleaner Performance Curves**

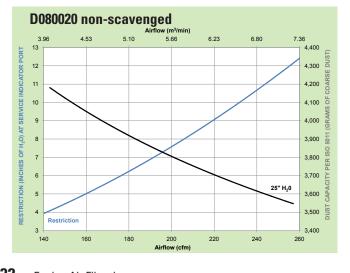


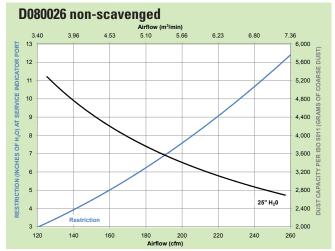






## rs


#### continued — PSD Air Cleaner Performance Curves

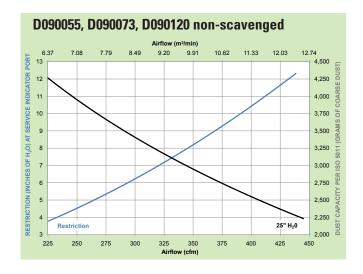


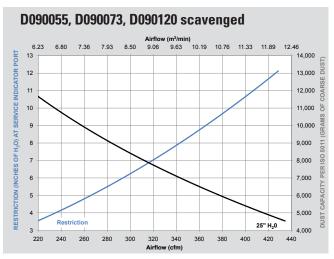

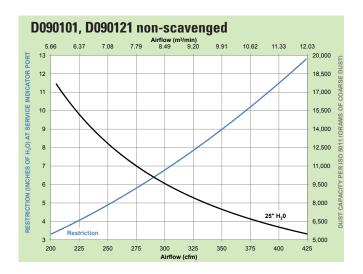

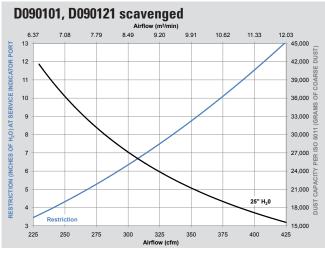

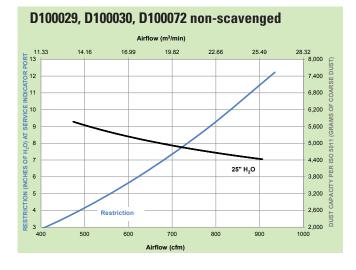

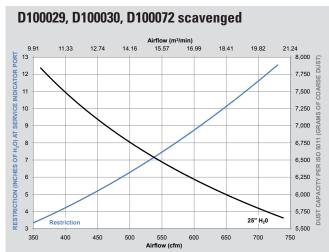



www.buydonaldson.com Engine Air Filtration • 33








#### continued — PSD Air Cleaner Performance Curves

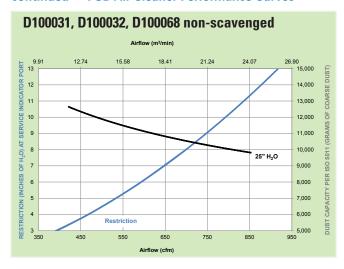


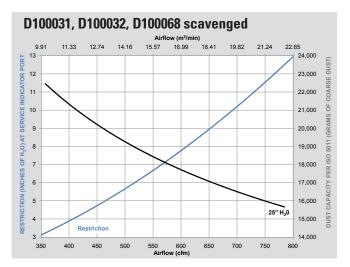

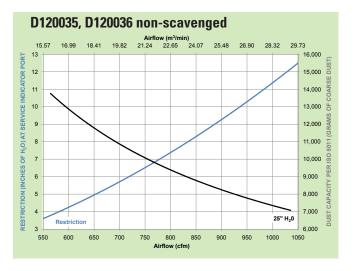

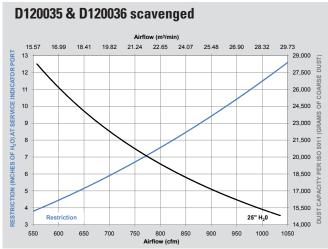


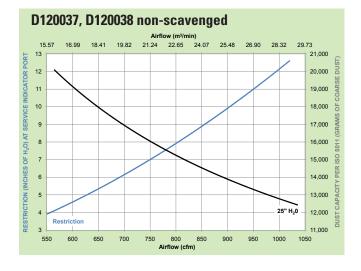


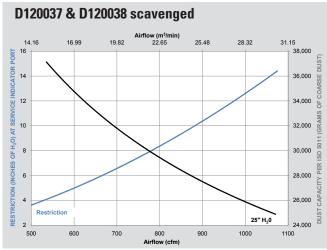




#### continued — PSD Air Cleaner Performance Curves

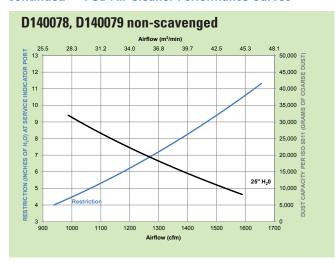

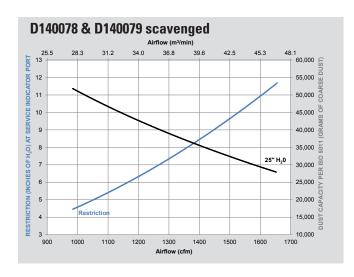

### **PSD Specification Illustrations**

PSD08 Models — Service Access on End (Vertical Model Shown)

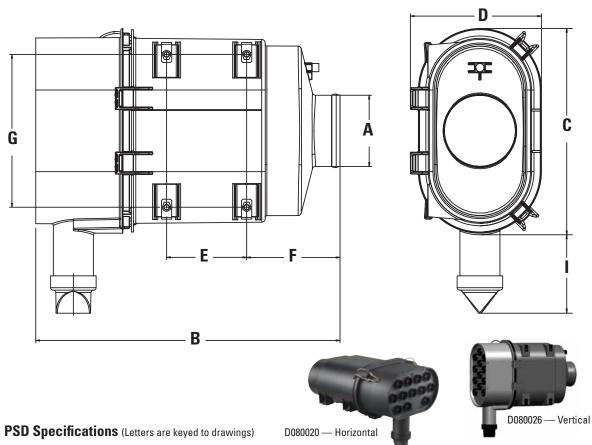


Orientation: H=Horizontal; V=Vertical

Part No. /	A	١	В		C	;	D		E		F		0	ì	I		We	ight
Orientation	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	kg	lbs
MODELS WITH	H SER	VICE A	CCESS	ON END	)													
D080020 H	89	3.50	380	14.97	256	10.07	154	6.05	100	3.94	117	4.59	191	7.50	98	3.87	2.2	4.8
D080026 V	89	3.50	380	14.97	256	10.07	154	6.05	100	3.94	117	4.59	191	7.50	98	3.87	2.2	4.8





PSD08, PSD09, PSD10, PSD12 — Service Access on Side (Vertical Model Shown)

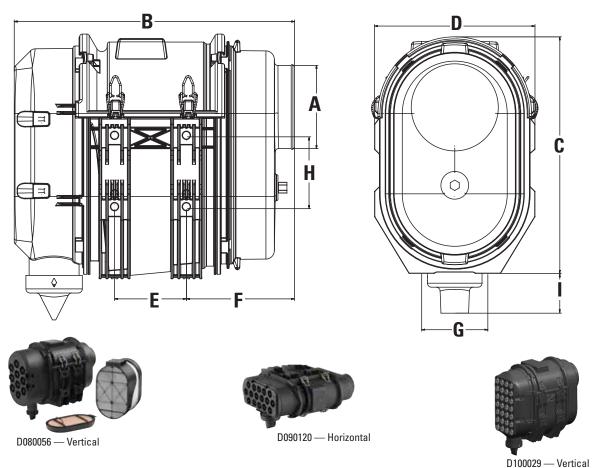

#### PSD Specifications (Letters are keyed to drawings)

Orientation: H=Horizontal; V=Vertical

Orientation         mm         in         mm         in	
MODELS WITH SERVICE ACCESS ON SIDE         D080056       V       89       3.50       370       14.55       247       9.70       180       7.09       69       2.72       142       5.60       118       4.65       75       2.95       51.9       2.04       2.2         D090073       V       102       4.00       433       17.05       362       14.25       180       7.09       110       4.33       174       6.85       100       3.94       130       5.12       72       2.85       3.7	4.9
D080056       V       89       3.50       370       14.55       247       9.70       180       7.09       69       2.72       142       5.60       118       4.65       75       2.95       51.9       2.04       2.2         D090073       V       102       4.00       433       17.05       362       14.25       180       7.09       110       4.33       174       6.85       100       3.94       130       5.12       72       2.85       3.7	
D090073 V 102 4.00 433 17.05 362 14.25 180 7.09 110 4.33 174 6.85 100 3.94 130 5.12 72 2.85 3.75	
	8 1
D000101 V 102 4 00 E22 20 00 262 14 20 100 7 00 100 7 00 102 7 21 100 2 04 120 E12 70 2 7E 4	0.1
D090101 V 102 4.00 533 20.98 363 14.29 180 7.09 180 7.09 183 7.21 100 3.94 130 5.12 70 2.75 4.3	9.5
D090120 H 102 4.00 433 17.05 360 14.17 180 7.09 110 4.33 174 6.85 110 4.32 130 5.12 60 2.36 3.7	8.1
D090121 H 102 4.00 533 20.98 363 14.29 180 7.09 180 7.09 183 7.21 110 4.32 130 5.12 60 2.36 4.3	9.5
D090055**H 102 4.00 432 17.00 363 14.31 180 7.09 110 4.33 173 6.83 100 3.94 130 5.12 68 2.68 5.0	11.0
D100029 V 127 5.00 429 16.90 374 14.74 254 10.01 110 4.33 165 6.50 110 4.33 110 4.33 63 2.48 5.3	11.7
D100030* H 127 5.00 429 16.90 374 14.74 254 10.01 110 4.33 165 6.50 110 4.33 110 4.33 70 2.76 5.3	11.7
D100031 V 152 6.00 529 20.84 384 15.12 254 10.01 210 8.27 165 6.50 110 4.33 110 4.33 54 2.12 6.10	13.4
D100032* H 152 6.00 529 20.84 384 15.12 254 10.01 210 8.27 165 6.50 110 4.33 110 4.33 70 2.76 6.70	13.4
D100068 H 152 6.00 529 20.84 384 15.12 254 10.01 210 8.27 165 6.50 110 4.33 110 4.33 70 2.76 6.70	13.4
D100072 H 127 5.00 429 16.90 374 14.74 254 10.01 110 4.33 165 6.50 110 4.33 110 4.33 70 2.76 5.3	11.7
D120035 V 152 6.00 496 19.53 430 16.93 306 12.04 168 6.62 160 6.30 154 6.08 110 4.33 68 2.68 7.0	15.5
D120036 H 152 6.00 496 19.53 430 16.93 306 12.04 168 6.62 160 6.30 154 6.08 110 4.33 68 2.68 7.0	15.5
D120037 V 152 6.00 596 23.46 441 17.36 306 12.04 268 10.56 160 6.30 154 6.08 110 4.33 68 2.68 7.50	17.4
D120038 H 152 6.00 596 23.46 441 17.36 306 12.04 268 10.56 160 6.30 154 6.08 110 4.33 68 2.68 7.50	17.4


 $<sup>^{\</sup>star}$  Access cover and outlet tube rotated 180° compared to view shown in the D100072 photo above.

<sup>\*\*</sup> Access cover rotated 180° compared to view shown in the D100120 photo above.







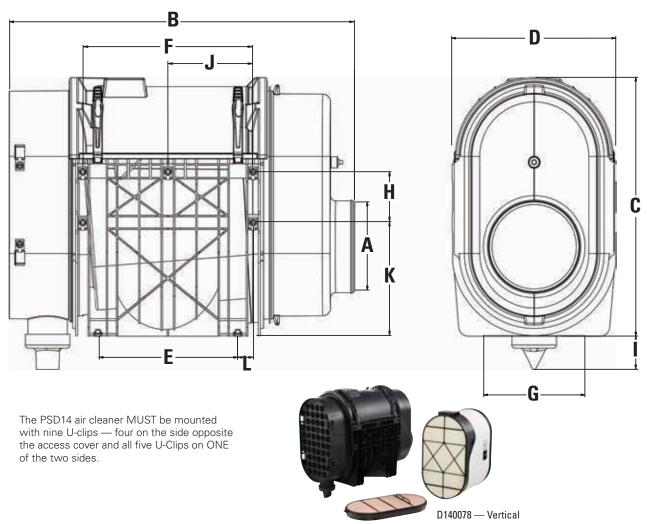

#### PSD14 Specifications (Letters are keyed to drawings)

Orientation: H=Horizontal; V=Vertical

Part No. / Orientation	A mm/in	B mm/in	C mm/in	D mm/in	E mm/in	F mm/in	G mm/in	H mm/in	l mm/in	J mm/in	K mm/in	L mm/in	Weight kg/lbs
MODELS WITH SERVICE ACCESS ON SIDE													
D140078 V	178/7.00	670/26.37	501/19.71	318/12.52	272/10.68	330/13.0	230/9.00	98/4.59	65/2.53	165/6.5	222/8.75	29/1.2	11.4/25.0
D140079 H	178/7.00	670/26.37	501/19.71	318/12.52	272/10.68	330/13.0	230/9.00	98/4.59	66/2.60	165/6.5	222/8.75	29/1.2	11.4/25.0






#### **Scavenge System Components**

Scavenging is accomplished by introducing a secondary airflow to the drop tube on the air cleaner — generally through the use of an ejector or ejector muffler (see illustration on right). This flow pulls the separated contaminant from the pre-cleaner and inserts it into the exhaust stream.

Exhaust ejectors (below), adapters, and check valves (next page) complement the PSD air cleaner product offering.

#### Illustration of Scavenge Connection with PSD10 Horizontal Model

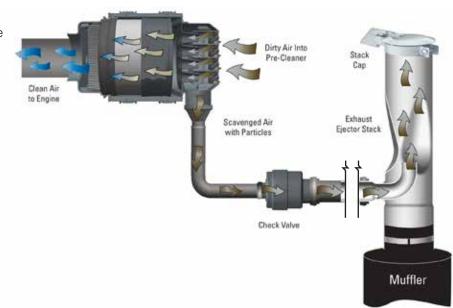

#### **Exhaust Ejectors**

All exhaust ejectors are constructed of heavy-gauge, aluminized steel and painted with high-temperature black paint. Select the appropriate ejector by the intake airflow or exhaust flow (CFM) of your engine. These same parts and more information on ejectors can be found in the accessories section of this product guide.

Eng Intake Low		Exhau @ 90 Low	st CFM 10 °F High		ndard I Dia.* mm	jectors Part Number		t Dia.*	.D. Ejectors Part Number	Len inches	•	Scave Tube inches	•
220	365	554	919	3.02	77.0	H002612	3.16	80.3	H002762	12.00	304.8	1.25	32
315	450	793	1133	4.02	102.0	H002613	4.17	105.9	H002763	18.00	457.2	1.25	32
425	600	1070	1511	4.02	102.0	H002614	4.17	105.9	H002764	18.00	457.2	1.50	38
500	740	1259	1864	5.03	127.8	H002615	5.17	131.0	H002765	22.00	558.8	1.50	38
660	950	1662	2393	5.03	127.8	H002616	5.17	131.0	H002766	22.00	558.8	1.75	44
800	1150	2015	2896	6.04	153.4	H002617	6.19	157.0	H002767	24.00	609.6	2.00	51
950	1350	2393	3400	6.04	153.4	H002618	6.19	157.0	H002768	24.00	609.6	2.00	51
1100	1500	2770	3778	6.04	153.4	H002619	6.19	157.0	H002769	24.00	609.6	2.00	51





#### Scavenge Adapters






90° Adapter Straight Adapter

Part Number	Adapter Type	Outlet D inches	)ia. nm	Diameter inches mm	Hei inches	
P783746	3" TO 1.50" STRAIGHT	1.50	38	3.00 78	2.68	68
P783747	3" TO 1.25" STRAIGHT	1.25	32	3.00 78	2.68	68
P783748	3" TO 2.00" STRAIGHT	2.00	50	3.00 78	2.68	68
P784019	3" TO 1.25" 90 DEGREE	1.25	32	3.00 78	2.68	68
P617276	3" TO 2.00" 90 DEGREE	2.00	50	3.00 78	2.20	56

#### **Check Valve Operation and Orientation**

- Prevents back flow of exhaust gas into pre-cleaner
- For proper installation, it is important that the index is installed upward and horizontal with no more than a 20° variation. See below.
- Install inline check valve as close as possible to the air cleaner
- Temperature resistance of 200 °C / 400 °F

Part Number	Inlet Dia.			Body Dia. inches mm
P786337	1.25 32	1.25 32	4.45 113	2.80 71
P786340	1.50 38	1.50 38	4.45 113	2.80 71
P786343	2.00 50	2.00 50	4.45 113	2.80 71

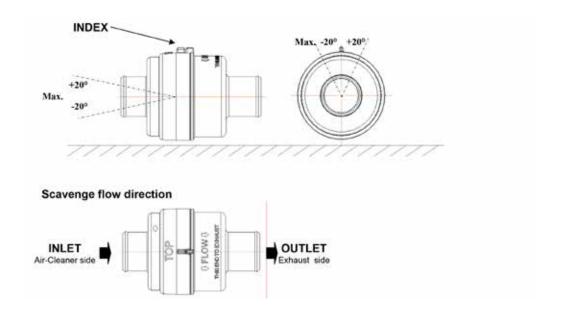

www.buydonaldson.com Engine Air Filtration • 39



This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer. Note: Your air cleaner service cover may be in a different position than shown.

#### **Check the Restriction**

Replace the filter only when the restriction level has reached the maximum recommended by the engine or equipment manufacturer or on a regular scheduled service.



#### **Check Vacuator™ Valve & Pre-Cleaner Tubes** Shut off the engine. Inspect the Vacuator™ Valve (or scavenge line) for damage. If damaged, replace. If plugged or full of contaminant,

check the pre-cleaner tubes, which should be free of contaminant. If plugged or excess contaminant is visible, the pre-cleaner tubes will need to be cleaned.

To clean the pre-cleaner tubes, remove the housing service cover and Vacuator Valve and leave the filter installed (to avoid dust from entering the air induction outlet). Use a low-volume of compressed air to gently blow out the separator tubes. The compressed air can be pushed through both sides of the tubes AND from the drop tube where the Vacuator Valve attaches.

If compressed air is not available or the use of compressed air was not effective due to dried contaminant within the housing. remove the air cleaner from the machine, cover the air intake pipe to prevent contaminant. Remove the primary and secondary filters and Vacuator Valve. Use a low pressure water (e.g., garden hose) to clean the tubes and inside of housing. Direct the flow of water through the separator tubes from both ends and repeat as needed to clean out the housing. Spray out the Vacuator Valve port, alternating between it and the separator tubes. Make sure that all internal housing surfaces are dry prior to reinstalling the filters, Vacuator Valve, and unit on the machine.









NEVER use a pressure sprayer to clean out the air cleaner housing while it is installed on the machine. Avoid using excessive pressure when spraying out the separator tubes as damage can occur.

## Remove the Primary Filter

For end service pull the filter out of the housing.

For side service push down on the service handle to tilt the filter to a 5° angle. This will loosen the seal. Then, pull up on the service handle to remove the filter from the housing.



## Visually Inspect the Safety Filter

Remove any excess dirt and wipe out the housing with a damp cloth before servicing the safety filter. Visually inspect the safety filter but do not remove it unless it is damaged or due for changeout. Verify that the safety filter is properly seated in the housing. The safety filter should be replaced every three primary filter changes.



The safety filter should be replaced every three primary filter changes.

### Remove Safety Filter if Indicated or if Excessively Contaminated

To remove the safety filter, use the plastic handle on the face of the safety filter. Pull the filter toward the center of the housing and remove it. Ensure that the outlet tube sealing area is clean and undamaged. If the safety filter is removed and the new filter is not to be installed immediately, be sure to cover the seal tube with a cloth so that dirt is not admitted. After removing the safety filter, wipe the air cleaner housing interior and seal surfaces with a clean, damp cloth.





6

#### **Inspect the New Filters**

Visually check for cuts, tears or indentations on the sealing surfaces and the media pack before installation. If any damage is visible, do not install.



#### Replace the Safety Filter

If replacing the safety filter, use the plastic handle. Slide the filter at an angle into the outlet side and push it in place until the filter seats firmly and evenly within the housing.

On side-service access models, insert the safety filter tab into the positioning slot before pushing the filter into place.



#### **Insert the Primary Filter**

For end service access models, slide the primary filter into the housing until the gasket seats against the housing. For side service access models, slide the filter down at approximately a 5° angle until it makes contact with the end of the housing. Rotate the filter toward the outlet section to complete the seal.



### **Replace the Service Cover**

For end service access models with hinge tabs, insert the hinge tabs into the housing, tilt the service cover into place and secure latches. For end service models without hinge tabs, put the service cover into place and secure the latches. For side-service access models, place the service cover in position and fasten the metal or rubber (PSD14) latches. If the cover doesn't seat, remove and re-check the filter position and access cover orientation.





## **Inspect the Entire Air Cleaner**

Make sure that inlet and outlet connections are in good condition. Torque to and do not exceed 40 in lb. Replace rubber connectors if necessary and reset the service indicator.







## Service Parts & Accessories

D080020, D080026	PSD
Cover (D080020)	P6029853
Cover (D080026)	P6017353
Elbow, 45°	P109331
Elbow, 90°	P114318
Filter, primary	P6085333
Filter, safety	P6009753
Hump hose	P114319
Informer™ indicator 25" H <sub>2</sub> O	X002277
Latch	P7760333
Outlet band clamp	P148342
Vacuator™ Valve	P1589143

D080056	PSD
Cover	P6155303
Elbow, 45°	P109331
Elbow, 90°	P114318
Filter, primary	P6176313
Filter, safety	P6154933
Hump hose	P114319
Informer™ indicator 25" H <sub>2</sub> O	X002277
Latch	P7760333
Outlet band clamp	P148342
U-clip (4 clips)	
Vacuator™ Valve	P6176323

D090055, D090073	PSD
Cover	. P7856513
Elbow, 45°	. P105545
Elbow, 90°	. P105533
Elbow, 90° reducing	. P121482
Filter, primary	. P6086653
Filter, safety	. P6061213
Hump hose	. P105609
Informer™ indicator 25" H <sub>2</sub> O	. X002277
Latch	. P7773663
Outlet band clamp	. P148343
U-clip (4 clips)	
Vacuator™ Valve	. P1128033

D090101	PSD
Cover	. P7869893
Elbow, 45°	. P105545
Elbow, 90°	. P105533
Elbow, 90° reducing	. P121482
Filter, primary	
Filter, safety	. P6061213
Hump hose	. P105609
Informer™ indicator 25" H <sub>2</sub> O	. X002277
Latch	. P7773663
Outlet band clamp	. P148343
U-clip (4 clips)	. P7845173
Vacuator™ Valve	. P1128033

D090120	PSD
Cover	P7856513
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	P121482
Filter, primary	P6086653
Filter, safety	
Hump hose	P105609
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Latch	P7773663
Outlet band clamp	
U-clip (4 clips)	P7845173
Vacuator™ Valve	P1128033

D090121	<b>PSD</b>
Cover	P7869893
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	P121482
Filter, primary	P6086753
Filter, safety	P6061213
Hump hose	P105609
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Latch	P7773663
Outlet band clamp	P148343
U-clip (4 clips)	P7845173
Vacuator™ Valve	P1128033

D100029, D100030,	
D100072	<b>PSD</b>
Cover	P619481 P109021 P107844 P143895 P6086663 P6015603 P105610 X002277 P7773663
U-clip (4 clips) Vacuator™ Valve	

D100031,	
D100032, D100068	PSD
Cover	
Cover, with watertight seal	
Elbow, 45°	P105547
Elbow, 90°	P105535
Filter, primary	P6086763
Filter, safety	
Hump hose	P105612
Informer™ indicator 25" H <sub>2</sub> O	
Latch	
Outlet band clamp	P148347
U-clip (4 clips)	P7845173
Vacuator™ Valve	P1128033

D120035, D120036	PSD
Cover	P6081713
Elbow, 45°	P105547
Elbow, 90°	P105535
Filter, primary	P6086673
Filter, safety	P6075573
Hump hose	P105612
Informer™ indicator 25" H <sub>2</sub> O	X002277
Latch	P7773663
Outlet band clamp	P148347
U-clip (4 clips)	P7845173
Vacuator™ Valve	P1128033

D120037, D120038	PSD
Cover	
Elbow, 45°	
Elbow, 90°	
Filter, primary	
Filter, safety	
Hump hoseInformer™ indicator 25" H <sub>2</sub> O	
Latch	P7773663
Outlet band clamp	P148347
U-clip (4 clips)	
Vacuator™ Valve	P1128033

D140078, D140079	PSD
Cover, with watertight seal	P6230263
Elbow, 45°	P105548
Elbow, 90°	P105536
Elbow, 90° reducing	P215307
Filter, primary	P6219833
Filter, safety	P6219843
Hump hose	P105613
Informer™ indicator 25" H <sub>2</sub> O	X002277
Latch	P6229453
Outlet band clamp	P148348
U-clip (9 clips)	P6227453
Vacuator™ Valve	P1128033
Gasket	P623192

#### NOTES:

3 = Shipped with air cleaner initially



## PowerCore® PSD Air Cleaners Recommendations for Cummins® Engines

 $\bigcirc$ 

Cummins® is a registered trademark of Cummins, Inc.

## Air Filtration for Tier IV Engines





**Quality** you expect

Performance you need

Support you won't find anywhere else

Donaldson Delivers

PSD AIR CLEANERS FOR CUMMINS ENGINE APPLICATIONS											
Engine Model	Horsepower Range		Engin (L)	e Size (CID)	Speed (RPM)	Est. Nom. Airflow CFM	Donaldson Air Cleaner				
Agriculture, Construction/Industrial Equipment											
B3.3	74	85	3.3	201	2600	242	PSD08				
B3.3	60	65	3.3	201	2600	136	PSD08				

Agriculture, Construction/Industrial Equipment, Oil and Gas										
QSB3.3	75	110	3.3	201	2200	237	PSD08			
QSB4.5	110	160	4.5	275	2200	323	PSD09			
QSB6.7	140	300	6.7	409	2200	481	PSD10			
QSL9	240	400	9	549	2200	647	PSD10			
QSX11.9	300	500	11.9	726	2200	855	PSD12			
QSX15	400	600	15	915	2200	1078	PSD14			
ΩSX	375	665	15	915	2000	980	PSD14			
QSM	290	400	10.8	659	2000	705	PSD12			
QSL	250	365	8.9	543	2000	581	PSD10			
QSC	205	305	8.3	506	2100	569	PSD10			

Construction/maustrial Equipment, on and das, winning									
QSK19	506	700	19	1159	2000	1241	PSD14		
Heavy-duty Truck, RV, Emergency Vehicle									
ISX11.9	370	500	11.9	726	2100	816	PSD12		
ISX15	455	600	15	915	2100	1029	PSD14		

wiedium-duty	iruck, bu	s, cille	rgency	veille	IE			
ISB6.7	260	360	6.7	409	2600	569	PSD10	
ISC8.3	270	380	8.3	506	2200	596	PSD10	
ISL9	345	450	9	549	2200	647	PSD10	

un-nignway, Euro	pean,	Euro I						
ISMe	345	440	10.8	659	1900	670	PSD10	
ISLe	350		8.9	543	2100	610	PSD10	
ISBe — 6 Cylinder	275	285	6.7	409	2500	547	PSD10	

			***			•		
On-highway, Eur	opean,	Euro I	II					
ISMe	335	420	10.8	659	1900	670	PSD10	
ISLe	209	260	8.9	543	2100	610	PSD10	

ISMe	335	420	10.8	659	1900	670	PSD10	
ISLe	209	260	8.9	543	2100	610	PSD10	
ISBe - 4 Cylinder	138	185	4.5	275	2500	367	PSD09	
ISBe- 6 Cylinder	285	275	6.7	409	2500	547	PSD10	

on-ingrivay, European, Euro iv									
	ISMe	350	445	10.8	659	1900	670	PSD10	
	ISLe	280	400	8.9	543	2100	610	PSD10	
	ISBe - 4 Cylinder	140	207	4.5	275	2500	367	PSD09	
	ISBe - 6 Cylinder	205	300	6.7	409	2500	547	PSD10	

Un-nignway, Eur	opean,	Euro v						
ISMe	350	445	10.8	659	1900	670	PSD10	
ISLe	280	400	8.9	543	2100	610	PSD10	

www.buydonaldson.com Engine Air Filtration • 43

On-highway Furonean Furo IV





### **Severe Duty Air Induction System Retrofit Kit**

1999\* - 2003 Ford F250-550 or Excursion with 7.3L Power Stroke® Diesel Engine

#### **Application**

1999\* - 2003 Ford F250-550 or Excursion with 7.3L Power Stroke® Diesel Engine

#### **Features**

This retrofit air induction system kit is ideal for truck owners who operate their vehicle in dirty and dusty conditions and want longer filter service life and improved engine protection.

- Three times or more efficient compared to average Axial pleated or reusable wire mesh filters
- Straight-through airflow delivers powerful performance
- Improved engine protection no media movement, expansion, contraction or bunching
- Improved contaminant encapsulation — during service the dust and dirt stay contained in the filter
- Installs in 30 45 minutes



Kit X007953 includes the air cleaner assembly, filter, duct, battery tray and blanket, fasteners, and installation instructions.

#### **Order Information**

Item	Donaldson Part No.	Ford Part No.	Motorcraft Part No.
Air Induction Retrofit Kit	X007953	2U2Z-9K635-AA	FA-1759
Air Filter	P606122	2U2Z-9601-BA	FA-1757

#### Other Filters for this Ford Vehicle available from Donaldson


Item	Donaldson Part No.	Ford Part No.	Motorcraft Part No.
Fuel Spin-on	P553375	E8TZ-9N184-A	FD-3375, FD-829
Fuel Cartridge	P550437	F81Z-9N184-AA	FD-4596
Lube Spin-on	P550371 P550784	F4TZ-6731-A E3TZ-6731-A	FL-1995 FL-784, FL-784FP

Ford and Power Stroke are registered trademarks of Ford Motor Company.

Complete retrofit installation instructions are included with the X007953 kit (document no. P609001).

<sup>\*</sup> Built after January 1, 1999



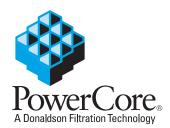


## Our PowerCore® air cleaners deliver . . .

- System design flexibility
- Metal-free, lightweight materials
- Rugged construction
- Straight-through airflow technology invented by Donaldson
- Advanced sealing technology
- 3x more efficient than the average Axial pleated filter
- RadialSeal<sup>™</sup> advanced sealing technology
- Inertial particle separation technology

The PCD air cleaner family offers single-stage filtration in a single, compact unit that delivers superior filtration performance using our PowerCore Filtration Technology.




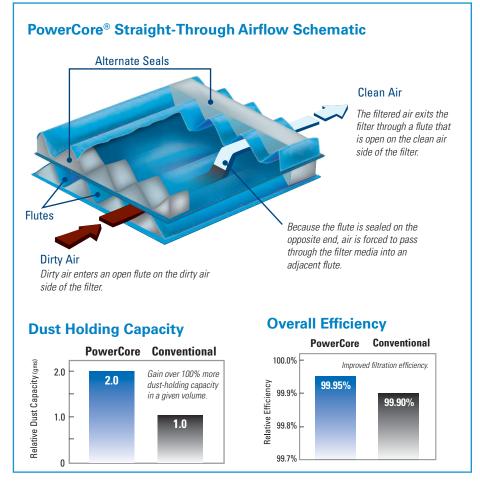





### Millions of PowerCore® Filters Installed on Original Equipment

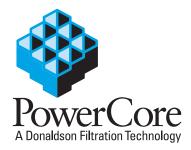

This air cleaner family offers single-stage filtration in a compact unit that delivers superior filtration performance using our PowerCore® Filtration Technology.

This non-metal air cleaner (except for cover clamps) is ideal for equipment operating in light dust environments.

#### **Applications**

- Light dust conditions with engine airflow ranges up to 974 cfm.
- Obround housing shape allows for a narrow or wide mounting orientation.
- Models have side filter service access
- Sustained temperature tolerance: -40 °F to 180 °F / -40 °C to 82 °C



#### **Features**

- More compact at a given performance level than standard pleated filters
- Non-metal filters
- Improved engine protection: no media movement, expansion, contraction or bunching
- Improved contaminant encapsulation: dust and dirt stay contained in filter during service
- Improved handling and maintenance: lighter and smaller, changing filters is a snap

- Easily serviced; no tools required to remove or replace cover
- Built in mounting brackets eliminate the need to purchase separate mounting bands
- Available with either inline inlet/ outlet or offset inlet/outlet. See images on next page.



Easy Service. The filter can be easily removed with the built-in grab handle.



### **Excellent Performance in Half the Space**



#### **Mounting Flexibility**


With mounting locations on three sides of the housing, the PCD series offers a great deal of flexibility for a wide variety of installations.



U-clips are shipped with each air cleaner. Affix these to the mounting location (all in the same direction) and slide the housing into place. See dimensional illustration for u-clip mounting hole pattern on page 5.


The PCD air cleaner needs to be mounted to equipment on at least one mounting location (base, or either of two sides). It can also be mounted at two points, using the base and one side. It should not be mounted using the two side mounting locations – as this will cause pressure/flexing, and could result in leaks. (See illustration, on right. Xs represent u-clips mounted on both sides adjacent to the access cover.) The u-clips accept M8 threaded fasteners. Maximum torque is 18 N•m.



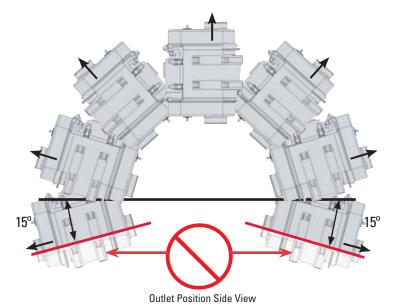



**CAUTION:** Outlet Tube Mounting Position
The outlet tube angled 15° below the horizontal axis could allow dust or foreign objects to fall into the air duct or engine during servicing.

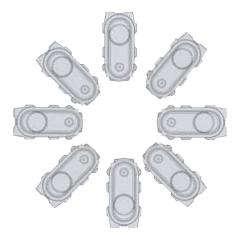

Outlet Position Front View
Any Orientation is Acceptable

# $\odot$

## PowerCore® PCD Air Cleaners





#### When Selecting an Air Cleaner . . .

Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table below. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.





PCD Offset Inlet/Outlet Options

#### **Initial Airflow Restriction**

6" C	FM @ "H 8"	₂0 10"	Air Cleaner Model
416	487	550	D090108
416	487	550	D090109
422	493	555	D090114
422	493	555	D090115
725	848	956	D100142
725	848	956	D100143
746	867	974	D100145
746	867	974	D100146

#### **PCD Air Cleaner Performance Curves**

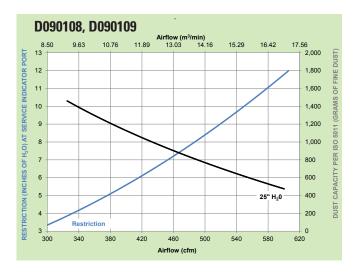


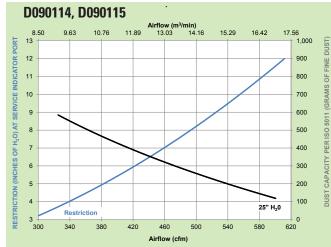



#### continued — PCD Air Cleaner Performance Curves



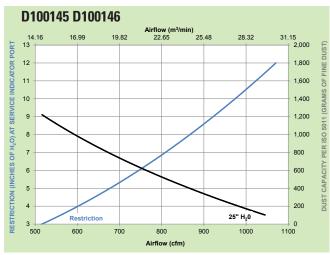

## Service Parts & Accessories

D090114, D090115	PCD
Cover	P7856513
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	P121482
Filter, primary	P6086653
Filter, safety	P6061213
Hump hose	P105609
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Latch	P7773663
Outlet band clamp	P148343
U-clip (4 clips)	P7845173

D090108, D090109	PCD
Cover	P7869893
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	P121482
Filter, primary	P6086753
Filter, safety	P6061213
Hump hose	P105609
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Latch	P7773663
Outlet band clamp	P148343
U-clip (4 clips)	P7845173

D100145, D100146	PCD
Cover	P7842793
Cover, with watertight seal	P619481
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Filter, primary	P6086663
Filter, safety	P6015603
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> O	X002277
Latch	P7773663
Outlet band clamp	P148345
U-clip (4 clips)	P7845173

D100142, D100143	PCD
Cover	P7842983
Cover, with watertight seal	P619482
Elbow, 45°	P109021
Elbow, 90°	P107844
Filter, primary	P6086763
Filter, safety	P6015603
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Latch	P7773663
Outlet band clamp	P148345
U-clin (4 clins)	P784517 3


#### NOTES:


3 = Shipped with air cleaner initially





PCD09, PCD10

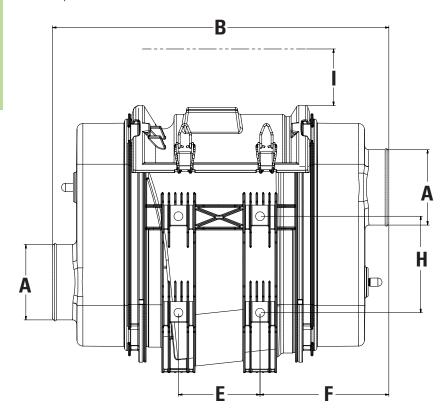

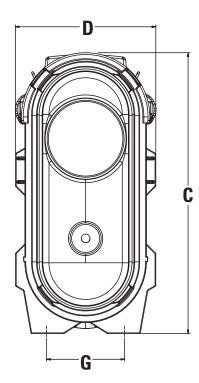

**Note:** a minimum service clearance of 50mm (2.00") is required for wire latches.





#### PCD09, PCD10 Specifications (Letters are keyed to drawings)

Inlet Orientation: I=Inline; 0=Off-set

Part No. /	ı	A	E	3	C			)	E		ı		G	ì	ŀ	1	Serv Cleara		We	ight
Orientation	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	kg	lbs
D090108 O	102	4.00	553	21.77	365	14.37	180	7.09	180	7.09	183	7.21	100	3.94	130	5.12	356	14.0	4.8	10.5
D090109 I	102	4.00	553	21.77	365	14.37	180	7.09	180	7.09	183	7.21	100	3.94	130	5.12	356	14.0	4.8	10.5
D090114 O	102	4.00	453	17.85	360	14.18	180	7.09	110	4.33	173	6.83	100	3.94	130	5.12	330	13.0	4.1	9.1
D090115 I	102	4.00	453	17.85	360	14.18	180	7.09	110	4.33	173	7.21	100	3.94	130	5.12	330	13.0	4.1	9.1
D100142 O	127	5.00	536	21.10	384	15.12	254	10.01	210	8.27	165	6.50	110	4.33	110	4.33	356	14.0	5.9	13.0
D100143 I	127	5.00	536	21.10	384	15.12	254	10.01	210	8.27	165	6.50	110	4.33	110	4.33	356	14.0	5.9	13.0
D100145 O	127	5.00	436	17.17	375	14.75	254	10.01	110	4.33	165	6.50	110	4.33	110	4.33	356	14.0	5.2	11.4
D100146 I	127	5.00	436	17.17	375	14.75	254	10.01	110	4.33	165	6.50	110	4.33	110	4.33	356	14.0	5.2	11.4

### PowerCore® PCD Air Cleaners Service Instructions



This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer. Note: Your air cleaner service cover may be in a different position than shown.

Check the Restriction

the filter from the housing.

Replace the filter only when the restriction level has reached the maximum recommended by the engine or equipment manufacturer or on a regular scheduled service.



Remove the Primary Filter

Push down on the service handle to tilt the filter to a 5° angle. This will loosen the seal. Then, pull up on the service handle to remove



Visually Inspect the Safety Filter

Remove any excess dirt and wipe out the housing with a damp cloth before servicing the safety filter. Visually inspect the safety filter but do not remove it unless it is damaged or due for change-out. Verify that the safety filter is properly seated in the housing. The safety filter should be replaced every three primary filter changes.



NEVER use a pressure sprayer to clean out the air cleaner housing while it is installed on the machine.

## Remove Safety Filter if Indicated or if Excessively Contaminated

To remove the safety filter, use the plastic handle on the face of the safety filter. Pull the filter toward the center of the housing and remove it. Ensure that the outlet tube sealing area is clean and undamaged. If the safety filter is removed and the new filter is not to be installed immediately, be sure to cover the seal tube with a cloth so that dirt is not admitted. After removing the safety filter, wipe the air cleaner housing interior and seal surfaces with a clean, damp cloth.



Inspect the New Filters
Visually check for cuts, tears or indentations on the sealing surfaces and the media pack before installation. If any damage is visible, do not install.



The safety filter should be replaced every three primary filter changes.

Continued on next page



## PowerCore® PCD Air Cleaners Service Instructions



Replace the Safety Filter

If replacing the safety filter, use the plastic handle. Slide the filter at an angle into the outlet side and push it in place until the filter seats firmly and evenly within the housing.



Insert the Primary Filter

Slide the filter down at approximately a 5° angle until it makes contact with the end of the housing. Rotate the filter toward the outlet section to complete the seal.



Replace the Service Cover

Place the service cover in position and fasten the metal latches. If the cover doesn't seat, remove and re-check the filter position and access cover orientation.



Inspect the Entire Air Cleaner
System

Make sure that inlet and outlet connections are in good condition. Torque to and do not exceed 40 in • lb. Replace rubber connectors if necessary and reset the service indicator.



## Light Dust Air Cleaners



## For Diesel, Gasoline and Compressed Natural Gas Engines, and Hybrid Vehicles Operating in Light to Light/Medium Dust Conditions

Over-highway trucks, stationary engines, light industrial vehicles, and sport utility/light trucks generally operate in low-dust environments. They still need top quality air filtration systems to protect them and keep them running at peak efficiency. Those operating in high carbon environments particularly need protection.



If you're looking for a new air cleaner, check out the PowerCore® air cleaner section first!

PCD Air Cleaners with PowerCore Filtration Technology offer improved filtration performance compared to our older E Series air cleaners.



#### **Section Index**

DuraLite''' ECB, ECC, ECD	46
Install & Service Instructions	49
ECO® / ECOLITE® Air Cleaners	50
EPG	52
Service Instructions	56
ERA	58
Service Instructions	61
EBA Konepac™	63
Service Instructions	66
ECG Konepac <sup>™</sup>	68
Service Instructions	72
EBB	74
Service Instructions	76

ECO and ECOLITE are registered trademarks of Parker-Hannifin Corp., Racor Division

### DuraLite<sup>™</sup> Air Cleaners



## **Convenient DuraLite<sup>™</sup> Disposables**Rugged Air Cleaners for Small and/or High Pulsation Gas & Diesel Engines

Donaldson's DuraLite Air Cleaners are tough, non-metallic, lightweight, self-supporting, and completely disposable. They are also easy to install, durable, and reliable.

They are designed to function well under high and severe pulsation conditions found in many applications, especially two- and three-cylinder engines. Vibration-resistant media is potted into molded housings of rugged ABS plastic — so they don't fall apart as other designs might.

#### **Applications**

- Can be mounted vertically or horizontally
- Gas and diesel engines and hybrid vehicles in light to medium dust conditions
- Powered vehicles and equipment
- Mobile engines
  - Stepvans
  - Recreational vehicles
  - Lawn and garden tractors
- Stationary engines
  - Air compressors
  - Refrigeration units
  - Material handling equipment pumps
  - Gen sets
  - Welding equipment
- Marine engines
  - Propulsion units
  - Gen sets
- Provides variety of airflow volumes to engine: from 42 to 2118 cfm
- Temperature tolerance: 180 °F/83 °C continuous 220 °F/105 °C intermittent



Donaldson recommends the use of a high torque hose clamp (up to 150 in lbs) for DuraLite air cleaners. This

clamp eliminates the need for double clamping. Order one for each DuraLite air cleaner. See Accessories Section for more information.



DuraLite™ Air Cleaners — sturdy, one-piece, and disposable — are designed to withstand the high pulsation of small engines such as the ones shown here. They are easy to maintain because there are no service parts. When the filter is full, simply throw it away.



#### **Air Cleaner Features**

- No serviceable parts. Air cleaner housing and filter are one unit.
- Designed to withstand severe intake pulsation
- Economical replacement cost
- · Self-supporting, sturdy
- Very reliable: only one critical seal
- · Lightweight and compact in size
- Non-metallic (except B085008 which is galvanized steel), non-corrosive . . . ideal for marine applications
- Completely disposable . . . acceptable for normal trash pick-up (DuraLite should not be incinerated)


- Easily installed and maintained
- Minimal removal clearance needed only 1.5"
- Three airflow styles available to fit virtually any engine intake configuration
- Various media available for specific applications — high pulsation and high humidity





#### When Selecting an Air Cleaner . . .

Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table at right. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.

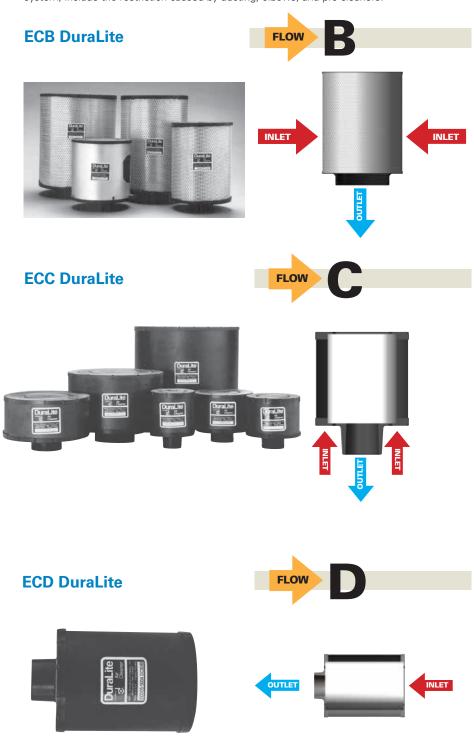

Note: D065008 has inlet holes on both ends of filter

#### **ECB Initial Airflow Restriction**

CF	M @ "H <sub>2</sub>	,0	Air Cleaner
4"	6"	8"	Model
175	250	300	B085008
275	335	390	B085001
275	335	390	B085048
280	400	470	B085011
280	400	470	B085046
380	440	480	B105020
400	580	710	B105002
450	590	680	B105006
700	882	1024	B125011
800	1060	1250	B125005
830	1110	1295	B125003
970	1215	1412	B085056
1060	1305	1500	B120439
1550	1836	2118	B120376

#### **ECC Initial Airflow Restriction**

4" CF	FM @ "H 6"	<sub>2</sub> 0 8"	Air Cleaner Model
42	55	64	C045001
55	70	82	C045002
64	82	94	C055003
70	90	106	C055002
95	111	140	C065001
108	137	162	C065002
112	145	170	C085001
115	147	190	C065015
115	150	175	C085005
120	150	175	C065003
130	165	188	C085002
135	170	195	C085006
135	170	195	C085043
150	180	215	C085003
170	205	245	C085004
170	205	245	C085041
325	400	480	C105003
352	400	480	C105028
400	500	620	C105004
400	500	620	C105017
485	620	760	C125004

#### **ECD Initial Airflow Restriction**

4" CI	FM @ "H 6"	<sub>2</sub> 0 8"	Air Cleaner Model
44	56	65	D045003
50	64	75	D045004
78	97	115	D055004
102	127	152	D065003
125	155	185	D065008

www.buydonaldson.com Engine Air Filtration • 47



## DuraLite<sup>™</sup> Air Cleaners



#### **ECB DuraLite™ Specifications**

Air Cleaner	Bo Diam (A	eter )	Diam (C	Outlet Diameter (C)		Length (D)		Outlet Length (F)		<b>Weight</b> lbs ka	
Models	ın	mm	in	mm	in	mm	in	mr	TI .		kg
B085001	8.50	216	3.00	76	11.00	279	1.38	35	Α	4.2	1.9
B085008 <sup>1</sup>	8.75	222	3.00	76	8.50	216	1.38	35	Α	5.5	2.5
B085011	8.50	216	4.00	102	11.00	279	1.38	35	Α	4.2	1.9
B085046	8.50	216	4.00	102	11.00	279	1.38	35	В	4.2	1.9
B085048	8.50	216	3.00	76	11.00	279	1.38	35	В	4.2	1.9
B085056	7.72	196	5.67	144	11.02	280	1.38	35	В	3.2	1.5
B105002	10.50	267	5.00	127	15.00	381	1.38	35	С	5.9	2.7
B105006	10.50	267	4.00	102	10.50	267	1.38	35	Α	5.2	2.4
B105020	10.50	267	4.00	102	10.50	267	1.38	35	В	3.6	1.6
B120376	12.5	318	7.8	198	15.75	400	1.89	48	D	8.0	3.6
B125011	12.5	318	5.0	127	9.0	229	1.38	35	D	6.6	3.0
B120439	12.5	318	7.78	197	15.75	400	1.57	40	Α	3.5	1.6
B125003	12.50	318	6.00	152	15.00	381	1.38	35	С	7.1	3.2
B125005	12.50	318	5.50	140	9.00	229	1.38	35	D	5.0	2.3

#### **ECC DuraLite™ Specifications**

Air Cleaner	Bo Diam (A	ieter ()	Dian (C	;)	Len	Ĭ)		gth F)	Media Type		ight
Models	in	mm	in	mm	in	mm	in	mr		lbs	kg
C045001	4.50	114	1.50	38	4.50	114	1.38	35	С	0.6	0.27
C045002	4.50	114	1.50	38	8.00	203	1.38	35	С	0.9	0.40
C055002	5.50	140	1.75	44	7.00	178	1.38	35	С	1.0	0.45
C055003	5.50	140	1.75	44	4.00	102	1.38	35	С	1.0	0.45
C065001	6.50	165	2.00	51	4.00	102	1.38	35	С	8.0	0.36
C065002	6.50	165	2.00	51	7.50	191	1.38	35	С	1.3	0.60
C065003	6.50	165	2.25	57	5.00	127	1.38	35	С	1.0	0.45
C065015	6.50	165	2.00	61	9.00	229	1.38	35	D	2.0	0.90
C085001	8.50	216	2.50	64	4.00	102	1.38	35	С	1.4	0.64
C085002	8.50	216	2.50	64	6.50	165	1.38	35	С	2.2	1.0
C085003	8.50	216	3.00	76	5.00	127	1.38	35	С	2.2	1.0
C085004	8.50	216	3.00	76	9.50	241	1.38	35	С	3.0	1.4
C085005	8.50	216	2.50	64	5.00	127	1.38	35	С	2.2	1.0
C085006	8.50	216	2.50	64	9.50	241	1.38	35	С	3.0	1.4
C0850413	8.50	216	3.00	76	9.50	241	1.38	35	С	3.0	1.4
C0850433	8.50	216	2.50	64	9.50	241	1.38	35	С	3.0	1.4
C105003	10.50	267	4.00	102	6.00	152	1.38	35	Α	2.3	1.0
C105004	10.50	267	4.00	102	10.50	267	1.38	35	Α	3.6	1.6
C1050173	10.50	267	4.00	102	10.50	267	1.38	35	Α	3.6	1.6
C1050283	10.5	267	4.0	102	6.0	152	1.38	35	Α	3.4	1.5
C125004	12.50	318	5.00	127	11.00	279	1.38	35	Α	5.8	2.6

#### **ECD DuraLite™ Specifications**

Air Cleaner		ndy neter 1)	Dian	Outlet Diameter (C)		Outlet Length Length (D) (F)					ight
Models	in	mm	in	mm	in	mm	in	mm	1	lbs	kg
D045003	4.50	114	1.50	38	4.50	114	1.38	35	С	0.6	0.27
D045004	4.50	114	1.50	38	6.00	152	1.38	35	С	8.0	0.36
D055004	5.50	140	1.75	44	7.00	178	1.38	35	С	1.0	0.45
D065003	6.50	165	2.00	51	4.00	102	1.38	35	С	8.0	0.36
D0650084	6.50	165	2.00	51	9.00	229	1.38	35	D	1.5	0.68

#### **Specification Illustrations**


#### **Specifications Notes:**

- 1 Body is galvanized steel with 4" (254mm) dia. inlet on side 2 Body is plastic with 4" (254mm) dia. inlet on side
- 3 Screen inlet deters rodent infestation
- 4 Has inlet holes at both ends of filter


#### **Media Types:**

- A = Standard cellulose media
  B = Treated to withstand higher humidity; most often used in marine applications. Designed for higher airflow/low dust applications . . . should NOT be used for normal engine operating environments.
- C = Reinforced to withstand higher pulsation applications
- D = Designed for higher airflow/low dust applications . . . should NOT be used for normal engine operating environments


#### **ECB DuraLite**

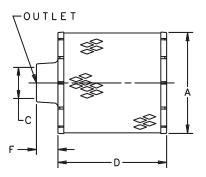

#### **ECC DuraLite**

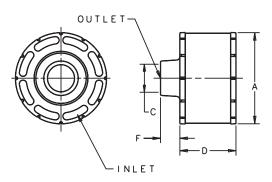

#### **ECD DuraLite**

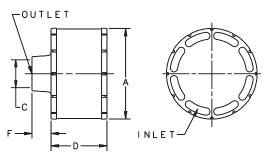

Note: D065008 has inlet holes at both ends of filter

#### Installation Instructions

#### Installation


DuraLite air cleaners can be mounted in two ways:

- 1. Direct Mount: mounted directly on the intake manifold.
- 2. **Remote Mount:** mounted away from engine and connected to engine with inlet piping.


#### **Installation Tips**

- Engage outlet neck of the DuraLite over intake piping for a full 1½" to insure a secure, lasting seal.
- Tighten clamp around outlet neck to 60 in•lb minimum. A Donaldson high torque hose clamp is recommended.
- On remote mount style, avoid crushing the body with body clamps. A snug fit is best, and body clamps are not always required.
- Keep away from engine manifold and other very hot components (DuraLite is rated at 180 °F / 83 °C maximum sustained temperature).
- Keep away from battery acids, brake fluid, and other caustic fluids.

#### **Direct Mount**

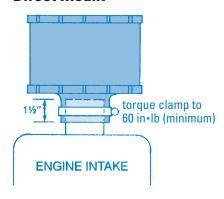

#### Remote Mount

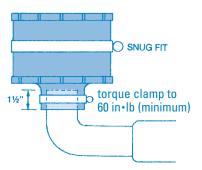

#### **Service Recommendations**

This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

#### **Servicing Intervals**

Choose either of two types:


- Scheduled (Miles or Hours).
   DuraLite service intervals can be integrated into any existing maintenance program.
- Filter Service Indicator. This method offers the most accurate filter maintenance program, delivering maximum filter life, less machine downtime, and reduced maintenance costs.
- Washing, cleaning or servicing the filter in any way voids the warranty.

#### **Disposal**

Follow your local disposal guidelines for disposal.

#### **Service Indicator Location**

For proper restriction readings, a restriction fitting tap must be located between the engine intake and DuraLite outlet neck. The tap should be located in a straight section of the intake pipe at least one pipe diameter away from the manifold or any bends, elbows or reducers.

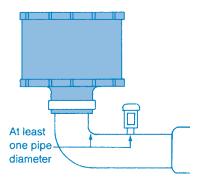

### **Servicing Tips**

 Do NOT judge the filter on the basis of visual inspection! If it's doing its job, it **should** look dirty. DuraLite filter life is longer than you may think. Change the filter only when restriction readings indicate to do so.



- During filter change out, do NOT leave the inlet ducting exposed any longer than necessary (a few minutes) during service.
- Never wash or clean the unit for reuse.

www.buydonaldson.com Engine Air Filtration • 49



## ECO® & ECOLITE® Air Cleaners



- Lightweight
- Sturdy
- One Piece Construction

Use the initial restriction table if your selecting an air cleaner. For a direct replacement to Parker, select the air cleaner style tables.


#### **Initial Restriction**

Airflow Air Cleane	er Model
350 cfm @ 8" H <sub>2</sub> 0	P537451 ECO-SE
510 cfm @ 8" H <sub>2</sub> 0	P537452 ECO-SE
800 cfm @ 8" H <sub>2</sub> 0	P613679 ECO-SE
840 cfm @ 8" $\rm H_20$	P537453 ECO-SE
960 cfm @ 8" $\mathrm{H}_2\mathrm{O}$	P537454 ECO-SE
1000 cfm @ 5" $H_2$ 0	P537447 ECOLITE
1000 cfm @ 6" H <sub>2</sub> 0	P527586 ECO-CM
1000 cfm @ 7" $H_20$	P524837 ECO-II
1100 cfm @ 6" H <sub>2</sub> 0	P537450 ECO-CM
1200 cfm @ 5" $H_2$ 0	P537448 ECOLITE
1200 cfm @ 6" H <sub>2</sub> 0	P154927 ECO-II
1230 cfm @ 8" H <sub>2</sub> 0	P607373 ECO-SE
1400 cfm @ 7" H <sub>2</sub> 0	P524838 ECO-II
1500 cfm @ 5" $H_2$ 0	P537449 ECOLITE
1500 cfm @ 7" H <sub>2</sub> 0	P528722 ECO-II
1530 cfm @ 8" $H_2$ 0	P537456 ECO-SM
1550 cfm @ 8" H <sub>2</sub> 0	P537455 ECO-SM

## When Selecting an Air Cleaner . . .

Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table at left. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.




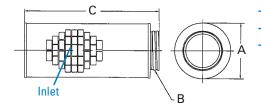

#### ECO®-II

		Body	Body Dia.		.ength	Inlet Dia	. Outle	et Dia.
Parker	Donaldson	(A)		((	<b>:</b> )		(B)	I.D.
Number	Number	in	mm	in	mm	in mm	in	mm
071338001	P524837	9.75	248	24.0	610	Grid	6.0	152
071338002	P154927	11.0	279	24.0	610	Grid	7.0	178
071338003	P524838	13.5	343	24.0	610	Grid	7.0	178
071338004	P528722	13.5	343	18.0	457	Grid	7.0	178



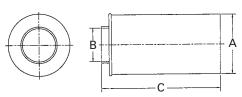

#### **ECO®-SE**

Parker	Donaldson	Body Dia. (A)		Body L	•	Inlet Dia.	Outlet Dia. (B) I.D.		
Number	Number	in	mm	in	mm	in mm	in	mm	
114500001	P537451	6.75	171	14.2	361	End Perf	3.0	76	
114500002	P537452	7.75	197	17.2	437	End Perf	4.0	102	
114500003	P537453	9.67	246	20.2	513	End Perf	5.0	127	
114880003	P537454	9.70	246	18.1	460	6.0* 152*	5.0	127	
114880005	P613679	7.75	197	17.20	437	6.0* 152*	4.00	102	
400292000	P607373	11.50	292	16.88	429	6.0* 152*	7.00	178	

\* side inlet (not illustrated)

ECO and ECOLITE are registered trademarks of Parker-Hannifin Corp., Racor Division




## ECO® & ECOLITE® Air Cleaners




#### **ECO®-CM**

		Body	Dia.	Body I	Length	Outle	et Dia.	Inlet	Dia.				
Parker	Donaldson	(Ã	۱)	((		(E	=)	(E		(D	)	(F	
Number	Number	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm
078897002	P527586	11.0	279	24.0	610	6.0	152	8.0	203	18.5	470	8.9	226
078897001	P537450	13.5	343	24.0	610	7.0	178	8.0	203	5.5	140	11.1	282



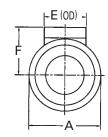


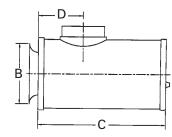


#### **ECOLITE**®

Parker	Donaldson	Body (A	Dia.		Length C)		et Dia. E)	Inlet (E		(D	))	(F)	)
Number	Number	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm
062891001	P537447	9.75	248	24.0	610	6.0	152	6.0	152	5.5	140	6.75	171
062891002	P537448	11.0	279	24.0	610	7.0	178	7.0	178	5.5	140	7.8	198
062891003	P537449	13.5	343	24.0	610	7.0	178	7.0	178	5.5	140	9.1	231



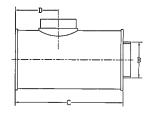


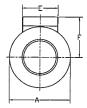


#### **ECO®-SM**

Parker	Donaldson	Body (A	Dia.		Length C)	Outle (E	et Dia. )	Inlet (E		(D	)	(F	)
Number	Number	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm
099842009	P537455	13.5	343	16.8	427	7.0	178	7.0	178	5.5	140	8.6	219
099842010	P537456	13.5	343	16.8	427	7.0	178	7.0	178	9.5	241	8.6	219



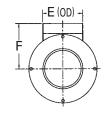

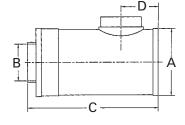

#### Competitive Cross Reference

Baldwin	Donaldson
PA2650	P154927
PA2721	P537447
PA2722	P537448
PA2723	P537449
PA2724	P524838
PA2731	P537450
PA2874	P527586
PA2875	P528722
PA2876	P524837
PA3493	P537454
PA3554	P537451
PA3555	P537452
PA3556	P537453

#### Fleetguard Donaldson AH1103.......P154927 AH1104......P537447 AH1105 P537448 AH1106. P537449 AH1135. P524838 AH1135F P524838 AH1183. P528722 AH1184 P537450 AH1191. P537451 AH1192 P537452 .P537453 .P524837 .P537454 AH1193 . AH1194 . AH1197 ..P537455 ..P537456 AH19014 AH19015.

Fram	Donaldson
CA3770	P154927
CA6622	P524837
CA6623	P524838
CA6624	P528722
CA6854	P537451
CA6855	P537453
CA7229	P537447
CA7230	P537448
CA7231	P537449
CA8129	P537452
CA8131	P537450

Luber-finer	Donaldson
LAF1799	P528722
LAF1821	P537450
LAF1825	P527586
LAF1828	P537447
LAF1844	P537449
LAF1848	P537448
LAF1934	P537454
LAF2521	P537453
LAF8002	P154927
LAF8003	P524838

Donaldson
P537451
P537454
P537453
P537452
P524837
P528722
P154927
P524838
P537455
P537456
P537447
P537448
P537449
P537450
P537453

ECO and ECOLITE are registered trademarks of Parker-Hannifin Corp., Racor Division

### **EPG Air Cleaners**



### **Durable, Corrosion-Free Air Cleaner**

#### Improved Reliability, Superior Engine Protection, Easiest Serviceability

The EPG air cleaner series, which incorporates Donaldson RadialSeal™ Sealing Technology, offers improved reliability and durability, reduced weight and costs, and better serviceability.

EPG air cleaners: conquer underhood space limitations; are corrosion-free and lighter in weight than traditional metal units; are more sturdy than ever before; and have a reliable, easy-to-service design.

The filter inside the air cleaner is also quite different from filters with metal end caps. The one-piece molded end caps encase the ends of the media and filter liners. The filter fits over the housing outlet tube, creating a reliable seal — without the hassle of separate sealing gaskets.

Of the six models, three include a primary filter and three include a primary and safety filter.



Whether you are going to service by miles, hours or restriction, keep accurate maintenance records and log or track your filter changes.



This EPG RadialSeal™ Air Cleaner is part of a complete Donaldson intake system. The entire engine air intake system is made of molded plastic. Between the intake scoop and the air cleaner are Donaldson Strata™ tubes, which provide pre-cleaning. Particulate from this stage is scavenged off and out through the exhaust system. In this system, the EPG air cleaner provides the second stage of cleaning.



The EPG Air Cleaner, which fits neatly under the hood, has RadialSeal™ Sealing Technology that delivers a reliable seal in rugged environments and quick filter change-out.





### Provides up to 1325 cfm Airflow per Air Cleaner

#### **Applications**

- Provides up to 1325 cfm airflow per air cleaner — double airflow to engine by using two units
- Horizontal or vertical installation

#### **Ideal** for

- On-highway vehicles
- Marine and offshore equipment
- Light construction vehicles
- · Agricultural vehicles
- Compressors and generator sets

#### **Air Cleaner Features**

- Durable plastic housing is corrosionfree and weighs less than metal air cleaners
- Very few service parts. Easy to service.
- No mounting bands required. Installs securely via molded-in mounting flange(s) with pre-drilled holes on the side of the housing.
- Available in three body diameters:
   11" (279mm), 13" (330mm), 15" (381mm)
- Temperature tolerances:
  11" (279mm) dia: -40 °F to 220°F (-40 °C to 104 °C)
  13" (330mm) 15" (381mm) dia:
  -40 °F to 200 °F (-40 °C to 93 °C)

#### **Filter Features**

- RadialSeal<sup>™</sup> Sealing Technology ensures reliability, is easy to service and makes the filter selfcentering, self-aligning and self-sealing
- All models can accommodate safety filter
- Donaldson Blue™ high efficiency and extended service filters — which capture sub-micron contaminant such as soot and carbon — are available for some models (see service parts listing on page 55)








#### The Better Alternative to Drain Holes

The Donaldson Vacuator™ Valve is an optional accessory for the EPG that expels water from the air cleaner *before* any reaches the filter — thereby extending filter life. Bare drain holes can clog or take in back splash, but the Vacuator™ Valve never does. The P525956 is a 1" (25mm) diameter model designed for over-highway applications.

#### **Installation** is fast and easy:

- 1. Locate the lowest point of the air cleaner to allow proper drainage through Vacuator Valve.
- 2. Remove filter(s) before drilling.
- Drill a 1" (25mm) hole centered at the lowest point of the air cleaner as shown in illustration. Remove debris from drilling.
- 4. Install Vacuator Valve (P525956) by pushing it into the hole.
- 5. Reinstall filter(s), reattach cover.

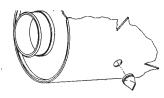




## **EPG Air Cleaners**





### Air in the Side, Out the End (standard flow filters)

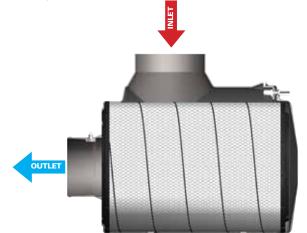


#### **Initial Airflow Restriction**


Airflow	Air Cleaner Model
MODELS WITH PRIMA	ARY & SAFETY FILTER
450 cfm @ 5.5" H <sub>2</sub> 0	G110120
650 cfm @ 6" H <sub>2</sub> 0	G130089
800 cfm @ 5.5" H <sub>2</sub> 0	G150049
MODELS WITH PRIMA	ARY FILTER
625 cfm @ 5.5" H <sub>2</sub> 0	G110119
950 cfm @ 10" H <sub>2</sub> 0	G130079
1325 cfm @ 8" H₂0	G150048


13" & 15" Models

## **EPG Specification Illustrations**

#### 11" Models

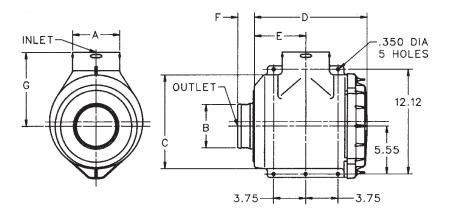

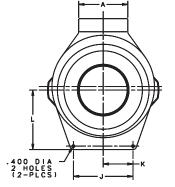

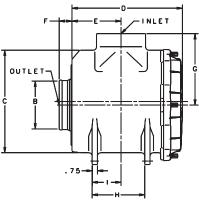

#### **EPG Specifications**

										•		
Air Cleaner Model	Body Dia. (C)	Inlet Dia. (A)	Outlet Dia. (B)	Length (D)	(G)	Outlet Length (F)	(E)	(H)	(I)	(J)	(K)	(L)
G110119	10.86" 276mm	5.50" 140mm	5.00" 127mm	12.89" 327mm	8.56" 217mm	1.95" 50mm	6.00" 152mm	See drav	ving above	for dimens	ions on 11"	models
G110120	10.86" 276mm	5.50" 140mm	5.00" 127mm	12.89" 327mm	8.56" 217mm	1.95" 50mm	6.00" 152mm	See drav	ving above	for dimens	ions on 11"	models
G130079	12.62"	6.00"	5.00"	16.02"	9.51"	3.00"	5.66"	7.75"	2.00"	8.00"	4.00"	6.00"
	321mm	152mm	127mm	407mm	242mm	76mm	144mm	197mm	51mm	203mm	102mm	152mm
G130089	12.62"	6.00"	5.00"	16.02"	9.51"	3.00"	5.66"	7.75"	2.00"	8.00"	4.00"	6.00"
	321mm	152mm	127mm	407mm	242mm	76mm	144mm	197mm	51mm	203mm	102mm	152mm
G150048	14.62"	7.00"	7.00"	15.75"	10.19"	1.82"	7.00"	7.50"	4.12"	8.50"	4.25"	8.00"
	371mm	178mm	178mm	400mm	259mm	46mm	178mm	191mm	105mm	216mm	108mm	203mm
G150049	14.62"	7.00"	7.00"	15.75"	10.19"	1.82"	7.00"	7.50"	4.12"	8.50"	4.25"	8.00"
	371mm	178mm	178mm	400mm	259mm	46mm	178mm	191mm	105mm	216mm	108mm	203mm



## **EPG Air Cleaners**



#### **EPG Service Parts & Accessories**

#### G110119 EPG

Cover	P529151
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Fastener kit	X006452
Filter, primary-Donaldson Blue™.	DBA5067
Filter, primary - SM	P5274843
Filter, safety	
Hump hose	
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H000604
Outlet band clamp	P148345
Thumb screw	P527435
Vacuator™ Valve	P525956

#### G110120 EPG


Cover	P529151
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Fastener kit	X006452
Filter, primary-Donaldson Blue™.	DBA5067
Filter, primary - SM	P5274843
Filter, safety	P5276803
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, plastic	H000604
Outlet band clamp	P148345
Thumb screw	P527435
Vacuator™ Valve	P525956

#### G130079 EPG

Cover	P533916
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Fastener kit	
Filter, primary - SM	P5339303
Filter, primary-Donaldson Blue™	DBA5109
Filter, safety	P5338904
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000275
Inlet hood, plastic	H000606
Outlet band clamp	P148345
Thumb screw	P527435
Vacuator™ Valve	P525956

#### G130089 FPG

0130003 LI U	
Cover	. P533916
Elbow, 45°	. P109021
Elbow, 90°	. P107844
Elbow, 90° reducing	. P143895
Fastener kit	. X006452
Filter, primary - SM	. P5339303
Filter, primary-Donaldson Blue™	. DBA5109
Filter, safety	. P5338903
Hump hose	. P105610
Informer™ indicator 25" H <sub>2</sub> 0	. X002277
Inlet hood, metal	. H000275
Inlet hood, plastic	. H000606
Outlet band clamp	. P148345
Thumb screw	. P527435
Vacuator™ Valve	. P525956

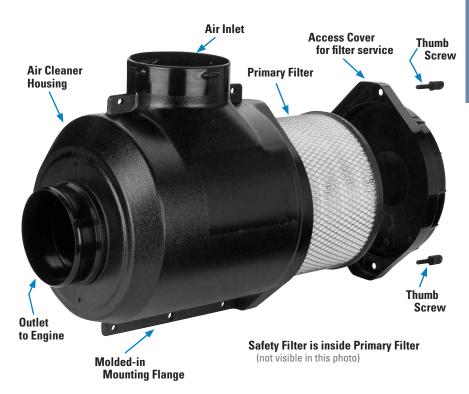

#### 11" Model Shown

#### G150048 EPG

Cover         P523096           Elbow, 45°         P105548           Elbow, 90°         P105536           Fastener kit         X006452           Filter, primary-Donaldson Blue™         DBA5069           Filter, primary - SM         P527683           Filter, safety         P527683           Hump hose         P105613           Informer™ indicator 25" H₂0         X002277           Inlet hood, metal         H000339           Inlet hood, plastic         H000607           Outlet band clamp         P148348           Thumb screw         P527435	
Vacuator™ Valve P525956	

#### G150049 EPG

Cover	DESSUGE
Elbow, 45°	
Elbow, 90°	. P105536
Fastener kit	. X006452
Filter, primary - SM	. P5276823
Filter, primary-Donaldson Blue™	
Filter, safety	. P5276833
Thumb screw	. P527435
Hump hose	. P105613
Informer™ indicator 25" H <sub>2</sub> O	. X002277
Inlet hood, metal	
Inlet hood, plastic	. H000607
Outlet band clamp	
Vacuator™ Valve	. P525956



#### NOTES:

- 3 = Shipped with air cleaner initially
- 4 = Safety filter is designed to fit this air cleaner, but was not originally shipped with it (note that adding a safety filter will decrease the maximum airflow throughput)

SM= Scheduled Maintenance Donaldson Blue™ = High Efficiency, Extended Service



# EPG Air Cleaners Service Instructions



This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

Check the Restriction

Measure the restriction of the air cleaner with a Donaldson filter service indicator, service gauge or water manometer. Use the restriction tap provided on the air cleaner or at the transfer pipe. Replace the filter only when the restriction level has reached the maximum recommended by the engine or equipment manufacturer or on a regular service schedule.

Remove the Filter

Unfasten or unlatch the service cover. The RadialSeal™ filter fits tightly over the outlet tube to create the critical seal, so there will be some initial resistance, similar to breaking the seal on a jar. Gently move the end of the filter back and forth to break the seal. Rotate while pulling the filter straight out. Avoid knocking the filter against the housing.





3 Clean Out the Vacuator™ Valve

Remove the Vacuator Valve and clean out any dust found in the drop tube. Reinstall Vacuator Valve or replace if found worn or damaged. If your air cleaner is equipped with a Vacuator Valve, visually check and physically squeeze it.







Make sure the valve is flexible and not inverted, damaged or plugged. Replace it if damaged or if it looks like any of these images. A damaged or missing Vacuator™ Valve will disrupt the designed flow of air through the air cleaner.

Inspect the Old Filter
Inspect the old filter for any signs of leaks.
A streak of dust on the clean side of the filter is a telltale sign. Eliminate any source of air leaks before installing the new primary filter.



Visually Inspect the Safety Filter

If your air cleaner has a safety filter, do a visual inspection for damage. Verify that the safety filter is properly seated in the housing. Do not remove the safety filter unless it is damaged or due for replacement. The safety filter should be replaced every three primary filter changes. When you remove the safety filter, replace it immediately or make sure you cover the air cleaner outlet tube to avoid admitting any contaminant.





#### **Clean Both Surfaces of the** 6 **Outlet Tube**

Use a clean damp cloth to wipe the filter sealing surface and the inside of the outlet tube. Contaminant on the sealing surface could hinder an effective seal and cause leakage.



## **Inspect the New Filter**

Visually inspect the new filter, paying special attention to the sealing area which is inside the open end.

As you inspect the filter's RadialSeal take care not to wipe the sealing surface. The factory has placed a dry lubricant on the seal which aids in installation and removal. NEVER install a damaged filter.





## **Insert the New Filter Properly**

If you're servicing the safety filter at this change-out, carefully seat it into position before installing the primary filter. Seat the filter by hand, making certain it is completely inserted into the air cleaner housing before securing the cover in place. To complete a tight seal, apply pressure by hand at the outer rim of the filter, not the flexible center.

Never use the service cover to push the filter into place since no cover pressure is required to hold the seal. Using the cover to apply pressure could damage the housing and cover fasteners, and will void the warranty.

If the new filter is not fully in place, remove the cover and push the filter further into the air cleaner with hand pressure on the outer rim. The cover should then go on with no extra force. Then secure the service cover.





## Check Connectors for a Tight Fit

Make sure restriction indicators are reset and in proper working order.

Verify that all mounting bands, clamps, bolts, and connections in the entire air cleaner system are tight.

Check for holes in piping and repair or replace as needed. Any leaks in the intake piping will admit dust directly to the engine.



### **ERA Air Cleaners**



# Cowl-Mounted Air Cleaner Superior Protection with RadialSeal™ Sealing Technology

Looking for a replacement to our older EBA cylindrical-shaped axial seal style air cleaner? Our ERA RadialSeal™ air cleaner series delivers a reliable filtration system for your engine and simplifies filter service.

Our older, classic EBA cowl-mounted air cleaner (shown on the right) has been replaced with our ERA Air Cleaner.

EBA replacement filters are still available through your local Donaldson outlet.



#### **Applications**

- Light dust, single-stage air cleaner
- Vertical installation, mounted on the side of the truck
- Primarily for on-highway trucks
- Can be installed on driver or passenger's side
- Allows up to 1350 cfm airflow throughput per air cleaner

(Mounting the unit directly to the engine is not recommended)

#### **Air Cleaner Features**

- Black, corrosion and chemical resistant polymer paint retains its finish through all types of weather
- Available in 11" (279mm), 13" (330mm) and 15" (381mm) diameter sizes
- Order inlet hoods separately
- Double airflow throughput by using two air cleaners
- Vacuator<sup>™</sup> Valve automatically expels moisture from bottom of housing

#### **Filter Features**

- RadialSeal sealing technology high tech resilient urethane ends that hold the filter firmly in place and maintain a tight, reliable seal — reduces the number of components and ensures reliability
- High efficiency, extended service, Donaldson Blue<sup>™</sup> filters are available on some models (see service parts list on page 60 for part numbers)

The ERA Style air cleaner has RadialSeal sealing technology and fewer access bolts to remove during service compared to our old EBA air cleaner design.

The exterior finish is glossy black, polymer paint.

Don't forget to protect the air cleaner from rain and exposure, by adding an inlet hood to the intake flange on the service cover. Pre-cleaner inlet hoods are featured in the accessories section.












#### Air in the End, Out the Side (reverse flow filters)

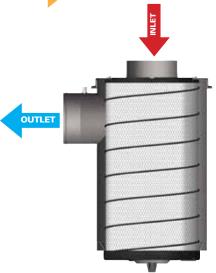

#### When Selecting an Air Cleaner . . .


Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table at right. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.


#### **Initial Airflow Restriction**

CFM @ "H <sub>2</sub> 0			Air Cleaner
6"	8	10"	Model
ERA A	IR CLEA	NER	
750	870	970	A110052
760	880	890	A130115
760	880	980	A150141
1045	1205	1350	A150138

#### **ERA Specification Illustrations**

Side and Top View

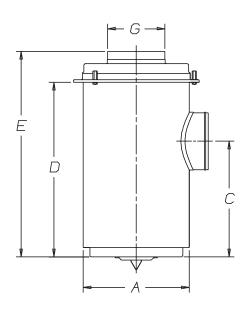

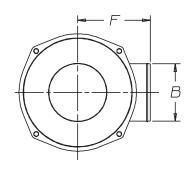

#### **ERA Specifications**

Air Cleaner Models	Body Diameter (A) in mm	Outle Diame (B) in		Outl Locat (C) in	ion	Boo Leng (D in	<b>y</b> th	Over Leng (E) in	jth	Outl Locat (F) in	tion	Inl Dia. (G in	OD	Servi Cleara		Service Indicator Tap	We lbs	ight kg
A110052	11.00 279	5.50	140	17.07	434	20.39	518	23.70	602	9.36	238	6.00	152	20.00	508	Yes	24	11
A130115	13.00 330	6.00	152	16.69	424	20.19	513	22.95	265	10.42	265	6.00	152	20.00	508	Yes	29	13
A150141	15.00 381	6.00	152	16.90	429	20.38	518	23.14	588	11.90	302	6.00	152	20.00	508	Yes	32	15
A150138	15.00 381	7.00	178	19.25	489	24.38	619	27.69	7.03	11.90	302	7.00	178	24.00	610	Yes	36	16



## **ERA Air Cleaners**



#### **ERA Service Parts & Accessories**

10052	ER	

Bolt P119463
Cover
Elbow, 45° P105546
Elbow, 90° P105534
Elbow, 90° reducing P128990
Filter, primary-Donaldson Blue™ DBA5148
Filter, primary - SM P544741 3
Gasket, cover
Hump hose P105611
Informer <sup>™</sup> indicator 25" H <sub>2</sub> O X002277
Inlet hood, metal H000275
Inlet hood, plasticH000606
Mounting band, black, metal P004079
Nut, plastic P119325
Outlet band clamp P148346
Retaining ringP129469
Vacuator <sup>™</sup> Valve P149099

#### A130115 ERA

Bolt	
Filter, primary - SM	
Filter, primary-Donaldson Blue™.	DBA5149
Gasket, cover	P155264
Mounting band, black	P013722
Nut, plastic	P119325
Retaining ring	P129469
Vacuator <sup>™</sup> Valve	P149099


#### A150141 ERA

Bolt	P119463
Cover	P544827
Elbow, 45°	P105547
Elbow, 90°	P105535
Filter, primary-Donaldson Blue™	DBA5151
Filter, primary - SM	P5442433
Gasket, cover	P535559
Hump hose	P105612
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000275
Inlet hood, plastic	H000606
Mounting band, metal, black	P016845
Nut, plastic	P119325
Outlet band clamp	P148347
Retaining ring	P129469
Vacuator <sup>™</sup> Valve	P149099

#### A150138 ERA

Bolt	P119463
Cover	P544238
Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary-Donaldson Blue™	DBA5150
Filter, primary - SM	P5443013
Gasket, cover	P535559
Hump hose	P105613
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000339
Inlet hood, plastic	H000607
Mounting band, black, metal	P016845
Nut, plastic	P119325
Outlet band clamp	P148348
Retaining ring	P129469
Vacuator™ Valve	P149099

Requires Inlet Hood — See Accessories section for choices and order separately.

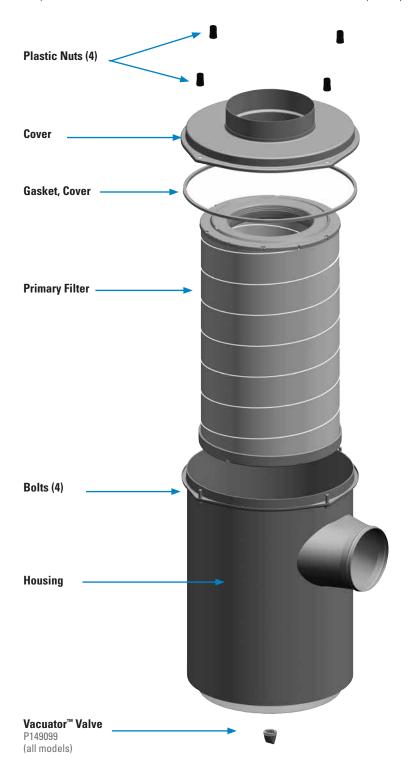

#### NOTES:

3 = Shipped with air cleaner initially

SM = Scheduled Maintenance Donaldson Blue™ = High Efficiency, Extended Service



# ERA Air Cleaners Service Instructions



This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

Check the Restriction
Replace the filter only when the restriction level has reached the

maximum recommended by the engine or equipment manufacturer or on a regular service schedule.
Restriction indicators, mounted on the air cleaner system are recommended for keeping an eye on restriction levels and indicating when servicing is due.





Remove the Filter

Unfasten or unlatch the service cover.

Because the filter fits tightly over the outlet tube to create the critical seal, there will be some initial resistance, similar to breaking the seal on a jar. Gently move the end of the filter back and forth to break the seal. Rotate while pulling the filter straight out. Avoid knocking the filter against the housing.



3 Check the Vacuator™ Valve

If your air cleaner is equipped with a Vacuator Valve, visually check and physically squeeze it. Make sure the valve is flexible and not inverted, damaged or plugged.





Inspect the Old Filter
Inspect the old filter for any signs of

leaks. A streak of dust on the clean side of the filter is a telltale sign. Eliminate any source of air leaks before installing the new primary filter.



Clean Both Surfaces of the Outlet Tube

Use a clean damp cloth to wipe the filter sealing surface and the inside of the outlet tube. Contaminant on the sealing surface could hinder an effective seal and cause leakage.



Continued on next page

# ERA Air Cleaners Service Instructions



6

#### **Inspect the New Filter**

Visually inspect the new filter, paying special attention to the sealing area which is inside the open end. As you inspect the filter's RadialSeal™ take care not to wipe the sealing surface. The factory has placed a dry lubricant on the seal which aids in installation and removal.

NEVER install a damaged filter.





7

#### **Insert the New Filter**

Seat the filter by hand, making certain it is completely inserted into the air cleaner housing before securing the cover in place. To complete a tight seal, apply pressure by hand at the outer rim of the filter, not the flexible center. Never use the service cover to push the filter into place since no cover pressure is required to hold the seal.

Note that a cover gasket is usually supplied with ERA replacement filters. It is important that it be fitted at the same time as the new filter to ensure that the housing is airtight.

Using the cover to apply pressure could damage the housing and cover fasteners, and will void the warranty. If the new filter is not fully in place, remove the cover and push the filter further into the air cleaner with hand pressure on the outer rim. The cover should then go on with no extra force. Then, secure the service cover.









#### Check Connectors for a Tight Fit

Make sure restriction indicators are reset and in proper working order. Verify that all mounting bands, clamps, bolts, and connections in the entire air cleaner system are tight. Check for holes in piping and repair or replace as needed. Any leaks in the intake piping will admit dust directly to the engine.



**62** • Engine Air Filtration










#### Air in the End, Out the Side

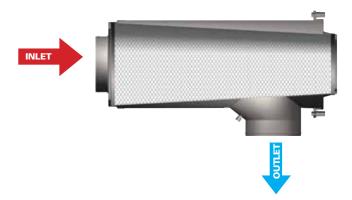



Because of the cone-shaped filter inside the housing, EBA Konepac™ is smaller in size compared to the ERA without sacrificing airflow. This allows trucks to meet width requirements in all states.

Picture of A112018 air cleaner with service cover on the opposite end of the inlet.



#### Outlet

#### **Applications**

- Light-dust, single-stage air cleaner
- Typically mounted horizontally, underhood.

# When Selecting an Air Cleaner . . .

Service parts for this axial style air cleaner may not be available due to newer filtration technology and housing designs. Donaldson now recommends RadialSeal™ style air cleaners for new applications.

If you do prefer this air cleaner style, please use the air cleaner selection steps outlined on the inside cover to determine which air cleaner is best for your engine.

#### **Initial Airflow Restriction**

<b>CFM</b> @ 6"	® "H₂0 8"	10"	Air Cleaner Model
STYLE	KPI		
1150	1300	1475	A112018
STYLE	KPII		
875	1000	1130	A092037
1140	1300	1450	A112078
1400	1640	1850	A132001

#### Looking for the EBA Cylindrical models?

The four models previously available have been replaced by a more reliable ERA RadialSeal style air cleaner design. The ERA models are a direct replacement to the older axial seal air cleaner models.

A110009 use A110052 A150039 use A150141 A130045 use A130115 A150128 use A150138




# EBA Konepac<sup>™</sup> Air Cleaners




#### **EBA Konepac™ Specification Illustrations**

Style Konepac I (KPI)
Service cover opposite the inlet end

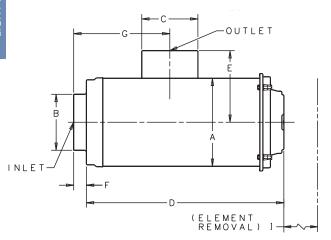

#### Style Konepac II (KPII) Service cover on inlet end

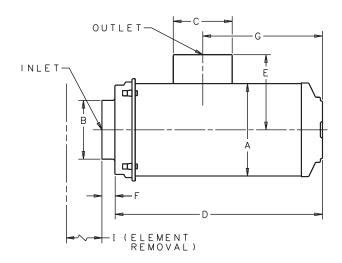


#### **EBA Konepac™ Specifications**

Air Cleaner Models	Bod Diame (A) in	eter	Inl Diam (B in	eter	Out Diam (C in	eter	Lenç (D in		(E)	) mm	Inl Len (F in	gth	(G in	) mm	Serv Cleara (I) in	nce	Service Indicator Tap	Weiq lbs	ght kg
STYLE KPI																			
A112018	11.00	279	7.00	178	7.00	178	28.62	727	8.95	227	1.58	40	22.20	564	28.00	711	Yes	39.0 17	7.8
STYLE KPII																			
A092037	9.00	229	6.00	152	6.00	152	28.63	727	7.85	199	1.18	30	10.00	443	27.62	702	Yes	21.5 9.	.5
A112078	11.00	279	7.00	178	7.00	178	28.67	728	8.95	227	1.58	40	8.00	203	28.00	711	Yes	30.0 13	3.6
A132001	13.00	330	8.00	203	8.00	203	28.59	726	10.00	254	2.38	60	7.50	191	28.00	711	No 4	42.0 19	9.0



#### **EBA Konepac Service Parts & Accessories**

(KPII style shown)

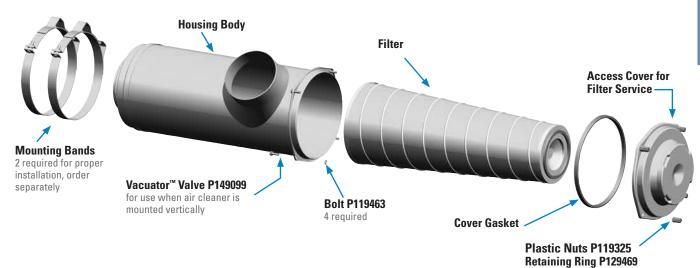

A092037 Style KPII	
Elbow, 45°	P105547
Elbow, 90°	P105535
Filter, primary	P140822
Filter, primary-Donaldson Blue™	DBA5025
Filter, primary treated	
Hump hose	P105612
Informer™ indicator 25" H <sub>2</sub> 0	
Inlet hood, metal	H000275
Inlet hood, plastic	H000606
Mounting bands, metal	
Nut, plastic	P119325
Outlet band clamp	
Retaining ring	P129469
Vacuator <sup>™</sup> Valve	P149099

A112018 EBA KPI	
Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary	P1510973
Filter, primary-Donaldson Blue™	' DBA5024
Filter, primary treated	P1293961
Gasket, cover	P155211
Hump hose	P105613
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	
Inlet hood, plastic	H000607
Mounting band, metal	P0040792
Nut, plastic	
Outlet band clamp	
Retaining ring	
Vacuator™ Valve	P149099

ATTZU/8	EBA KPII
Elbow, 45°	P105548
Elbow, 90°	P105536
Files a series and	D1F1007

A442070

.....P151097 Filter, primary-Donaldson Blue™... DBA5024 Filter, primary treated ...... P129396 .....1,3 Gasket, cover...... P155211 Hump hose ...... P105613 Informer™ indicator 25" H<sub>2</sub>0 ...... X002277 Inlet hood, metal...... H000339 Inlet hood, plastic...... H000607 Mounting band, metal ...... P004079 .....2 Nut, plastic ...... P119325 Outlet band clamp...... P148348 Retaining ring......P129469

Vacuator™ Valve ...... P149099

EDA IZDII

A132001	EBA KPII
ΓΙΑ 1E0	

Elbow, 45° P112606
Elbow, 90° P112605
Filter, primary P1412283
Filter, primary -Donaldson Blue™ DBA5026
Gasket, cover
Hump hose P112608
Informer™ indicator 25" H <sub>2</sub> O X002277
Inlet hood, plasticH001053
Mounting band, metal P0137222
Nut, plastic P119325
Outlet band clamp P148349
Retaining ringP129469
Vacuator™ Valve P149099

#### NOTES:

- 1 = Filter is treated with chemical for carbon resistance and is not cleanable
- 2 = Two required for proper installation

4 of each on cover

3 = Shipped with air cleaner initially

Donaldson Blue™ = High Efficiency, Extended Service



#### EBA Konepac<sup>™</sup> Air Cleaners Service Instructions




This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

1

#### Check the Restriction

Measure the restriction of the air cleaner with a Donaldson filter service indicator, service gauge, or a water manometer.

Replace the filter only when the restriction level has reached the maximum recommended by the engine or equipment manufacturer or on a regular service schedule.

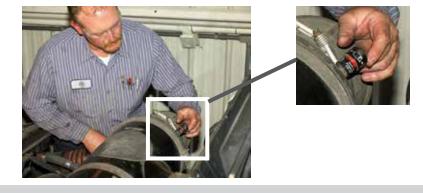

# Gently Remove the Old Filter

Switch the engine off. Handle the dirty filter gently, until it is clear of the air cleaner housing. Accidental bumping will shake dirt loose inside the filter housing.





# Clean the Inside of the Housing

Always clean the inside of the housing. Dirt left in the air cleaner housing can potentially damage your engine.

Use a clean, damp cloth to wipe every surface clean. Ensure that the outlet tube sealing area is clean and undamaged.



# Check the Inside Visually Before Installing the Filter

Always clean the gasket sealing surface. An improper gasket seal is one of the most common causes of engine contamination. Make sure that all hardened dirt ridges are completely removed, both on the bottom and top of the air cleaner housing.

Check for uneven dirt patterns. Your old filter has valuable clues to dust leakage or gasket sealing problems. A pattern on the filter's clean side is a sign that the old filter was not firmly sealed or that a dust leak exists. Identify the cause of that leak and rectify it before installing a new filter.



#### EBA Konepac<sup>™</sup> Air Cleaners Service Instructions



# Inspect the New Filter Before Installation

Check the new filter, but don't install if it appears damaged. Check that the gasket is easily compressible and springs back promptly when finger pressure is released.





### Install the New Filter

It is important to change the new supplied cover gasket with each filter service. Ensure that the filter is the correct size for the housing and install the filter, making sure the gasket seats evenly for a perfect seal. Without a proper seal, dirty air can by-pass the filter.





# Tensure Air-tight Fit on All Connections and Ducts

Check that all clamps and flange joints are tight, as well as the air cleaner mounting bands. Attend to any leaks immediately to avoid dirt directly entering your engine. If the vehicle is fitted with air brakes, it is important to check the clean air supply hose which feeds the air brake compressor.







#### **High Airflow in Compact Size for Horizontal Installation**

#### **Upgrade Path**

To upgrade, consider the Donaldson EPG air cleaner or PSD air cleaners that use newer filtration technologies.

#### **Applications**

- Airflow range 775 to 1600 cfm airflow throughput per air cleaner
- Horizontal installation, side inlet
- Over-highway trucks: horizontal under hood or behind cab
- Buses: under hood

#### **Air Cleaner Features**

- Relatively small air cleaner with high airflow
- Designed for horizontal installation with side inlet
- Housing is metal and coated with a corrosion and chemical resistant polymer paint
- Direct engine mounting is not recommended due to excessive engine vibration
- All models have service access cover opposite the outlet end of the air cleaner

#### **Filter Features**

- Cone shaped filters, which we call Konepac, allow maximum media in a small package (one filter is shipped with each air cleaner)
- Other filter performance options, including Donaldson Blue<sup>™</sup> high efficiency, extended service filters, are available on some models (see service parts list on pages 70 and 71 for part numbers)



The latched service cover on the ECG Konepac allows for easy access to the filter for change out.



ECG Konepac with Latched Service Access
Left: a standard media filter, which is available with
either standard or carbon-resistant media. Middle: the
ECG Konepac™ metal air cleaner housing.
Right: an extended service filter




ECG Konepac with Perforated Inlet — an alternative to disposable style housings. You'll get the economy of replacing the filter instead of the entire unit each time. The perforated inlet on the side of this G112417 housing (middle) is the same as the disposable's, so conversion is direct and easy. Left: Extended service filter. Right: Filter designed for scheduled maintenance.



### ECG Konepac<sup>™</sup> Air Cleaners



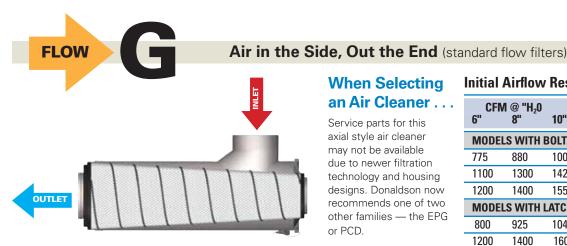

#### When Selecting an Air Cleaner . . .

Service parts for this axial style air cleaner may not be available due to newer filtration technology and housing designs. Donaldson now recommends one of two other families - the EPG or PCD.


#### **Initial Airflow Restriction**

CFN 6"	/I @ "H₂0 8"	10"	Air Cleaner Model
	LS WITH		ERVICE ACCESS
775	880	1000	G092001
1100	1300	1425	G112001
1200	1400	1550	G132000
MODE	LS WITH	LATCHED	SERVICE ACCESS
800	925	1040	G092401
1200	1400	1600	G112404
1200	1400	1600	G112417 <sup>1</sup>
1200	1400	1600	G112501
1200	1400	1600	G112504


<sup>1 -</sup> No inlet tube, perforated inlet holes on side

#### **ECG Konepac™ Specification Illustrations**

#### **Bolted Service Access**

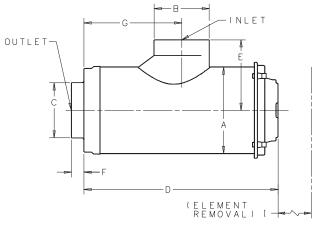


#### **Latched Service Access**

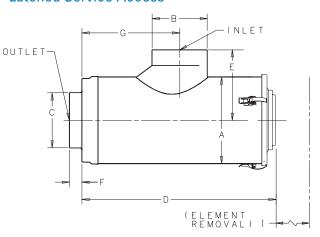

#### **ECG Konepac Specifications**

Air Cleaner	Bod Diamo (A)	eter	Inl Diam (B	eter	Out Diam (C	eter	Over Lenç (D	jth	(E	)	Inl Len (F	gth	(G	)	Servi Cleara		Service Indicator Tap	We	ight
Models	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm		lbs	kg
BOLTED SE	RVICE /	ACCES	S																
G092001	9.00	229	6.00	152	6.00	152	28.63	727	7.85	199	1.18	30	18.63	473	27.62	702	No	30	14
G112001	11.00	279	7.00	178	7.00	178	28.62	727	8.95	227	1.58	40	20.62	524	27.00	686	No	38	17
G132000	13.00	330	7.00	178	7.00	178	24.59	625	9.54	242	2.38	60	18.25	464	27.62	702	No	36	16
LATCHED S	ERVICE	ACCE	SS																
G092401	9.00	229	6.00	152	6.00	152	28.70	729	7.86	200	1.18	30	21.75	553	27.62	702	No	30	14
G112404	11.00	279	7.00	178	7.00	178	22.70	577	8.97	228	2.00	51	12.32	313	22.00	559	Yes	33	15
G112417 <sup>1</sup>	11.00	279			7.00	178	28.70	729			2.00	51	15.11	384	28.00	711	Yes	30	14
G112501	11.00	279	7.00	178	7.00	178	28.30	719	8.97	228	2.00	51	21.22	539	28.00	711	Yes	23	10
G112504	11.00	279	7.00	178	7.00	178	22.30	566	8.97	228	2.00	51	12.32	313	22.00	559	Yes	20	9

<sup>1 -</sup> This model has no inlet tube; inlet consists of rectangular perforated holes on side of housing.

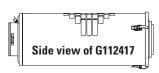




### ECG Konepac™ Air Cleaners



#### **ECG Konepac Service Parts**

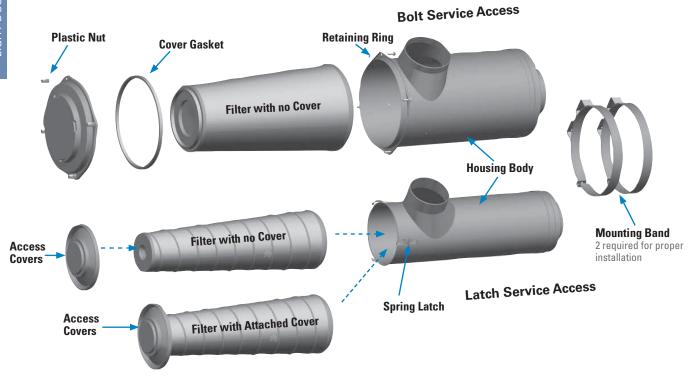

#### **ECG Konepac Service Parts & Accessories**

G092001	<b>Bolted Service Cover</b>
Elbow, 45°	P105547
Elbow, 90°	P105535
Filter, primary, no co	over, treated P1480441,3
Hump hose	P105612
Informer <sup>™</sup> indicator	25" H <sub>2</sub> 0 X002277
	H000275
Inlet hood, plastic	H000606
Mounting band, me	tal P0040732
Nut, plastic	P119325
Outlet band clamp	P148347
Retaining ring	P129469

G092401	<b>Latch Service Cover</b>
Elbow, 45°	P105547
Elbow, 90°	P105535
Filter, primary, at	tached cover P1506936
Filter, primary, no	cover P1506923
Filter, primary, no	cover, treated P1480441
Hump hose	P105612
Informer™ indicat	tor 25" H <sub>2</sub> 0 X002277
Inlet hood, metal	H000275
Inlet hood, plasti	c H000606
Mounting bands,	metal P004073
Outlet band clam	p P148347
Spring latch repl	acement kit X006201

G112001	<b>Bolt Service Cover</b>
Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary, no	cover, treated P1480431,3
Gasket, cover	P155211
Lump book	D10E612

Hump hose ...... P105613 Informer<sup>™</sup> indicator 25"  $H_2O$  ...... X002277 Inlet hood, metal...... H000339 Inlet hood, plastic...... H000607 Kit......X006201 Mounting band, metal ...... P004079 .....2 Nut, plastic ...... P119325 Outlet band clamp...... P148348 Retaining ring...... P129469

#### G112404 **Latch Service Cover** C

Cover	P150862
Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary, attached cover	P153551
Filter, primary, attached cover	
- EC & HE	DRA5053

- ES & HE	DDAGUGG
Filter, primary, no cover, treated	P1545751,3
Gasket, cover	P536493
Hump hose	P105613
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000339
Inlet hood, plastic	H000607
Mounting bands, metal	P004079
Outlet band clamp	P148348
Spring latch replacement kit	X006201





ECG style air cleaners have three cover latches that need to perform correctly to ensure the filter gasket is sealing properly. These latches should be checked for tightness and wear. To check

for tightness, close all three latches, then open and close them one at a time. There should be good tension and they should snap tightly when closed. If any latches seem loose or rattle, they should be replaced.



# ECG Konepac<sup>™</sup> Air Cleaners



G112417	Latch Service Cover
Cover	P150862
Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary, atta	ched cover P150695
Filter, primary, atta	ched cover
- Donaldson Blue	™DBA5047
Filter, primary, no o	over P1506943,5
Filter, primary, no o	over
- Donaldson Blue	™DBA5029
Gasket, cover	P536493
Hump hose	P105613
Informer™ indicato	r 25" H₂O X002277
Mounting bands, n	netal P004079
Outlet band clamp	P148348
Spring latch replac	ement kit X006201

G112501	<b>Latch Service Cover</b>
Elbow. 45°	P105548
Elbow, 90°	P105536
Filter, primary	P1506945
Filter, primary	P1506953,6
Filter, primary, att	ached cover
- Donaldson Blu	ıe™DBA5047
Filter, primary, no	cover
	ıe™DBA5029
Filter, primary trea	ated P1480431
Gasket, cover	P536493
Hump hose	P105613
Informer <sup>™</sup> indicat	or 25" H <sub>2</sub> 0 X002277
Inlet hood, metal.	H000339
Inlet hood, plastic	: H000607
Mounting bands,	metal P004079
Outlet band clam	pP148348
Spring latch repla	cement kit X006201

G112504	<b>Latch Service Cover</b>
Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary, att	ached black
cover	P5377913,6
	ached cover P1535516
Filter, primary, att	
	ıe™DBA5053
	cover, treated P1545751
Gasket, cover	P536493
	P105613
	or 25" H <sub>2</sub> 0 X002277
,	H000339
	H000607
	metal P004079
	p P148348
Spring latch repla	acement kit X006201

G132000	<b>Bolt Service Cover</b>
Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary, no	cover P1421003
Filter, primary, no	cover
- Donaldson Blu	ıe™DBA5027
Gasket, cover	P120604
Hump hose	P105613
Informer <sup>™</sup> indicat	or 25" H <sub>2</sub> 0 X002277
	H000339
Inlet hood, plastic	: H000607
	netal P0137222
Nut, plastic	P119325
Outlet band clam	pP148348
Retaining ring	P129469

#### NOTES:

- 1 = Filter is treated with chemical for carbon resistance and is  $\underline{\mathsf{not}}$  cleanable
- 2 = Two required for proper installation
  3 = Shipped with air cleaner initially
  5 = Also requires access cover P150862
- 6 = Access cover is attached to filter

Donaldson Blue™ = High Efficiency, Extended Service



#### ECG Konepac<sup>™</sup> Air Cleaners Service Instructions



This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

1

#### **Check the Restriction**

Check the restriction of the air cleaner with a Donaldson filter service indicator, service gauge, or a water manometer.

Replace the filter only when the restriction level has reached the maximum recommended by the engine or equipment manufacturer or on a regular service schedule.





2

#### **Gently Remove the Old Filter**

Switch the engine off. Handle the dirty filter gently, until it is clear of the air cleaner housing. Accidental bumping will shake dirt loose inside the filter housing.





3

# Clean the Inside of the Housing

Always clean the inside of the housing. Dirt left in the air cleaner housing can potentially damage your engine.

Use a clean, damp cloth to wipe every surface clean. Ensure that the outlet tube sealing area is clean and undamaged.



4

# Visually Check the Inside Before Fitting the New Filter

Always clean the gasket sealing surface. An improper gasket seal is one of the most common causes of engine contamination. Make sure that all hardened dirt ridges are completely removed, both on the bottom and top of the air cleaner housing.

Check for uneven dirt patterns. Your old filter has valuable clues to dust leakage or gasket sealing problems. A pattern on the filter's clean side is a sign that the old filter was not firmly sealed or that a dust leak exists. Identify the cause of that leak and rectify it before installing a new filter.





### ECG Konepac<sup>™</sup> Air Cleaners Service Instructions



# Inspect the New Filter Before Installation

Check the new filter but don't install if it appears damaged. Check that the gasket is easily compressible and springs back promptly when finger pressure is released.





#### Install the New Filter

It is important to change the new supplied cover gasket with each filter service. Ensure that the filter is the correct size for the housing and install the filter, making sure the gasket seats evenly for a perfect seal. Without a proper seal, dirty air can by-pass the filter.






# 7 Ensure Air-tight Fit on All Connections and Ducts

Check that all clamps and flange joints are tight, as well as the air cleaner mounting bands. Attend to any leaks immediately to avoid dirt entering your engine directly. If the vehicle is fitted with air brakes, it is important to check the clean air supply hose which feeds the air brake compressor.





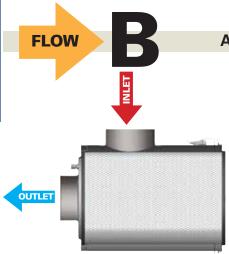

#### Air in the Side, out the End (standard flow filters)


# When Selecting an Air Cleaner . . .

Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table below. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.



#### **Initial Airflow Restriction**

CF	M @ "H <sub>2</sub> 0	Air Cleaner	
6"	8"	10"	Model
620	730	800	B120271
900	1050	1320	B140044
1360	1530	1640	B160049

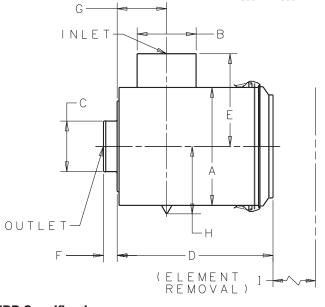



When servicing the EBB, make sure to replace the cover gasket when changing filters.

**EBB Specifications** NOTE: All EBB Air Cleaners are tapped to accept a filter service indicator


Air Cleaner	Boo Diam	éter )	Inl Diam (B	eter 3)	Out Diam (C	eter ()	Lenç (D	Ĭ	. (E		Inl Len (F	gth ;)	. (G		. (H		Serv Clear (I	ance )	Wei	3
Models	in	mm	ın	mm	ın	mm	ın	mm	ın	mm	ın	mm	ın	mm	ın	mm	ın	mm	lbs	kg
B120271	11.81	300	5.50	140	5.00	127	16.42	417	7.64	194	2.00	51	5.80	147			16.0	406	16	7
B140044 <sup>1</sup>	14.00	356	7.00	178	6.00	152	18.50	470	10.90	277	1.62	41	5.88	149	8.00	203	17.5	445	19	8
B160049 <sup>2</sup>	16.00	406	8.00	203	7.00	178	18.75	476	12.91	328	2.50	64	8.84	225			18.0	457	35	16

<sup>1 -</sup> B140044 is only model with installed Vacuator™ Valve 2 - Access cover secured with bolts





#### **Service Parts & Accessories**

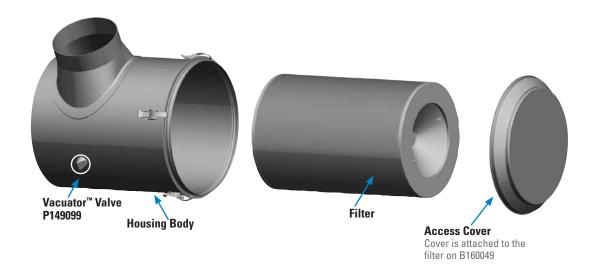

D4	1	n	•	-	4
ы	/	u	/	7	ш

- 12027 1	
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Filter, primary	P182028
Filter, primary - Donaldson Blue™	DBA5028
Filter, primary - SM	P1810283
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H000604
Mounting band, metal	H0003492
Outlet hand clamp	P148345

B140044 EB	В
Elbow, 45°	P105547
Elbow, 90°	P105535
Filter, primary	P182015
Filter, primary - Donalds	on Blue™ DBA5015
Filter, primary - SM	P1810153
Hump hose	P105612
Informer™ indicator 25"	H <sub>2</sub> O X002277
Inlet hood, metal	H000339
Inlet hood, plastic	H000607
Mounting hand, metal.	H000350 2

Outlet band clamp...... P148347

B160049	EBB	
Elbow, 45°		P105548
Elbow, 90°		P105536
Filter, primary		P1820993,6
Filter, primary - D	onaldson Bl	ue™ DBA5099
Filter, primary - S	M	P1810996
Hump hose		P105613
Informer <sup>™</sup> indica	tor 25" H <sub>2</sub> O	X002277
Inlet hood, plasti	C	H001053
Mounting band, i	metal	H0003512
Outlet band clam	ın	P148348

#### NOTES:

- 2 = Two required for proper installation
- 3 = Shipped with air cleaner initially
- 6 = Access cover is attached to filter

SM=Scheduled Maintenance Donaldson Blue™ = High Efficiency, Extended Service



# EBB Air Cleaners Service Instructions



This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

Check the Restriction

Check the restriction of the air cleaner with a Donaldson filter service indicator, service gauge, or a water manometer.

Replace the filter only when the restriction level has reached the maximum recommended by the engine or equipment manufacturer or on a regular service schedule.



**2** Gently Remove the Old Filter

Switch the engine off. Handle the dirty filter gently, until it is clear of the air cleaner housing. Accidental bumping will shake dirt loose inside the filter housing.





Clean the Inside of the Housing

Always clean the inside of the housing. Dirt left in the air cleaner housing can potentially damage your engine.

Use a clean, damp cloth to wipe every surface clean. Ensure that the outlet tube sealing area is clean and undamaged.





Check the Inside Visually
Before Installing the

Always clean the gasket sealing surface. An improper gasket seal is one of the most common causes of engine contamination. Make sure that all hardened dirt ridges are completely removed, both on the bottom and top of the air cleaner housing.

Check for uneven dirt patterns Your old filter has valuable clues to dust leakage or gasket sealing problems. A pattern on the filter's clean side is a sign that the old filter was not firmly sealed or that a dust leak exists. Identify the cause of that leak and rectify it before installing a new filter.









# Inspect the New Filter Before Installation

Check the new filter but don't install if it appears damaged. Check that the gasket is easily compressible and springs back promptly when finger pressure is released.





#### Install the New Filter

It is important to change the newly supplied cover gasket with each filter service. Ensure that the filter is the correct size for the housing and install the filter, making sure the gasket seats evenly for a perfect seal. Without a proper seal, dirty air can by-pass the filter.









# Ensure Air-tight Fit on All Connections and Ducts

Check that all clamps, flange joints and air cleaner mounting bands are tight. Attend to any leaks immediately to avoid dirt entering your engine directly. If the vehicle is fitted with air brakes, it is important to check the clean air supply hose that feeds the air brake compressor.







**Reset the Indicator** 


If your system has a remote indicator, don't forget to reset it after filter service.


### Total Filtration Solutions Vehicles • Engines • Equipment



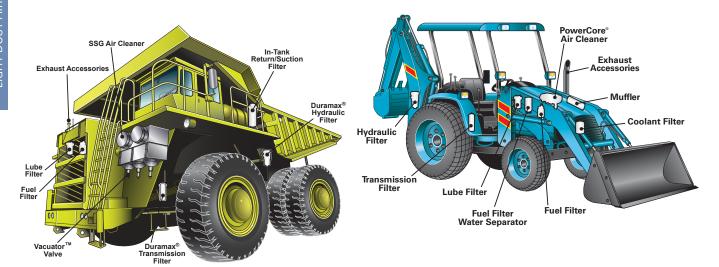

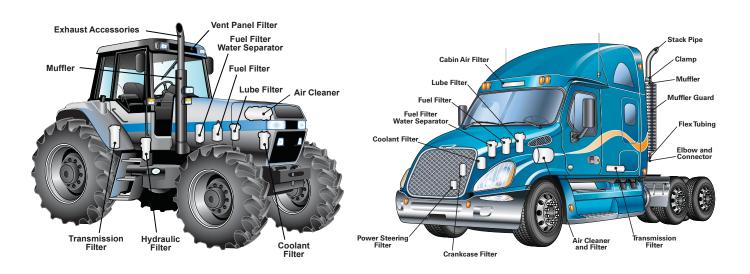

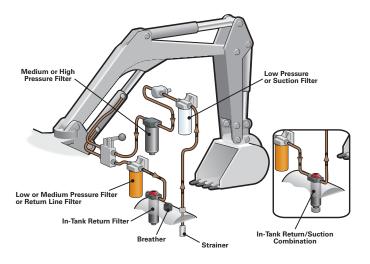

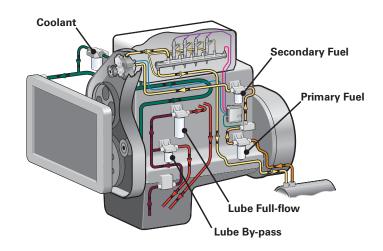

#### Air Cleaners for Medium Dust Conditions F Series & XRB Air Cleaners



# Powerful Two-Stage Filtration for Diesel Engines Operating in Medium to Heavy Dust Conditions

The air cleaners featured in this section offer reliable two-stage filtration designs that have been proven by years of service in medium dust environments such as light construction, mining, agriculture, trucks, gen sets, compressors and industrial applications.



#### **Looking for FHG or FWG Air Cleaner Families?**

These old air cleaner families are being phased out of our product offering. To help you transition from these older air cleaner designs to newer designs with improved filtration technology, the upgrade tables below will guide you to a newer air cleaner housing (or family) that is a close match to the older model. See the service parts section for available parts for older air cleaner housings. If you need help to upgrade, contact Donaldson. See back cover for contact information.

#### Upgrade FHG to FPG or FRG

Older FHG	FPG Model	FRG M Style A	lodel Style B
G052558	G065424	G052686	0.,.02
G052559	G065424	G052686	
G052560	G057511	G052685	
G052561	G057511	G052685	
G052301 G065104	G0770119	G065551	
G065113	G065432	G065541	
G065212	G065432	G065541	
G065360	G065432	G065551	
G080147	G070019	G080582	
G080195	G070013 G082528	G080585	
G080193	G082527	G080582	
G080490	G082527	G080582	
G090022	G0902327	G090245	G100297
G090022 G090024	G090225 G090225	G090245 G090250	
G090024 G090182	G090225 G090225		G110206 G100297
		G090245	
G090183	G090225	G090250	G100297
G100035	G100319	G100398	G110206
G100036	G100319	G100395	G100297
G120012		G120417	G110206
G120014		G120415	G110206
G120036		G120415	G110206
G120037		G120417	G110206
G140022		G140523	G130097
G140054		G140523	G130097
G140055		G140526	G130097
G160078		G160679	G150092

#### Upgrade **FWG** to FPG or FRG

Older FWG	Upgrade	Style
G042503	G042544	FPG
G042529	G042544	FPG
G052510	G057511	FPG
G052512	G057511	FPG
G065266	G070017	FPG
G080023	G082528	FPG
G080026	G082528	FPG
G120365	G100297	FRG
G100003	G100297	FRG
G100004	G100297	FRG
G120059	G110206	FRG
G120063	G110206	FRG
G140077	G130097	FRG
G140083	G130097	FRG
G160104	G150092	FRG
G160107	G150092	FRG

PSD Air Cleaners with PowerCore® Filtration Technology offer improved filtration performance compared to our older F-Series axial or RadialSeal™ air cleaners.

#### Section Index

80
85
88
93
96
105
107
118
121
124
126
124

If you're looking for a new two-stage air cleaner, check out the PowerCore Air cleaner section first!



### Smaller, Lightweight Alternative Two-Stage Air Cleaner

#### **Designed for horizontal installation**

The FKB series is a family of twostage air cleaners for medium dust conditions.

Compared to other air cleaner styles, this new air cleaner family delivers the performance of competitive larger air cleaners in a compact, rugged design.

With heavy-duty plastic construction and non-metal filters, the air cleaner is lighter, more efficient, and easier to install and replace than competing products.

Another key design feature is the built-in mounting brackets. There's no need for additional mounting support.

The two-stage design features a built-in pre-cleaner that separates up to 85% of airborne contaminants.



FKB air cleaners are smaller in diameter compared to competitive brands with similar airflow.

Cummins and Fleetguard are registered trademarks of Cummins, Inc. Mann+Hummel is a registered trademark of Mann+Hummel GMBH

The FKB's plastic housing and durable construction enables installation in all types of operating environments and temperature ranges from -40 °C to 82 °C, operating in medium-dust conditions with engine air flow from 70 to 207 cfm (2 to 5.9 m3/min).

FKB air cleaners effectively reduce contaminants flowing into the air intake system, provide a high level of engine protection from harmful contaminants and increase engine performance and fuel efficiency.

The air cleaner models ship with both the primary and safety filters.







#### **Built-in Mounting Brackets and Filter Indicator Port**

Easy to service with non-metal filters


#### **Applications**

- Off-road equipment operating in medium-dust conditions with engine airflow range of 70 to 207 cfm (2 to 5.9 m3/min)
- Installs horizontally. Mounting the air cleaner directly to the engine is not recommended; excessive engine vibration can cause premature air cleaner structural failure
- Sustained temperature tolerance:
   -40 °F to 180 °F / -40 °C to 82 °C.
   Do not install next to components that exceed the maximum temperature (180 °F / 82 °C); like a turbocharger, muffler, exhaust pipe or other high temperature component

#### **Air Cleaner Features**

- Smaller in diameter compared to competitive brands with similar airflow
- Improved handling and maintenance

   lighter and smaller, changing filters
   is a snap
- Product design includes:
  - primary filter
  - safety filter
  - filter service indicator port
- Improved filter disposal ease no metal
- Cover latch position allows for minimum service clearance and eases filter service
- Built-in mounting brackets in air cleaner body eliminate need for mounting bands

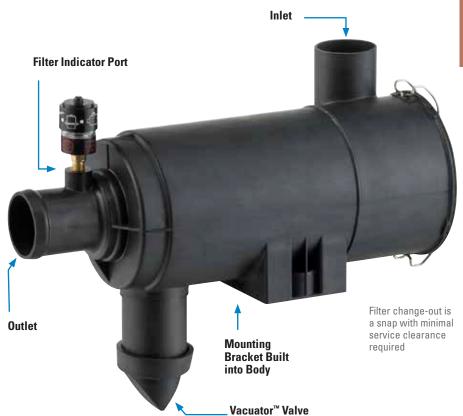



OUTLET





#### Air in the Side, out the End (standard flow filters)


# When spec'ing an Air Cleaner . . .


Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table at right. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, pre-cleaners, etc.


#### **Initial Airflow Restriction**

CF 6"	M@ H₂0 8"	) 10"	Air Cleaner Model
70	84	95	B045008
116	137	154	B055006
155	185	207	B065045

#### **FKB Air Cleaner Performance Curves (Restriction & Dust Capacity)**

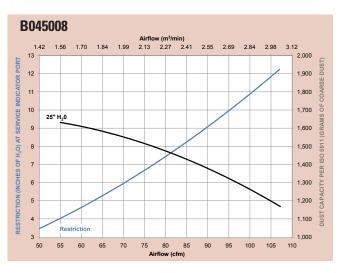

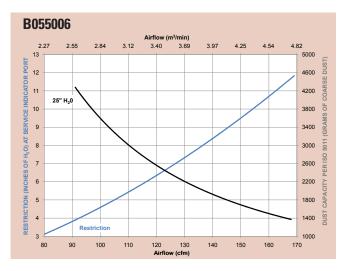


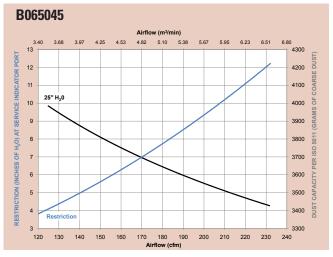





#### **FKB Specification Illustrations**

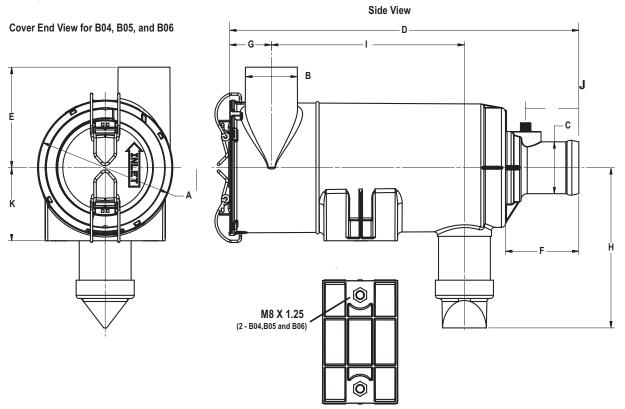


#### **FKB Specifications**

Air Cleaner Models	Body Dia. (A)	Inlet Dia. (B)	Outlet Dia. (C)	Housing Length (D)	Inlet Height (E)	Outlet Length (F)	Inlet Loca- tion (G)	Center Line to Valve (H)	Service Clear. (I)	Weight	Restr. Tap Loc. (J)	Mounting Bracket Height (K)
B045008	5.22"	2.00"	2.00"	13.46"	3.88"	2.83"	1.60"	6.18"	7.44"	2.1 lb	2.02"	2.82"
	133mm	51mm	51mm	342mm	99mm	72mm	41mm	157mm	189mm	1.0 kg	52mm	72mm
B055006	5.97"	2.50"	2.50"	15.89"	3.88"	2.88"	1.93"	6.18"	9.61"	3.2 lb	2.05"	3.03"
	152mm	64mm	64mm	404mm	99mm	73mm	49mm	157mm	244mm	1.4 kg	52mm	77mm
B065045	7.09"	3.00"	3.00"	16.06"	4.72"	2.87"	2.07"	7.41"	9.50"	3.7 lb	2.05"	3.54"
	180mm	76mm	76mm	408mm	120mm	73mm	53mm	188mm	241mm	1.7 kg	52mm	90mm



#### **FKB Air Cleaners**



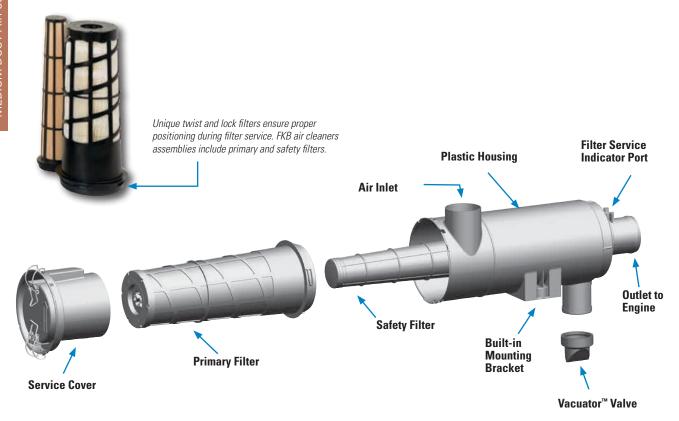

#### **FKB Service Parts & Accessories**

B045008	FKB
Cover	P606497
Filter, primary	P6044573
Filter, safety	P6037293
Vacuator™ Valve	P158914
Elbow, 45°	P105541
Elbow, 90°	P105529
Informer <sup>™</sup> indicato	or 25" H <sub>2</sub> 0 X002277
Inlet hood, plastic	H001377
Outlet band clamp	P148337

B055006	FKB
Cover	P609219
Filter, primary	P6092183
Filter, safety	P6024273
Vacuator™ Valve	P158914
Elbow, 45°	P105543
Elbow, 90°	P105531
Informer <sup>™</sup> indicate	or 25" H₂O X002277
Inlet hood, plastic	H001378
Outlet band clamp	P148339

B065045	FKB
Cover	P608592
Elbow, 45°	P105544
Elbow, 90°	P105532
Elbow, 90° reducing	P123462
	P6092213
Filter, safety	P6085993
Hump hose	P105608
Informer <sup>™</sup> indicator	25" H <sub>2</sub> 0 X002277
	H001379
Outlet band clamp	P148341
	P158914

#### **NOTES:**

3 = Shipped with air cleaner initially

#### **Installation Recommendations**

- Shut off your engine.
- Air cleaner orientation is horizontal, with the drop tube pointing down within +/- 15°.
   For service clearance, allow the entire length of the filter for removal and 35mm for service cover latches.
- Mounting is M8 x 1.25, with a maximum torque of 15 ft•lb.
- Connections: Inlet/Outlet maximum torque 40 in•lb. Indicator port maximum torque 1.5 ft•lb.
- Inlet accessory note: The air cleaner housing can accommodate a lightweight inlet hood, but not a pre-cleaner or any other accessory. Use of an unapproved intake accessory will void your Donaldson warranty.



# FKB Air Cleaners Service Instructions



This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

Check the Restriction
Measure the restriction of the air
cleaner with a Donaldson filter
service indicator, service gauge, or a
water manometer. Replace the filter
only when the restriction level has
reached the maximum recommended
by the engine or equipment
manufacturer or on a regular service
schedule.



# Clean out the Vacuator™ Valve

Remove the Vacuator Valve and clean out any dust found in the drop tube. Reinstall Vacuator Valve or replace it if is worn or damaged.







# Remove the Primary Filter

Unlatch and remove the service cover on the FKB air cleaner.

To remove the primary filter, press and rotate the filter counter-clockwise until free. Then extract the primary filter by slowly pulling it out of the housing.



Note: Avoid dislodging contaminant from the filter as it is removed from the air cleaner housing.





Continued on next page

# FKB Air Cleaners Service Instructions



# Remove the Safety Filter or Liner

Next remove the safety filter (replace at every third primary filter change) or support liner by pulling it straight out. This allows necessary access to properly clean the primary filter's seal surface.

Inspect the seal surface and housing for any damage. Replace the complete air cleaner if damage is present.

It is not necessary to replace the support liner unless it is damaged. If you are reusing the safety filter keep it clean while servicing the housing to avoid contamination.



Note: If a safety filter or liner is not present, check to see if it has attached itself to the inside of the primary filter during removal.

To properly service this small diameter air cleaner, you will need to remove the safety filter or liner upon each filter service.

#### Clean the Inside Surface

Block the outlet tube of the air cleaner using a small dampened towel prior to cleaning the seal and locking surfaces to avoid contaminating the induction system.

With a clean damp cloth, thoroughly clean the inside surface of the housing, seal and lock surfaces.





Note: Failure to clean the inside surface may cause contaminants to be introduced to the outlet tube or onto the seal area of the primary filter during reinstallation resulting in a leak for dirty air.

#### Inspect the New Filters

Inspect the new primary and safety filters for any damage, voids, cuts, tears, or indentations in the media or urethane sealing surfaces.





#### Install the Safety Filter

Remove the dampened towel from the outlet tube that was used to protect the induction system during servicing. Install the safety filter or support liner by pressing it firmly in place until seated. When properly fitted, it should fit snugly inside the outlet tube.





MEDIUM DUST AIR CLEANERS

# FKB Air Cleaners Service Instructions

# 8


# Install the Primary Filter

Install the new primary filter by pressing and rotating the filter clockwise until fully fitted against the stop.





Note: If you perform filter maintenance service on a schedule vs. using service indicators, you may want to write the service date on the filter end cap.

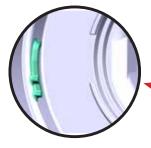


Close-up of Filter Stop



## 9

# Fasten the Service Cover

The "INLET" arrow on the cover should line up with the air cleaner inlet.

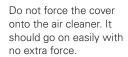

Re-fasten the latches which secure the cover. Make sure that latches penetrate the slots in both the body and the cover.





Note: If the cover does not fit flush to the body, the primary filter is not properly seated in the housing. Recheck the primary and safety filter installation following the proper installation procedure so they become fully seated.

# Reset the Filter Indicator and Inspect the Air Cleaner System

If your system has a restriction indicator, reset the device.

Inspect and torque all clamps, bolts and connections in the entire air intake system. Check for holes in piping, and repair if needed.









# Compact, RadialSeal, Medium-Duty Air Cleaner Designed for Horizontal Installation



The XRB air cleaner family is smaller in size compared to competitive models with similar airflow operating ranges.

XRB air cleaners effectively reduce contaminants flowing into the air intake system, provide a high level of engine protection from harmful contaminants and increase engine performance and fuel efficiency.

The XRB's plastic housing and durable construction enables installation in all types of operating environments and temperature ranges from -40 °F to 180 °F / -40 °C to 82 °C, operating in medium-dust conditions with engine airflow from 265 to 630 cfm.

The B080080 has non-metal primary and safety filters. The primary filters for the B100127 and B120420 have metal outer liners. The air cleaner models ship with both the primary and safety filters.

Like our FKB and PSD models, these air cleaners feature built-in mounting brackets. There's no need for additional mounting support.



Built-in mounting brackets on air cleaner body eliminate the need for mounting bands.



Cover latch position allows for minimum service clearance and eases filter service.



Air cleaners are equipped with the Donaldson Vacuator™ Valve.





#### **Built-in Mounting Brackets and Filter Indicator Port**

#### **Easy to Service with Non-metal Filters**

#### **Applications**

- On- and off-road equipment operating in medium-dust conditions with engine airflow range of 255 to 630 cfm (7.5 to 17.8 m3/min)
- Installs horizontally. Mounting the air cleaner directly to the engine is not recommended; excessive engine vibration can cause premature air cleaner structural failure.
- Sustained temperature tolerance:
   -40 °F to 180 °F / -40 °C to 82 °C. Do
   not install next to components that
   exceed the maximum temperature
   (180 °F / 82 °C) like a turbocharger,
   muffler, exhaust pipe or other high
   temperature component

#### **Air Cleaner Features**

- Smaller in diameter compared to competitive brands with similar airflow
- Improved handling and maintenance

   lighter and smaller, changing
   filters is a snap
- Product design includes:
  - primary filter
  - safety filter
  - filter service indicator port
- Cover latch position allows for minimum service clearance and eases filter service
- Built-in mounting brackets on air cleaner body eliminate the need for mounting bands







Primary and safety filters for XRB housings

#### **Installation Recommendations**

- Air cleaner orientation is horizontal, with the drop tube pointing down
   — within +/- 15°. For service clearance, allow the entire length of the
   filter for removal and 1.38" (35mm) for service cover latches.
- Mounting is M8 x 1.25, with a maximum torque of 15 ft·lb.
- Connections: Inlet/Outlet maximum torque 40 in•lb.
- Inlet accessory note: The air cleaner housing can accommodate a lightweight inlet hood, but not a pre-cleaner or any other accessory.
   Use of an unapproved intake accessory will void your Donaldson warranty.
- Filter Service Indicator port arrives with plug/cap. Order filter service indicator separately. See accessories section. Indicator port maximum torque 1.5 ft•lb.




#### **XRB Air Cleaners**





#### Air in the Side, out the End (standard flow filters)

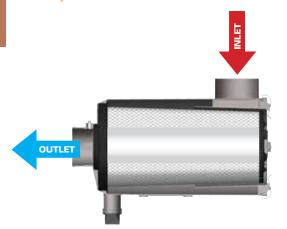



#### When Selecting an Air Initial Airflow Restriction Cleaner . . .


Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table at right. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.

CFN 6"	/I @ H <sub>2</sub> ( 8"	0 10"	Air Cleaner Model
265	315	360	B080080
330	405	475	B100127
475	555	630	B120470

#### **XRB Air Cleaner Performance Curves (Restriction & Dust Capacity)**

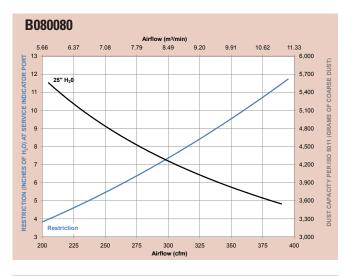

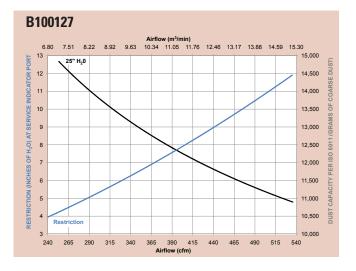


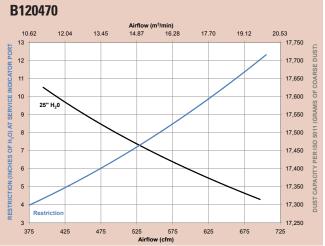





#### **XRB Specification Illustration**

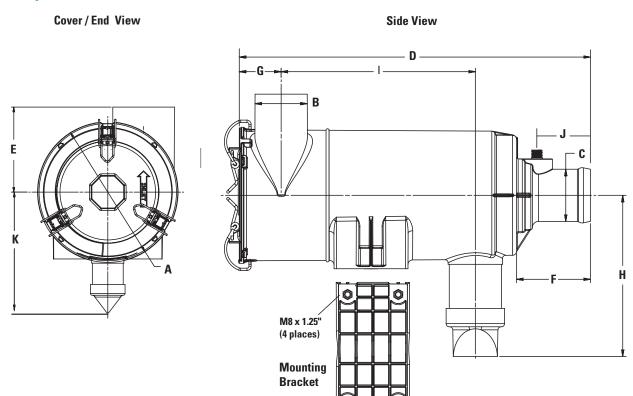


#### **XRB Specifications**

Air Cleaner Models	Body Dia. (A)	Inlet Dia. (B)	Outlet Dia. (C)	Housing Length (D)	Inlet Height (E)	Outlet Length (F)	Inlet Loca- tion (G)	Center Line to Valve (H)	Service Clear. (I)	Weight	Restr. Tap Loc. (J)	Mounting Bracket Height (K)
B080080	9.11"	4.00"	4.00"	16.75"	5.50"	2.40"	3.14"	7.78"	14.76"	5.52lb	1.57"	4.33"
	231.3mm	102mm	102mm	425mm	140mm	61mm	80mm	198mm	375mm	2.5kg	40mm	110mm
B100127	11.31"	5.00"	4.50"	22.25"	7.80"	2.82"	3.47"	8.85"	19.41"	13.00lb	1.97"	5.71"
	287mm	127mm	114mm	565mm	198mm	72mm	88mm	225mm	493mm	5.95kg	50mm	145mm
B120470	13.00"	6.00"	5.00"	23.68"	8.58"	2.81"	3.95"	9.63"	20.71"	20.00lb	1.97"	6.50"
	330mm	152mm	128mm	601mm	218mm	71mm	100mm	245mm	526mm	9.07kg	50mm	165mm

# XRB Air Cleaners Exploded View / Service Parts



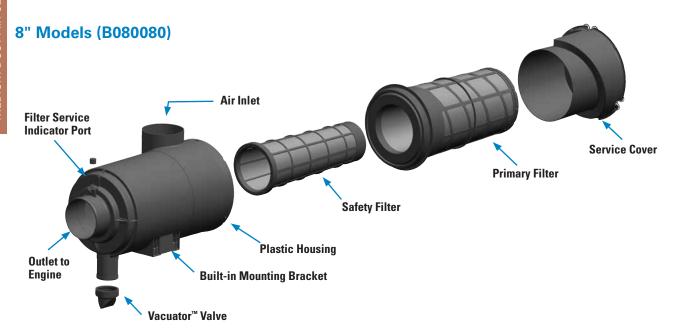



#### **Service Parts & Accessories**

B080080 XRI	В
Cover	P605731
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	P121482
Filter, primary (non metal)	P6111903
Filter, safety	P6111893
Hump hose	P105609
Informer™ indicator 25" H <sub>2</sub>	<b>0</b> X002277
Inlet hood, plastic	H000467
Outlet band clamp	P148343
Vacuator™ Valve	P158914

B100127 XRE	3
Cover Elbow, 45° Elbow, 90°	P114316 P113733
Filter, primary (metal liner) Filter, safety Hump hose	P6115403
Informer <sup>™</sup> indicator 25" H <sub>2</sub> 0 Inlet hood, metal Inlet hood, plastic Outlet band clamp Vacuator <sup>™</sup> Valve	H000165 H000469 P148344

B120470	(RB
D120470 /	(IID
Cover	P608117
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Filter, primary (metal I	iner) P6081163
Filter, safety	P6083913
Hump hose	P105610
Informer™ indicator 25	5" H₂ <b>0</b> X002277
Inlet hood, metal	H000275
Inlet hood, plastic	H000606
Outlet band clamp	P148345
Vacuator™ Valve	P158914

#### NOTES:

3 = Shipped with air cleaner initially



# XRB Air Cleaners Service Instructions



This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

Check the Restriction
Replace the filter only when the restriction level has reached the maximum recommended by the engine or equipment manufacturer or on a regular service schedule.



#### Clean out the Vacuator™ Valve

Remove the Vacuator Valve and clean out any dust found in the drop tube. Reinstall Vacuator Valve or replace if it is worn or damaged.







Remove Service Cover
Unlatch and remove the service
cover on the air cleaner to access
the filters.



# Remove the Primary Filter

The primary filter makes such a tight seal, that you will encounter some initial resistance, similar to breaking the seal on a jar. To break the seal, grab the end of the filter and gently move the filter from side-to-side and pull it out of the housing.

Application Note: Avoid dislodging contaminant from the filter when it is removed from the air cleaner housing.



Continued on next page

# XRB Air Cleaners Service Instructions



5

#### **Remove the Safety Filter**

Replace the safety filter with every third primary filter change unless excessive dust has settled on it during servicing. If you are reusing the safety filter keep it clean while servicing the housing to avoid contamination.

Remove the safety filter by pulling it straight out — giving you easy access to properly clean the primary filter's seal surface.

Block the outlet tube of the air cleaner, using a small dampened towel, prior to cleaning the seal surface to avoid contaminating the induction system.





If a safety filter is not present, check to see it has attached itself to the inside of the primary filter during removal. Inspect the seal surface and housing for any damage. Replace the complete air cleaner if damage is present.



#### **Clean the Inside Surface**

With a second clean damp cloth, thoroughly clean the inside of the housing and seal surface.



Failure to clean the surface may cause contaminants to be introduced to the outlet tube or onto the seal area of the primary filter during reinstallation, resulting in a dirty air leaks.



# Inspect the Primary and Safety Filters

Inspect new filters for any damage, voids, cuts, tears or indentations in the media or urethane sealing surface. If the filter is damaged, do not install.







#### Install the Safety Filter

Remove the dampened towel from the outlet tube that was used to protect the induction system during servicing.

Install the safety filter by pressing it firmly in place until seated. When properly fitted it should fit snugly inside the outlet tube.







# XRB Air Cleaners Service Instructions



9

#### **Install the Primary Filter**

Install the new primary filter by gently sliding it over the safety filter and pressing it into place until fully seated. When installing, apply pressure by hand at the outer rim of the filter, not in the center, to complete a tight seal. Continue pushing the filter into the outlet tube until it stops. The critical sealing area will compress slightly, adjust itself, and distribute the sealing pressure evenly.





If you perform filter maintenance service on a schedule versus using service indicators, you may want to write the service date on the filter end cap.

Fasten the Service Cover
Replace the service cover, with the

"INLET" arrow lined up with the air cleaner inlet.

Do not force the cover onto the air cleaner or use the service cover to push the filter into place.

Refasten latches to secure the cover and make sure that the latches penetrate the slots in both the body and the cover.



If the cover does not fit flush to the body, the primary filter is not properly seated in the housing. Recheck the primary and safety filter installation, following the proper installation procedure so they become fully seated. The cover will then go on easily. Using the cover to push the filters could cause damage to the housing and will void the warranty.

# Inspect the Air Cleaner System

Inspect and torque all clamps, bolts and connections in the entire air intake system. Check for holes in piping and repair if needed.

Reset the filter service indicator if applicable.





#### FPG & FPG Alexin™ Air Cleaners



# Advanced Sealing Technology in Compact Two-Stage Design For the Most Reliable Engine Protection

The FPG Air Cleaner series is a two-stage engine air cleaner operating in medium to heavy dust conditions. The FPG series offers improved reliability and durability with reduced weight and costs.

Ever since Donaldson developed the first air cleaner in 1915, we have worked closely with original equipment manufacturers to provide filtration solutions to meet changing design and specification requirements for diesel engines.

Because they are made of injection molded high-strength plastic, FPG air cleaners offer the flexibility to overcome space limitations for underhood air cleaners. Donaldson employs innovative plastic materials and production techniques that result in air cleaners that are corrosion-free and lighter in weight than traditional metal air cleaners — yet without sacrificing sturdiness. Our extensive vibration testing reveals this to be a more durable design than most metal air cleaners.

The filter inside the air cleaner is also quite different from the traditional design: one-piece molded urethane endcaps encase the ends of the media and filter liners, eliminating the metal caps and plastisol potting compound that were traditionally used. The gluedon gasket found on Axial filters is gone — now, the inside surface of the open end is actually the RadialSeal™ sealing surface.



Despite its compact size, the FPG Air Cleaner offers complete engine air protection — removing 99.9% of the dust and dirt particulate that enters the engine airstream.







FPG and FPG Alexin™ Air Cleaners, with RadialSeal™ Sealing Technology, provide thorough two-stage cleaning of incoming engine air on industrial and construction vehicles operating in medium to heavy dust environments.





### **Small, Durable and Corrosion-Free**

### The Easiest Air Cleaner to Service!

### **Applications**

- Provides up to 346 cfm airflow per air cleaner — double throughput by using two units
- Installation can be horizontal, vertical, or even at an angle (as long as Vacuator™ Valve points down)
- Temperature tolerance: 180 °F / 83 °C sustained (Do not install next to turbocharger, muffler, exhaust pipes, or other hightemp component.)

### **Ideal for**

- Compressors and generator sets
- Construction and in-plant vehicles
- On- and off-highway vehicles
- Marine and offshore equipment

### **Air Cleaner Features**

- Easy to service. No tools needed. Usually done in 5 minutes or less.
- Durable plastic housing corrosionfree and lightweight
- Two-stage air filtration. Built-in, tangential pre-cleaner ahead of primary filter removes up to 85% of incoming dust.
- Choose 90° or straight outlet to fit your application.
- Easy-to-fasten latches retain dust cup/cover. Four (larger) models have twist-off cover.
- Tapped to accept filter service indicator.
- A plastic inlet hood and stack (up to 18" /457mm tall) may be added.

### **Filter Features**

- Filters have RadialSeal<sup>™</sup> Sealing
   Technology that creates
   a reliable, critical seal and makes servicing easy.
- One piece, molded urethane endcaps encase the filter media and liners.
- Safety filter protects engine during infield filter change outs. All FPG models can accept safety filters. Specification table shows which air cleaner models ship with a safety filter installed.
- High efficiency, extended service, Donaldson Blue™ filters are available on some models (see service parts list on page 104 for part numbers)





vibration-resistant

45° Vacuator™ Valve orientation permits either vertical or horizontal air cleaner mounting (the dust cup can be incrementally rotated to suit specific application)









### Air in the Side, Out the End (standard flow filters)

# OUTLET

# When Selecting an Air Cleaner . . .


Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table at right. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.


### **Initial Airflow Restriction**

Airflov 6"	w CFM 8"	@ H₂0 10"	Air Cleaner Model 90° Straight			
MODE	LS WIT	H PRIMA	RY FILTER O	NLY		
55	65	70	G042545	G042544		
80	95	105	G057514	G057513		
120	135	155	G065433	G065432		
150	170	190	G070020	G070019		
205	245	275	G082528	G082527		
MODE	LS WIT	H PRIMA	RY & SAFET	Y FILTER		
65	80	90	G057512	G057511		
110	125	145	G065411	G065424		
125	145	165	G070018	G070017		
165	190	215	G082526	G082525		
247	282	314	G100317 <sup>1</sup>			
259	297	328		G100319 <sup>1</sup>		
265	300	335		G090225 <sup>1</sup>		
256	317	346	G090219 <sup>1</sup>			


<sup>1 -</sup> Models with twist-off cover design (no latches)

### **FPG Air Cleaner Performance Curves**

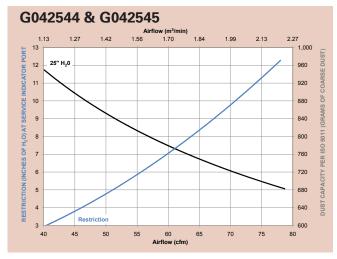

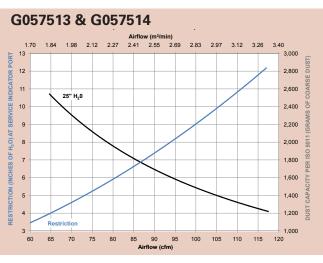




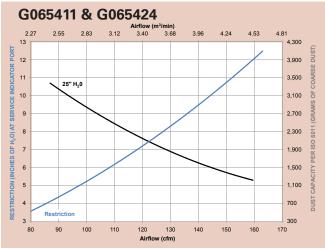




# **3**


### continued — FPG Air Cleaner Performance Curves (Restriction & Dust Capacity)

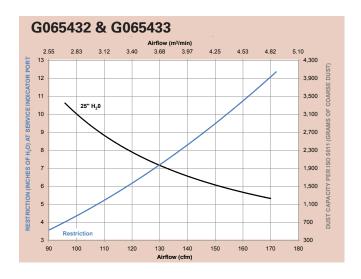






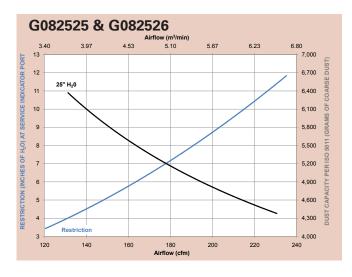

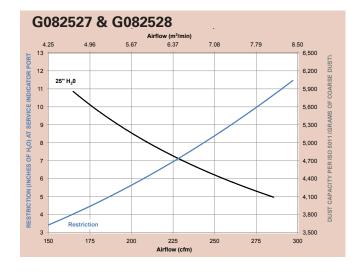


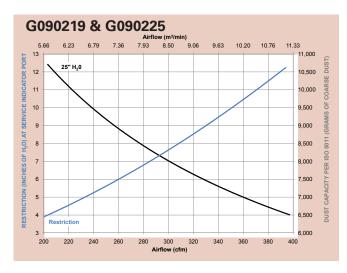







### continued — FPG Air Cleaner Performance Curves (Restriction & Dust Capacity)

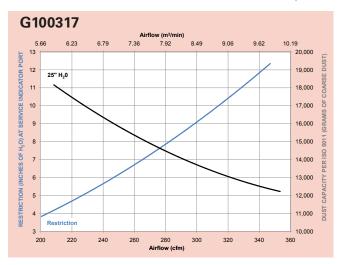

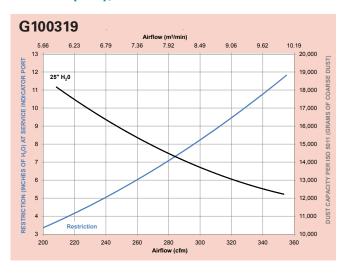

# 90° Elbow Outlet Model 1/8-27 NPT-B VACUATOR VALVE ELEMENT SERVICE

Straight Outlet Tube Model

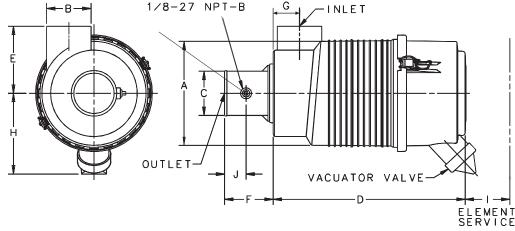

### **Application Notes**

- 1) Safety filters: All FPG models can accept safety filters. This table shows which air cleaner models are shipped with a safety filter installed. If you want to add a safety filter to an existing model that did not originally have one, order the safety filter listed in the Service Parts table.
- 2) Mounting band specifications and ordering information are on next page.
- 3) Inlet Hoods: A plastic inlet stack up to 18" (457mm) tall may be added, supporting a plastic inlet hood. See the Accessories section for information on optional inlet hoods and filter service indicators. Warning: Do not add a pre-cleaner or any intake accessory other than a lightweight inlet hood. Use of unapproved intake accessories will void your Donaldson warranty.

4) Service Indicators. See the Accessories section for information on filter service indicators.



### **FPG Specifications**

Air Cleaner Models	with Safety Filter?	Body Dia. (A)	Inlet Dia. (B)	Outlet Dia. (C)	Housing Length (D)	Inlet Height (E)	Outlet Length (F)	Inlet Loca- tion (G)	Center Line to Valve(H)	Service Clear. (I)	Weight Ibs kg	Restr. Tap Loc. (J)
MODELS WIT	TH 90° ELBO	OW OUTLET 1	UBE									
G042545	no	4.80"	1.75"	1.75"	7.45"	3.27"	1.23"	1.48"	3.96"	5.39"	1.3 lbs	1.94"
		122mm	44mm	44mm	189mm	83mm	31mm	38mm	101mm	137mm	0.6 kg	48mm
G057512	yes	5.75"	2.00"	2.00"	10.96"	3.82"	1.36"	1.65"	4.66"	10.68"	2.5 lbs	2.60"
	-	146mm	51mm	51mm	278mm	97mm	35mm	42mm	118mm	271mm	1.1 kg	66mm
G057514	no	5.75"	2.00"	2.00"	10.96"	3.82"	1.36"	1.65"	4.66"	7.95"	2.2 lbs	2.60"
		146mm	51mm	51mm	278mm	97mm	35mm	42mm	118mm	202mm	1.0 kg	66mm
G065411	yes	6.74"	2.50"	2.50"	12.61"	4.41"	1.60"	1.70"	5.35"	12.24"	3.9 lbs	3.06"
	•	171mm	64mm	64mm	320mm	112mm	41mm	43mm	136mm	311mm	1.8 kg	78mm
G065433	no	6.74"	2.50"	2.50"	12.61"	4.41"	1.60"	1.70"	5.35"	8.50"	3.5 lbs	3.06"
		171mm	64mm	64mm	320mm	112mm	41mm	43mm	136mm	216mm	1.6 kg	78mm
G070018	yes	7.19"	3.00"	3.00"	13.09"	4.88"	1.88"	1.72"	5.45"	12.50"	4.3 lbs	3.62"
	,	183mm	76mm	76mm	332mm	124mm	48mm	44mm	137mm	318mm	1.9 kg	92mm
G070020	no	7.19"	3.00"	3.00"	13.09"	4.88"	1.88"	1.72"	5.45"	8.87"	3.8 lbs	3.62"
		183mm	76mm	76mm	332mm	124mm	48mm	44mm	137mm	225mm	1.7 kg	92mm
G082526	yes	8.35"	3.75"	3.50"	14.23"	5.43"	2.11"	2.11"	6.01"	13.91"	5.8 lbs	4.13"
	,	212mm	95mm	89mm	361mm	138mm	54mm	54mm	153mm	353mm	2.6 kg	105mm
G082528	no	8.35"	3.75"	3.50"	14.23"	5.43"	2.11"	2.10"	6.01"	9.57"	5.2 lbs	4.13"
		212mm	95mm	89mm	361mm	138mm	54mm	53mm	153mm	243mm	2.3 kg	105mm
<b>MODELS WI</b>	TH STRAIG	GHT OUTLET	TUBE									
G042544	no	4.80"	1.75"	1.75"	7.45"	3.27"	3.24"	1.48"	3.96"	5.39"	1.3 lbs	1.88"
		122mm	44mm	44mm	189mm	83mm	82mm	38mm	101mm	137mm	0.6 kg	48mm
G057511	yes	5.75"	2.00"	2.00"	10.87"	3.82"	3.25"	1.65"	4.66"	10.68"	2.5 lbs	1.88"
	,	146mm	51mm	51mm	276mm	97mm	83mm	42mm	118mm	271mm	1.1 kg	48mm
G057513	no	5.75"	2.00"	2.00"	10.87"	3.82"	3.25"	1.65"	4.66"	7.95"	2.2 lbs	1.88"
		146mm	51mm	51mm	276mm	97mm	83mm	42mm	118mm	202mm	1.0 kg	48mm
G065424	yes	6.74"	2.50"	2.50"	12.61"	4.41"	3.23"	1.70"	5.35"	12.24"	3.9 lbs	1.63"
	,	171mm	64mm	64mm	320mm	112mm	82mm	43mm	136mm	311mm	1.8 kg	41mm
G065432	no	6.74"	2.50"	2.50"	12.61"	4.41"	3.23"	1.70"	5.35"	8.48"	3.5 lbs	1.63"
		171mm	64mm	64mm	320mm	112mm	82mm	43mm	136mm	216mm	1.6 kg	41mm
G070017	yes	7.19"	3.00"	3.00"	13.09"	4.88"	3.26"	1.72"	5.45"	12.50"	4.3 lbs	1.88"
	,	183mm	76mm	76mm	332mm	124mm	83mm	44mm	138mm	318mm	1.9 kg	48mm
G070019	no	7.19"	3.00"	3.00"	13.09"	4.88"	3.26"	1.72"	5.45"	8.87"	3.8 lbs	1.88"
		183mm	76mm	76mm	332mm	124mm	83mm	44mm	138mm	225mm	1.7 kg	48mm
G082525	yes	8.35"	3.75"	3.50"	14.23"	5.43"	3.27"	2.10"	6.01"	13.91"	5.8 lbs	1.91"
<b></b>	1	212mm	95mm	89mm	361mm	138mm	83mm	53mm	153mm	353mm	2.6 kg	49mm
G082527	no	8.35"	3.75"	3.50"	14.23"	5.43"	3.27"	2.10"	6.01"	9.57"	5.2 lbs	1.91"
		212mm	95mm	89mm	361mm	138mm	83mm	53mm	153mm	243mm	2.3 kg	49mm





### Mounting Bands Designed Exclusively for the FPG Series


WARNING: Do not use any other mounting bands or straps with FPG air cleaners. Use of an unapproved mounting band voids warranty.


### **Polymer Mounting Band**

The one-piece, high tech polymer mounting band will securely hold the housing in position. The band has tabs on the inside circumference which fit exactly into notches on the FPG housing. Donaldson polymer bands are completely non-corrosive, lightweight, easy to install, and economical.

The band tightens around the air cleaner when the base of the band is bolted to a support, providing a fixed, stable mounting — even in high vibration applications.


### Use on G04 and G05 FPG Air Cleaners.

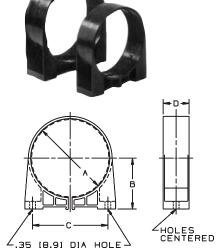

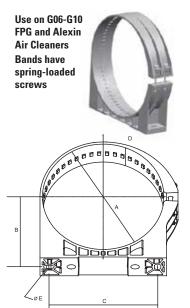

### **Metal Mounting Band**

The metal mounting band has a spring-loaded bolt at the top to maintain a constant hold on the housing throughout high and low temperature extremes.

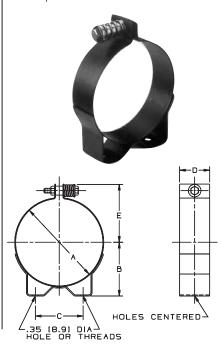

### **Maximum Torque**

Polymer Bands: 11 lbs-ft / 14.8 N•m

Metal Bands: 12 lbs-ft / 16.2 N•m

### **Application Note:**

To accommodate even hard-to-fit applications, polymer bands allow the air cleaner housings to be rotated and positioned at various increments, depending upon the size:

<b>Housing Diameter</b>	Increment
4.80" (122mm)	11°
5.75" (146mm)	10°
6.74" (171mm)	7.5°
7.19" (183mm)	7°
8.35" (212mm)	5°

### FPG Mounting Bands (Order one band per FPG air cleaner)


Part	P	١	I	В	(	C	D	)	Е		Weig	ght
Number	in	mm	in	mm	in	mm	in	mm	in	mm	lbs	kgrm
POLYMER	BANDS											
P777151	4.80	122	3.09	79	4.56	116	1.57	40	n/a	l	0.26	118
P777730	5.75	146	3.52	90	5.35	136	1.99	51	n/a	١	0.37	167
P778810	6.79	173	3.94	100	6.00	154	1.99	51	n/a	l	0.40	182
P777731	7.17	182	4.11	105	6.50	165	1.99	51	n/a	l	0.45	206
P777732	8.35	212	4.70	120	7.48	190	1.99	51	n/a	l	0.56	253
P7805321	9.48	241	5.47	136	5.63	143	1.99	51	n/a	l		
P7805941	10.55	268	5.90	150	5.63	143	3.15	80	n/a	l		
METAL BA	NDS											
H008442	4.80	122	3.07	78	2.76	70	1.57	40	3.34	85	0.70	317
H008443	5.75	146	3.54	90	3.15	80	1.99	51	3.83	97	1.30	590
H008441 <sup>2</sup>	6.79	173	3.94	100	3.54	90	1.99	51	4.35	111	1.40	635
H008444	6.79	173	3.94	100	3.54	90	1.99	51	4.35	111	1.40	635
H002070	7.19	183	4.09	104	3.74	95	1.99	51	4.55	116	1.50	680
H002023	8.35	212	4.72	120	4.33	110	1.99	51	5.14	131	1.60	726

- 1 Mounting bands (with spring-loaded screws) for FPG09 and FPG10 models with twist-off cover
- 2 Model H008441 has 8mm threads







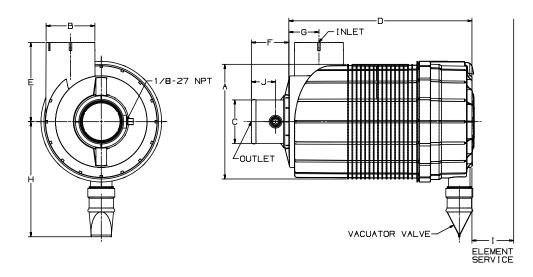


### **FPG ALEXIN™**

Air Cleaner Models	with Safety Filter?	Body Dia. (A)	Inlet Dia. (B)	Outlet Dia. (C)	Housing Length (D)	Inlet Height (E)	Outlet Length (F)	Inlet Loca- tion (G)	Center Line to Valve(H)	Service Clear. (I)	Weight lbs kg	Restr. Tap Loc. (J)
FPG ALEXIN™ MODELS WITH TWIST-OFF COVER (90° AND STRAIGHT OUTLET TUBES)												
G090219 <sup>1</sup>	yes	9.53" 242mm	4.50" 114mm	3.50" 89mm	15.75" 400mm	6.69" 170mm	2.11" 54mm	2.42" 62mm	10.44" 260mm	12.79" 325mm	8.8 lbs 4.0 kg	4.13" 105mm
G100317 <sup>1</sup>	yes	10.55" 268mm	4.50" 114mm	4.00" 102mm	16.85" 428mm	7.28" 185mm	2.37" 60mm	2.85" 73mm	10.60" 269mm	13.98" 355mm	11.1 lbs 5.1 kg	4.72" 120mm
G090225 <sup>2</sup>	yes	9.53" 242mm	4.50" 114mm	4.00" 102mm	15.75" 400mm	6.69" 170mm	3.43" 87mm	2.42" 62mm	10.04" 260mm	12.79" 325mm	8.7 lbs 3.9 kg	2.22" 57mm
G100319 <sup>2</sup>	yes	10.55" 268mm	4.50" 114mm	4.00" 102mm	16.85" 428mm	7.28" 185mm	3.45" 88mm	2.85" 73mm	10.60" 269mm	13.98" 355mm	10.9 lbs 4.9 kg	2.22" 57mm

<sup>1 -</sup> FPG Alexin Models with 90° outlet tube

### **FPG Service Parts**

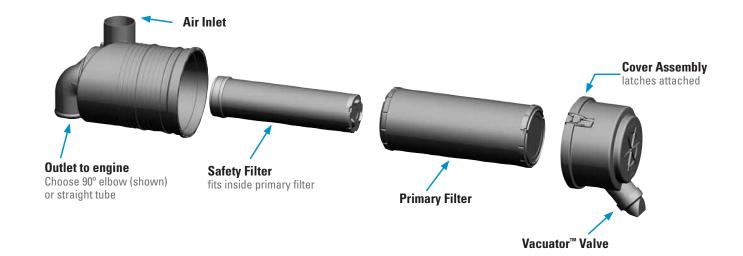

<sup>2 -</sup> FPG Alexin models with straight outlet tube





### **FPG Service Parts & Accessories**

G042544 & G042545	FPG
Cover	. P8226863 . P5353964 . X002277 . H002068
Mounting bands, metal Mounting Bands, plastic Outlet band clamp Vacuator™ Valve	. H008442 . P777151 . P115200

G057513 & G057514	FPG
Cover	P5337618
Elbow, 45°	. P105541
Elbow, 90°	. P105529
Filter, primary	. P8215753
Filter, safety	. P8228584
Informer™ indicator 25" H <sub>2</sub> O	. X002277
Inlet hood, plastic	
Latch	. P538928
Mounting bands, metal	. H008443
Mounting Bands, plastic	. P777730
Outlet band clamp	. P148337
Vacuator™ Valve	. P522958

G065411 & G065424	FPG
Cover	P5394228
Elbow, 45°	P105543
Elbow, 90°	P105531
Filter, primary	P8227683
Filter, safety	P8227693
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, plastic	H001378
Latch	P538928
Mounting bands, metal	H008441
	or H008444
Mounting Bands, plastic	
Outlet band clamp	P148339
Vacuator™ Valve	P158914

G065432 & G065433	FPG
Cover	P5394228
Elbow, 45°	P105543
Elbow, 90°	P105531
Filter, primary	P8227683
Filter, safety	P8227694
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H001378
Latch	P538928
Mounting bands, metal	H008441
	or H008444
Mounting Bands, plastic	P778810
Outlet band clamp	P148339
Vacuator™ Valve	P158914

G070017 & G070018	FPG
Cover	P5362028
Elbow, 45°	P105544
Elbow, 90°	
Elbow, 90° reducing	P123462
Filter, primary-Donaldson Blue™.	DBA5225
Filter, primary	P8276533
Filter, safety	P8293323
Hump hose	
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H001379
Latch	P538928
Mounting bands, metal	
Mounting Bands, plastic	P777731
Outlet band clamp	P148341
Vacuator™ Valve	P158914

G070019 & G070020	FPG
Clamp	P003951
Cover	P5362028
Elbow, 45°	P105544
Elbow, 90°	P105532
Elbow, 90° reducing	P123462
Filter, primary-Donaldson Blue™	DBA5225
Filter, primary	P8276533
Filter, safety	P8293324
Hump hose	
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H001379
Latch	P538928
Mounting bands, metal	H002070
Mounting Bands, plastic	P777731
Outlet band clamp	P148341
Vacuator™ Valve	P158914

G082525 & G082526	FPG
Cover	. P5340488
Elbow, 45°	. P109331
Elbow, 90°	. P114318
Filter, primary-Donaldson Blue™	. DBA5227
Filter, primary	. P8288893
Filter, safety	. P8293333
Hump hose	. P114319
Informer™ indicator 25" H <sub>2</sub> O	. X002277
Inlet hood, plastic	. H000466
Latch	. P538928
Mounting bands, metal	. H002023
Mounting Bands, plastic	. P777732
Outlet band clamp	
Vacuator™ Valve	. P158914



G082527 & G082528	FPG
Clamp	P102025
Cover	P5340488
Elbow, 45°	P109331
Elbow, 90°	P114318
Filter, primary-Donaldson Blue™	DBA5227
Filter, primary	P8288893
Filter, safety	P8293334
Hump hose	P114319
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H000466
Latch	P538928
Mounting bands, metal	H002023
Mounting Bands, plastic	P777732
Outlet band clamp	P148342
Vacuator™ Valve	P158914

G	J90219 & G090225*	FPG
Со	ver	P780524
Elb	ow, 45°	P105545
Elb	ow, 90°	P105533
Elb	ow, 90° reducing	P121482
Filt	er, primary-Donaldson Blue™	<b>DBA5226</b>
Filt	er, primary	P780522
	er, safety	
Hu	mp hose	P105609
Inf	ormer™ indicator 25" H <sub>2</sub> O	X002277
Inl	et hood, metal	H000170
Inl	et hood, plastic	H000468
Mo	ounting Bands, plastic	P780532
0u	tlet band clamp	P148343
Va	cuator™ Valve	P776008

G100317 & G100319*	FPG
Cover	. P780578
Elbow, 45°	. P105545
Elbow, 90°	. P105533
Elbow, 90° reducing	. P121482
Filter, primary-Donaldson Blue™	. DBA5228
Filter, primary	. P781039
Filter, safety	
Hump hose	. P105609
Informer™ indicator 25" H <sub>2</sub> O	. X002277
Inlet hood, metal	. H000170
Inlet hood, plastic	. H000468
Mounting Bands, plastic	
Outlet band clamp	
Vacuator™ Valve	. P776008

### NOTES:

- 3 = Shipped with air cleaner initially
- 4 = Safety filter is designed to fit this air cleaner, but was not originally shipped with it (note that adding a safety filter will decrease the maximum airflow throughput)
- throughput)

  8 = Cover assembly includes latches but no
  Vacuator™ Valve

Donaldson Blue™ = High Efficiency, Extended Service

\* = FPG Alexen models with twist off cover design (no latches)

# FPG & FPG Alexin<sup>™</sup>Air Cleaners Service Instructions



This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

Check the Restriction

Replace the filter only when the restriction level has reached the maximum recommended by the engine or equipment manufacturer or on a regular service schedule.



Clean Out the Vacuator™ Valve

If your air cleaner is equipped with a Vacuator™

Valve, visually check and physically squeeze it.

Make sure the valve is flexible and not inverted, damaged or plugged.







Remove the Primary filter

Shut off the engine. Unfasten or unlatch the service cover. For the FPG Alexin™ models, the cover is unlocked with a yellow "finger," twisted to the left and removed from the filter housing.

The RadialSeal™ filter fits tightly over the outlet tube and there will be some initial resistance, similar to breaking the seal on a jar. Gently move the end of the filter back and forth to break the seal, then rotate while pulling straight out. Avoid knocking the filter against the housing.





# Visually Check the Safety Filter and Clean Both Surfaces of the Outlet Tube

If your air cleaner has a safety filter, visually check it while in place for signs of damage. Do not remove the safety filter unless it is damaged or due for replacement. Also verify that the safety filter is properly seated in the housing.

The safety filter should be replaced every three primary filter changes. Use a clean damp cloth to wipe both the filter sealing surface and the inside of the outlet tube. Ensure that the outlet tube sealing area is undamaged.

Contaminant on the sealing surface could hinder an effective seal and cause leakage. If the safety filter is to be replaced, avoid leaving the outlet tube exposed to the air. If there is to be a delay in installing the new safety filter, cover the air cleaner outlet tube to avoid admitting any dust.





Continued on next page



### FPG & FPG Alexin<sup>™</sup>Air Cleaners Service Instructions



5

### **Inspect the Old Filter**

Inspect the old filter for any signs of leaks. A streak of dust on the clean side of the filter is a telltale sign. Eliminate any source of air leaks before installing the new primary filter.



### **Inspect the New Filter**

Inspect the new filter for any damage that may have occurred through mishandling. NEVER install a damaged filter. Visually check the inside of the open end, which is the sealing area.

Do not wipe the filter RadialSeal™ sealing area. Donaldson RadialSeal™ filters have an invisible dry lubricant on the seal to aid installation.



7

### **Insert the New Filter**

First, if you're servicing the safety filter at this change-out, seat it properly into position before installing the primary filter. Insert new filters carefully. Seat the primary filter by hand, making certain it is inserted completely into the air cleaner housing. To complete a tight seal, apply pressure by hand at the outer rim of the filter, not the flexible center.

No cover pressure is required to hold the seal in place and you should NEVER use the service cover to apply pressure. This could damage the housing and fasteners and void the warranty. If the service cover presses against the filter before the cover is fully in place, remove the cover. With the cover off, push the filter farther into the air cleaner by hand and then the cover will go on with no extra force. Once the filter is in place, secure the service cover.

For FPG Alexin™ models, twist the cover to the right until it stops, then push the yellow "finger" in to lock.









If you perform filter maintenance service on a schedule versus using service indicators, you may want to write the service date on the end cap of both filters.

8

### **Check Connectors for Tight Fit**

Make sure service indicators are reset and in proper working order. Check that all mounting bands, clamps, bolts, and connections in the entire air cleaner system are tight. Check for holes in piping and repair or replace as needed. Any leaks in the intake piping will admit dust directly to the engine. Reset the filter service indicator





**106** • Engine Air Filtration





### **Superior Protection for Larger Engines**

### RadialSeal™ Sealing Technology Means Reliable Filtration and Quicker Service

The Donaldson two-stage FRG RadialSeal™ air cleaners provide improved reliability, better durability and reduced weight compared to axial seal style air cleaner designs. Choose from more than 20 air cleaners that work in airflow ranges of 82 to 1600 cfm.

### **Two-Stage Filtration**

Both Style A and B have an integral pre-cleaning stage that separates up to 85% of the incoming dust. The primary filter stops the rest, resulting in engine air that is 99.99% free of dust.



Donaldson FRG Air Cleaners and Duramax hydraulics filters deliver superior filtration to pump-and-engine rigs used in the oil and gas industry.



The two-stage FRG Air Cleaner in operation on a Prentice 490 Skidder.



The FRG Air Cleaner on this Tyler Ag Sprayer eliminates 99.99% of the dirt from the engine airstream, while providing up to 945 cfm airflow to the engine.



### FRG Air Cleaners



### **Durable, Vibration Resistant**

### Variety of Sizes in Two Separate Housing Styles

### **Applications**

- Horizontal installation
- Medium and heavy dust environments
- Style A From 82 to 795 cfm airflow throughput per air cleaner in body diameters ranging from 5" to 16" (127 - 406mm)
- **Style B** From 270 to 1390 cfm airflow throughput per air cleaner in body diameters ranging from 10" to 18" (254 - 457mm)

### **Ideal for**

- Construction equipment
- Agricultural machinery
- Mining equipment
- · Off-highway vehicles

### **Air Cleaner Features**

- Two-stage filter system: the first stage removes up to 85% of incoming dust
  - The first stage in the Style A uses the angled vanes on the primary
  - The first stage in the Style B has a tangential air inlet
- Inlet on side, outlet on end (G flow)
- Already tapped to accept filter service indicator
- Vacuator™ Valve automatically releases the pre-cleaned dust
- Durable, long-lasting finish
  - Style A housing is metal and coated with a black, corrosion- and chemical-resistant polymer paint (service cover is accessed with clamp and bolt)
  - Style B is comprised of two materials: injection molded, high strength polymer service cover and a metal body (the service cover is accessed by latches)
- Mounting the unit directly to the engine is not recommended; excessive engine vibration can cause premature air cleaner structural failure

### FRG Style A

The FRG Style A series replaces Donaldson's obsolete FHG series in size and airflow capacity.



outside, this new style housing is equipped with a RadialSeal™ style primary filter and an optional safety filter. Easy to service; one wing-bolt clamp to undo to access filter(s).

### **Filter Features**

The RadialSeal™ filter inside the air cleaner is also guite different from Axial filters. Its one-piece, molded urethane endcaps encase the filter media and liners. thereby reducing the number of components and increasing sealing reliability.

The inside surface of the filter's open end is the sealing surface, which eliminates the glued-on gasket found on the metal end cap of Axial filters. For added engine protection during filter service, consider a model with a safety filter.

High efficiency, extended service, Donaldson Blue™ filters are available on some models (see service parts list on pages 116 and 117 for part numbers)

### FRG Style B

The FRG Style B series replaces Donaldson's obsolete FTG series in size and airflow capacity.



### **Accessories**

Donaldson intake accessories for your FRG Air Cleaner can help overcome or prevent various problems. For instance:

- If the installed air cleaner will be exposed to rain, snow or debris. an inlet cap can prevent moisture ingestion.
- A filter service indicator measures the airflow restriction across the filter and indicates when to replace the filter (see Accessories section of this catalog).
- Mounting bands for FRGs must be ordered separately.

### **FRG Mounting Bands**


- Two mounting bands are required for proper FRG installation (see service parts listing in this section).
- Durable, corrosion resistant, galvanized steel construction.
- Engineered and tested to resist the adverse effects of
- Mounting band feet are designed to continuously ensure maximum torque pressure.
- Dimensional information for mounting bands can be found in the accessories section.



**108** • Engine Air Filtration





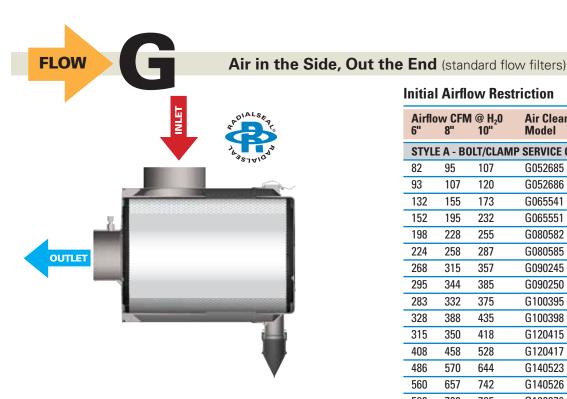


### When Selecting an Air Cleaner . . .

Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table at right. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.

### **Initial Airflow Restriction**

Airflow CFM @ H <sub>2</sub> 0 6" 8" 10"			Air Cleaner Model	Weig lbs	jht kg			
STYLE A - BOLT/CLAMP SERVICE COVER								
82	95	107	G052685	5.5	2.5			
93	107	120	G052686	5.2	2.4			
132	155	173	G065541	7.6	3.4			
152	195	232	G065551	7.1	3.2			
198	228	255	G080582	11.0	5.0			
224	258	287	G080585	10.5	4.8			
268	315	357	G090245	13.1	5.9			
295	344	385	G090250	12.1	5.5			
283	332	375	G100395	30.1	13.7			
328	388	435	G100398	28.6	13.0			
315	350	418	G120415	26.5	12.0			
408	458	528	G120417	28.1	12.7			
486	570	644	G140523	34.9	15.8			
560	657	742	G140526	33.3	15.1			
590	700	795	G160679	41.7	18.9			
STYLE	B - LA	TCH SER	VICE COVER					
270	305	340	G100297	12.0	5.4			
300	360	400	G110214	13.1	5.9			
370	430	490	G110206	17.5	8.0			
440	510	570	G130107	20.6	9.3			
520	590	655	G130097	25.0	11.4			
715	805	945	G150092	30.0	13.6			
1040	1230	1390	G180031	44.0	20.0			

### **FRG Air Cleaner Performance Curves (Restriction & Dust Capacity)**

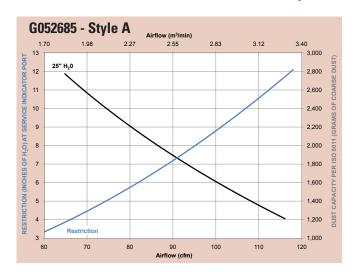







### FRG Air Cleaners




### continued - FRG Air Cleaner Performance Curves (Restriction & Dust Capacity)



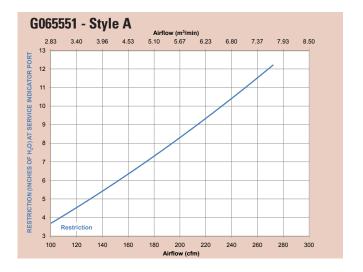

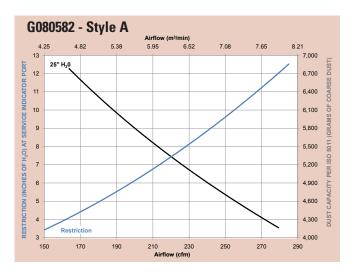

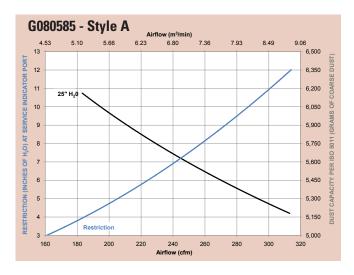











### continued — FRG Air Cleaner Performance Curves (Restriction & Dust Capacity)




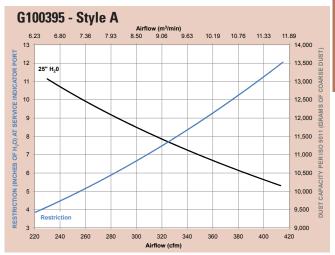

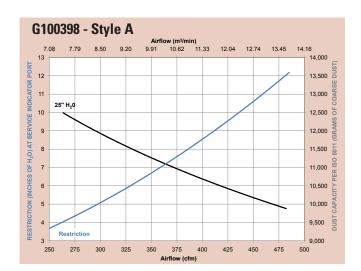





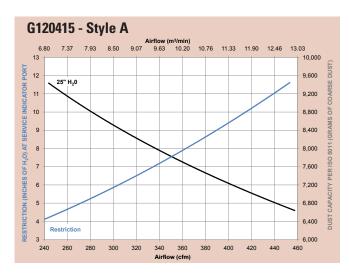




### FRG Air Cleaners




### continued - FRG Air Cleaner Performance Curves (Restriction & Dust Capacity)

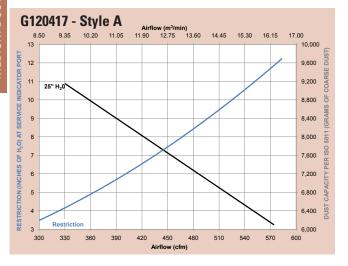








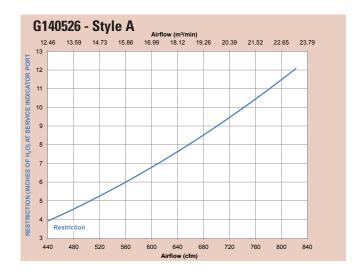

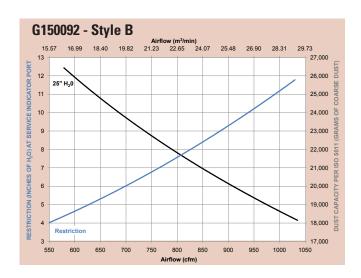






### continued — FRG Air Cleaner Performance Curves (Restriction & Dust Capacity)






### **FRG Specification Illustrations**

Style B — Latch Service Cover (Style A on next page)

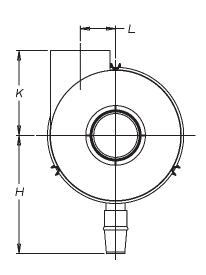

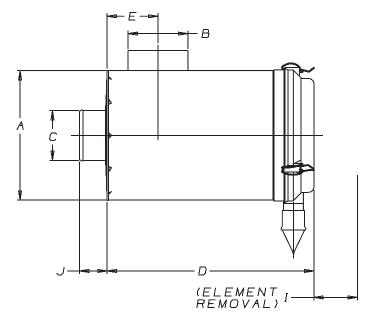

### FRG Specifications (Style B)

Air Cleaner	Boo Diam (A	eter	Dian (I	let neter 3)	Dian ((	tlet neter C)	Hous Leng (D	gth	Inl Loca (E	tion	Center to Va (H	lve	Servi Cleara (I)	ince	Out Leng (J	gth	Inlo Lenç (K	yth	Offset Loca (L	tion
Models	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm
STYLE B -	STYLE B - LATCH SERVICE COVER																			
G100297	10.2	259	4.5	114	4.0	102	16.93	430	3.54	90	10.63	270	15.00	373	2.59	66	8.07	205	2.81	72
G110214	11.0	279	5.0	127	4.5	114	13.78	350	4.13	105	10.81	275	17.00	428	2.64	67	7.50	191	2.96	75
G110206	11.0	279	5.0	127	4.5	114	19.28	490	4.13	105	10.81	275	17.00	428	2.64	67	7.50	191	2.96	75
G130107	13.0	330	6.0	152	5.0	127	16.73	425	5.22	132	11.85	301	18.00	450	2.64	67	8.50	216	3.54	90
G130097	13.0	330	6.0	152	5.0	127	20.87	530	5.22	132	11.85	301	18.00	450	2.64	67	8.50	216	3.54	90
G150092	15.0	381	7.0	178	6.0	152	20.87	530	5.51	140	13.31	338	19.00	482	2.75	70	9.50	241	4.03	102
G180031	18.0	457	8.0	203	8.0	203	25.60	650	5.04	128	15.80	402	28.62	600	3.35	85	11.42	290	5.05	128





### FRG Air Cleaners



### FRG Specification Illustrations

Style A — Bolt/Clamp Service Cover

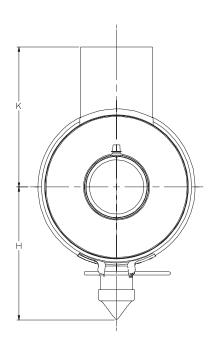

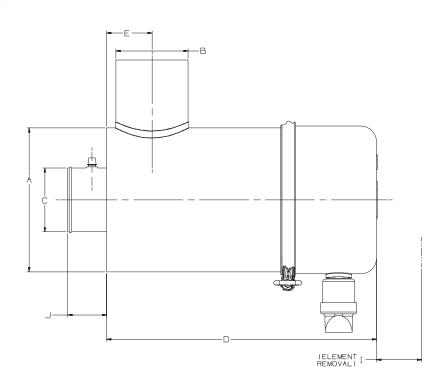

### FRG Specifications (Style A)


Air Cleaner Models	Boo Diamo (A in	eter	Inl Diam (B in	eter	Out Diam (C in	eter	Hous Lenç (D in	jth .	Inl Loca (E in	tion	Center to Va (H in	lve	Serv Cleara (I) in	ance	Out Len (J in	gth	Inlo Lenç (K in	gth
STYLE A -	BOLT/CI	LAMP	SERVIC	E COVE	R													
G052685	5.25	133	2.50	64	2.50	64	14.76	375	2.06	52	6.36	162	9.80	249	2.30	58	4.97	126
G052686	5.25	133	2.50	64	2.50	64	14.76	375	2.06	52	6.36	162	9.80	249	2.30	58	4.97	126
G065541	6.55	166	3.00	76	3.00	76	15.44	392	1.92	49	6.28	160	12.31	313	2.22	56	6.38	162
G065551	6.55	166	3.00	76	3.00	76	15.44	392	1.92	49	6.28	160	12.31	313	2.22	56	6.38	162
G080582	8.00	203	3.75	95	3.50	89	15.84	402	2.38	60	7.96	202	12.44	316	2.46	62	7.25	184
G080585	8.00	203	3.75	95	3.50	89	15.84	402	2.38	60	7.96	202	12.44	316	2.46	62	7.25	184
G090245	9.00	229	4.50	114	4.00	102	16.90	429	2.84	72	8.27	210	16.90	429	2.43	62	8.75	222
G090250	9.00	229	4.50	114	4.00	102	16.90	429	2.84	72	8.27	210	16.90	429	2.43	62	8.75	222
G100395	10.19	259	4.50	114	5.00	127	21.03	534	3.38	86	8.96	228	13.06	332	2.10	53	8.09	205
G100398	10.19	259	4.50	114	5.00	127	21.03	534	3.38	86	8.96	228	13.06	332	2.10	53	8.09	205
G120415	12.00	305	5.00	127	5.00	127	19.06	484	4.69	119	9.62	244	9.10	231	2.28	58	8.92	227
G120417	12.00	305	5.00	127	5.00	127	19.06	484	4.69	119	9.62	244	9.10	231	2.28	58	8.92	227
G140523	14.00	356	6.00	152	6.00	152	22.06	560	5.28	134	10.72	272	12.10	307	2.26	57	10.12	257
G140526	14.00	356	6.00	152	6.00	152	22.06	560	5.28	134	10.72	272	12.10	307	2.26	57	10.12	257
G160679	16.00	406	7.00	178	7.00	178	24.04	611	5.76	146	11.72	298	14.10	358	2.29	58	12.00	305






### **FRG Service Parts**

### Style A — Bolt/Clamp Service Cover

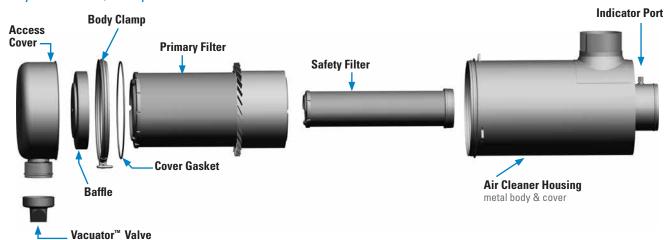

### Style B — Latch Service Cover

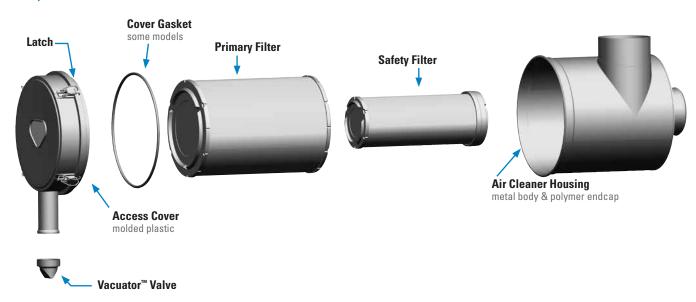

### **FRG Service Parts & Accessories**

G052685 FRG Style	A
Clamp	P002904
Cover	P120279
Elbow, 45°	P105543
Elbow, 90°	P105531
Filter, primary	P6000433
Filter, safety	P6000473
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H001378
Mounting band	P0023482
Mounting bands, metal	P002348
Outlet band clamp	P148339
Vacuator <sup>™</sup> Valve	P158914

G052686 FRG Style A	
Clamp P002904	
Cover P120279	
Elbow, 45° P105543	
Elbow, 90° P105531	
Filter, primary P600043	3
Filter, safety (optional)P600047	
Informer™ indicator 25" H <sub>2</sub> O X002277	
Inlet hood, plasticH001378	
Mounting band P002348	2
Outlet band clamp P148339	
Vacuator™ Valve P158914	

### **SERVICE PARTS NOTES:**

- 2 = Two required for proper installation
- 3 = Shipped with air cleaner initially
- 8 = Cover assembly includes latches but no Vacuator™ Valve

  Donaldson Blue™ = High Efficiency,

**Extended Service** 



### FRG Air Cleaners



### G065541 FRG Style A

Clamp	. P002940
Cover	. P522133
Elbow, 45°	. P105544
Elbow, 90°	. P105532
Elbow, 90° reducing	. P123462
Filter, primary	. P5492713
Filter, safety	. P5492773
Hump hose	. P105608
Informer™ indicator 25" H <sub>2</sub> 0	. X002277
Inlet hood, plastic	. H001379
Mounting band	. P0071912
Outlet band clamp	. P148341
Vacuator™ Valve	

### G065551 FRG Style A

Clamp	P002940
Cover	P522133
Elbow, 45°	P105544
Elbow, 90°	P105532
Elbow, 90° reducing	P123462
Filter, primary	P5492713
Filter, safety (optional)	P549277
Hump hose	P105608
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H001379
Mounting band	P0071912
Outlet band clamp	P148341
Vacuator™ Valve	P158914

### G080582 FRG Style A

01	D0000E4
Clamp	P003951
Cover	P600321
Elbow, 45°	P109331
Elbow, 90°	P114318
Filter, primary-Donaldson Blue™.	DBA5223
Filter, primary	P6014373
Filter, safety	P6014763
Hump hose	P114319
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H000466
Mounting band	P0043072
Outlet band clamp	P148342
Vacuator™ Valve	P158914

### G080585 FRG Style A

Cover	P600321
Elbow, 45°	P109331
Elbow, 90°	P114318
Filter, primary-Donaldson Blue™.	DBA5223
Filter, primary	P6014373
Filter, safety (optional)	P601476
Hump hose	P114319
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H000466
Mounting band	P0043072
Outlet band clamp	P148342
Vacuator™ Valve	P158914

### G090245 FRG Style A

Clamp P10	2025
Cover P60	0657
Elbow, 45° P10	5545
Elbow, 90° P10	5533
Elbow, 90° reducing P12	1482
Filter, primary-Donaldson Blue™ DB	A5224
Filter, primary P60	12803
Filter, safetyP60	12863
Hump hose P10	5609
Informer™ indicator 25" H <sub>2</sub> 0 X00	
Inlet hood, metal H00	0170
Inlet hood, plasticH00	0468
Mounting band P00	40732
Outlet band clampP14	
Vacuator™ Valve P15	

### G090250 FRG Style A

P600657
P105545
P105533
P121482
DBA5224
P6012803
P601286
P105609
X002277
H000170
H000468
P0040732
P148343
P158914

### G100297 FRG Style B

Cover	P5382008
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	P121482
Filter, primary-Donaldson Blue™	DBA5228
Filter, primary	P7810393
Filter, safety	P7776393
Gasket, cover	
Hump hose	P105609
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H000467
Latch	P777366
Mounting band	P0040762
Outlet band clamp	P148343
Vacuator <sup>™</sup> Valve	P776008

### G100395 FRG Style A

Baffle, metal	P602211
Clamp	P106071
Dust cup/cover	
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Filter, primary-Donaldson Blue	e™ DBA5222
Filter, primary	P6017903
Filter, safety (optional)	P7776393
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000170
Inlet hood, plastic	
Mounting band	P0040762
0-ring	
Outlet band clamp	P148345
Vacuator™ Valve	P103198

### G100398 FRG Style A

Baffle, metal	P602211
Clamp	P106071
Dust cup/cover	
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Filter, primary-Donaldson Blue™	DBA5222
Filter, primary	
Filter, safety (optional)	
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000170
Inlet hood, plastic	
Mounting band	
Mounting bands, metal	
0-ring	
Outlet band clamp	
Vacuator™ Valve	P103198

### G110206 FRG Style B

Cover	P5384528
Elbow, 45°	P114316
Elbow, 90°	P113733
Filter, primary-Donaldson Blue™	DBA5105
Filter, primary - ES & HE	EAF5105
Filter, primary - SM	P5329663
Filter, safety	P5337813
Gasket, cover	P526676
Hump hose	P114317
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000165
Inlet hood, plastic	H000469
Latch	P536439
Mounting band	P0040792
Outlet band clamp	P148344
Vacuator™ Valve	P158914

### G110214 FRG Style B

-	
Cover	P5384528
Elbow, 45°	P114316
Elbow, 90°	P113733
Filter, primary-Donaldson Blue™	DBA5230
Filter, primary	P5364573
Filter, safety	P5364923
Gasket, cover	P526676
Hump hose	P114317
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000170
Inlet hood, plastic	
Latch	P536439
Mounting band	
Outlet band clamp	P148344
Vacuator™ Valve	D



### G120415 FRG Style A

Baffle, metal	P106329
Clamp	P121067
Dust cup/cover	P109296
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Filter, primary-Donaldson Blue™	DBA5231
Filter, primary	P6017673
Filter, safety	
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000165
Inlet hood, plastic	H000469
Mounting band	H0003492
0-ring	P017804
Outlet band clamp	
Vacuator™ Valve	P103198

### G120417 FRG Style A

Baffle, metal	P106329
Clamp	P121067
Dust cup/cover	
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Filter, primary-Donaldson Blue™	DBA5231
Filter, primary	P6017673
Filter, safety (optional)	
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000165
Inlet hood, plastic	H000469
Mounting band	H0003492
0-ring	P017804
Outlet band clamp	
Vacuator™ Valve	P103198

### G130097 FRG Style B

Cover	P5471398
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Filter, primary-Donaldson Blue™	' DBA5221
Filter, primary	P5378763
Filter, safety	
Gasket, cover	P537699
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000165
Inlet hood, plastic	H000469
Latch	P776033
Mounting band	P0137222
Outlet band clamp	P148345
Vacuator™ Valve	P776008

### G130107 **FRG Style B**

-	
Cover	. P5471398
Elbow, 45°	. P109021
Elbow, 90°	. P107844
Elbow, 90° reducing	. P143895
Filter, primary-Donaldson Blue™	. DBA5220
Filter, primary	. P5325033
Filter, safety	. P5325043
Gasket, cover	. P537699
Hump hose	. P105610
Informer™ indicator 25" H <sub>2</sub> 0	. X002277
Inlet hood, metal	. H000165
Inlet hood, plastic	. H000469
Latch	. P776033
Mounting band	. P0137222
Outlet band clamp	. P148345
Vacuator™ Valve	. P776008

### FRG Style A G140523

Baffle, metalClamp	
Dust cup/cover	
Elbow, 45°	
Elbow, 90°	
Filter, primary-Donaldson Blue™.	DBA5220
Filter, primary	P5325033
Filter, safety	P5325043
Hump hose	P105612
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000275
Inlet hood, plastic	H000606
Mounting band	H0003502
0-ring	
Outlet band clamp	P148347
Vacuator™ Valve	P103198

### G140526 **FRG Style A**

Baffle, metal	P106771
Clamp	P100866
Dust cup/cover	P109297
Elbow, 45°	P105547
Elbow, 90°	
Filter, primary-Donaldson Blue™.	DBA5220
Filter, primary	P5325033
Filter, safety (optional)	P532504
Hump hose	P105612
Informer <sup>™</sup> indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000275
Inlet hood, plastic	H000606
Mounting band	H0003502
0-ring	P017335
Outlet band clamp	
Vacuator™ Valve	P103198

### G150092 **FRG Style B**

Cover	P7779208
Elbow, 45°	P105547
Elbow, 90°	P105535
Filter, primary-Donaldson Blue™	DBA5116
Filter, primary	P7778683
Filter, safety	
Hump hose	P105612
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000339
Inlet hood, plastic	H000607
Latch	P776033
Mounting band	P0168452
Outlet band clamp	P148347
Vacuator™ Valve	P776008

### G160679 **FRG Style A**

· ·	
Baffle, metal	P106637
Clamp	P100789
Dust cup/cover	
Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary-Donaldson Blue™.	DBA5229
Filter, primary	P5495233
Filter, safety	P5495303
Hump hose	P105613
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000339
Inlet hood, plastic	H000607
Mounting band	H0003512
0-ring	P017336
Outlet band clamp	
Vacuator™ Valve	P103198

### G180031 **FRG Style B**

Cover	P783185
Elbow, 45°	P112606
Elbow, 90°	P112605
Filter, primary-Donaldson Blue™.	DBA5156
Filter, primary	P7810983
Filter, safety	P7811023
Hump hose	P112608
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H001053
Mounting band	H7700372
Outlet band clamp	P148349
Vacuator™ Valve	P105220

### **SERVICE PARTS NOTES:**

- 2 = Two required for proper installation
- 3 = Shipped with air cleaner initially 7 = Included with each replacement filter
- 8 = Cover assembly includes latches, but no Vacuator Valve.

Donaldson Blue™ = High Efficiency, Extended Service



# FRG Air Cleaners Service Instructions



This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

### Check the Restriction

Replace the filter only when the restriction level has reached the maximum recommended by the engine or equipment manufacturer or on a regular service schedule.



# Remove the Primary Filter and check the Vacuator™ Valve

Shut off the engine. Unfasten or unlatch the service cover.

Because of its RadialSeal, the filter fits tightly over the outlet tube and there will be some initial resistance, similar to breaking the seal on a jar. Gently move the end of the filter back and forth to break the seal then rotate while pulling straight out. Avoid knocking the filter against the housing.

If your air cleaner is equipped with a Vacuator™ Valve, visually check and physically squeeze it.















Make sure the valve is flexible and not inverted, damaged or plugged. Replace it if damaged or if it looks like any of these images. A damaged or missing vac valve will disrupt the designed flow of air through the air cleaner.

# Wisually Check the Safety Filter and Clean Both Surfaces of the Outlet Tube

If your air cleaner has a safety filter, visually check the safety filter in place for signs of damage. Do not remove the safety filter unless it is damaged or due for replacement. Also verify that the safety filter is properly seated in the housing.

The safety filter should be replaced every three primary filter changes. Use a clean damp cloth to wipe both the filter sealing surface and the inside of the outlet tube. Ensure that the outlet tube sealing area is undamaged.

Contaminant on the sealing surface could hinder an effective seal and cause leakage. If the safety filter is to be replaced, avoid leaving the outlet tube exposed to the air.

If there is to be a delay in installing the new safety filter, cover the air cleaner outlet tube to avoid admitting any dust.













4

### **Inspect the Old Filter**

Inspect the old filter for any signs of leaks. A streak of dust on the clean side of the filter is a telltale sign.
Eliminate any source of air leaks before installing the new primary filter.





5

### **Inspect the New Filter**

Inspect the new filter for any damage that may have occurred through mishandling. NEVER install a damaged filter. Visually check the inside of the open end, which is the sealing area.

Do not wipe the filter RadialSeal™ area as the new Donaldson RadialSeal filter may have a dry lubricant on the seal to aid installation.





6

### **Insert the New Filter**

First, if you're servicing the safety filter at this change-out, seat it properly into position before installing the primary filter. Insert new filters carefully. Seat the primary filter by hand, making certain it is inserted completely into the air cleaner housing. To complete a tight seal, apply pressure by hand at the outer rim of the filter, not the flexible center.

No cover pressure is required to hold the seal in place and one should NEVER use the service cover to apply pressure. This could damage the housing and fasteners and void the warranty. If the service cover presses against the filter before the cover is fully in place, remove the cover. With cover off, push the filter farther into the air cleaner by hand and then the cover will go on with no extra force. Once the filter is in place, secure the service cover.







Continued on next page

# FRG Air Cleaners Service Instructions



# 7 Check Inlet Hoods and Pre-Cleaners

Check any intake hoods and precleaner devices during maintenance routines.

A missing inlet hood will significantly shorten filter life. If your unit had a hood or pre-cleaner originally, make sure you replace it. Check openings and tubes on pre-cleaners to make sure they are not plugged. Replace any units that are damaged. Damaged or dented units will not operate properly.





### Check Connectors for Tight Fit

Make sure service indicators are reset and in proper working order.

Check that all mounting bands, clamps, bolts, and connections in the entire air cleaner system are tight

Check for holes in piping, and repair or replace as needed.

Any leaks in the intake piping will admit dust directly to the engine.









### **Under Hood Mount, Two-Stage Filtration**

### For Large Construction & Mining Equipment

The FTG Cycloflow™ Air Cleaner is another two-stage air cleaner with a built-in pre-cleaner. This air cleaner has axial seal style filters. The FTG is typically mounted under hood with the service cover on the outside for access.

### **Applications**

- Allows 32-59 m³/min. airflow throughput per air cleaner
- Horizontal installation
- Sustained temperature tolerance: to 82 °C

### **Ideal** for

- Large industrial and construction equipment: crawler tractors, crane loaders, excavators and air compressors with large engines operating in severe dust environments
- Agricultural machinery
- Mining equipment
- Oil and gas hydraulic fracturing (fracking) equipment
- Off-highway vehicles

### **Air Cleaner Features**

- Unique, flared inlet allows maximum airflow with low restriction
- 21" body diameter
- Two-stage filter system the first stage removes up to 85% of incoming dust with a tangential air inlet
- Inlet on side, outlet on end (G flow)
- Already tapped to accept filter service indicator (1/8"-27 NPT male)
- Safety filter protects engine inlet during filter change out
- Vacuator<sup>™</sup> Valve automatically releases the pre-cleaned dust
- Housing is metal and coated with a black, corrosion- and chemicalresistant polymer paint
- Mounting the unit directly to the engine is not recommended; excessive engine vibration can cause premature air cleaner structural failure



### **Accessories**

- Mounting bands (order separately).
- If the installed air cleaner will be exposed to rain, snow or debris, an **inlet cap** can prevent moisture ingestion.
- A service indicator measures the airflow restriction across the filter, thereby showing how much useful life the filter has left and when to replace the filter (see Accessories section of this catalog).

Note: Outlet tapped to accept filter service indicator (1/8"-27 NPT male).



**Primary Filter** 





### When Selecting an Air Cleaner . . .


Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table below. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.

The only difference in these two models is the position of the inlet on the air cleaner body. For location and dimensions, see details on next page.

### **Initial Airflow Restriction**

Airflo	w CFM 8"	@ H <sub>2</sub> 0 10"	Air Cleaner Models	We lbs	ight kg	
1465	1680	1870	G210007 / G210010	88	40	

### FTG Air Cleaner Performance Curves (Restriction & Dust Capacity)

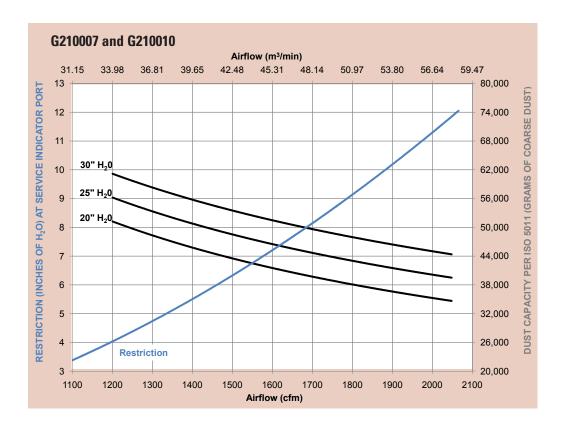


Inlet on LEFT side of body






### **FTG Specification Illustrations**

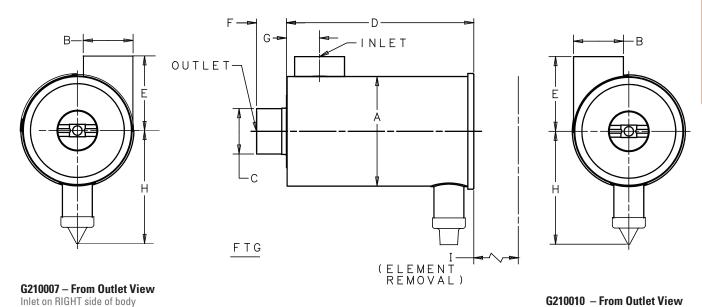

**FTG Specifications** 

Air Cleaner Models	Boo Diam (A in	eter	Inlo Diam (B in	eter	Out Diam (C in	eter	Hous Leng (D in	yth 💮	Inlo Locat (E in	tion	Center to Va (H) in	lve	Serv Clear (I in		Outl Leng (F) in	jth
G210007	21.00	546	10.00	254	10.00	254	24.13	613	13.00	330	17.40	442	24.13	613	3.54	90
G210010	21.00	546	10.00	254	10.00	254	24.13	613	13.00	330	17.40	442	24.13	613	3.54	90

### **FTG Service Parts**

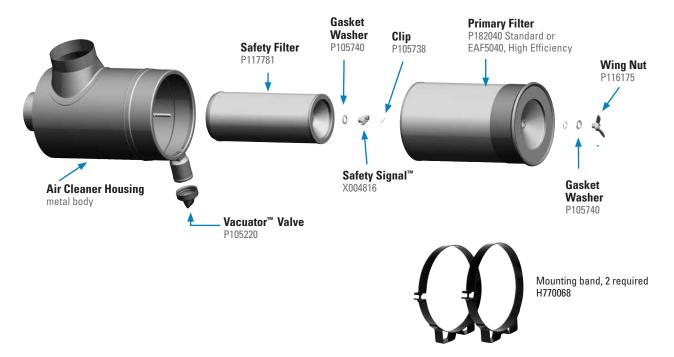

# FTG & FVG Air Cleaners Service Instructions



This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

Check the Restriction

Check the restriction level of the air cleaner filter service indicator. Replace the filter only when the restriction level has reached the maximum recommended by the engine or equipment manufacturer or on a regular service schedule.



Clean Out the Vacuator™ Valve

Remove the Vacuator Valve and clean out any dust found in the drop tube. Reinstall Vacuator Valve or replace if found worn or damaged.











Make sure the valve is flexible and not inverted, damaged or plugged. Replace it if damaged or if it looks like any of these images. A damaged or missing Vacuator Valve will disrupt the designed flow of air through the air cleaner.

Gently Remove the Old Filter

Shut off the engine. Loosen and retain the wing nut bolt, remove bolt and washer. Replace both if damaged or worn.

Using the metal handle, pull the dirty filter gently from the housing. Accidental bumping will shake dirt loose inside the filter housing.



Visually Check the Safety Filter

Visually check the safety filter without removing it. Replace if damaged or every three primary filter changes. Also verify that the safety filter is properly seated in the housing.

If the safety filter is to be replaced, it should be done immediately or the clean air outlet should be sealed. Use a clean cloth to avoid contaminant being introduced to the engine during service





Always Clean the Inside of the Housing Dirt left in the air cleaner housing is harmful to your engine.

Use a clean, damp cloth to wipe the inside of the housing before fitting the new filter.

Block the outlet tube of the air cleaner with a small dampened towel prior to cleaning the seal surface to avoid contaminating the induction system.



Clean the Gasket Sealing Surfaces 6

An improper gasket seal is one of the most common causes of engine contamination. Make sure that all hardened dirt ridges are completely removed, both on the bottom and top of the air cleaner housing.

**Inspect Your Old Filter and Check for Uneven Dirt Patterns** 


> Your old filter has valuable clues to dust leakage or gasket sealing problems. A dust pattern on the filter's clean side is a sign that the old filter was not firmly sealed or that a dust leak exists. Identify the cause of any leak and rectify it before installing a new filter.



**Inspect New Filters** 

Before installing the new filters, visually inspect them for shipping damage and gasket integrity. If a filter is damaged, do not install it. If desired, write the date of the filter change on the outer end of the filter end cap.



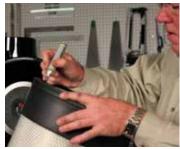

**Install the New Filters** 

First, if you're servicing the safety filter at this change-out, seat it properly into position before installing the primary filter. Insert new filters carefully over the center bolt, hand tighten wing nut bolt for both filters.

Make sure the primary filter gasket seats evenly to create a proper seal. If you don't have a good seal, dirty air can by-pass the filter.



**Ensure an Air-tight Fit on all Connections and Ducts** 

> Check that all clamps and flange joints are tight, as well as the air cleaner mounting bolts. Attend to any leaks immediately to avoid dirt entering your engine directly. Reset the filter service indicator.





## FVG Cycloflow™ Air Cleaners



### Horizontal Mount, Integral Vacuator™ Valve

Severe Duty, Two-Stage Filtration for Large Construction & Mining Machines

### **Applications**

- Allows up to 1200 cfm airflow throughput per air cleaner
- Horizontal installation
- Designed for large industrial and construction machines crawler tractors, crane loaders, excavators, and air compressors with large engines operating in severe dust environments

### **Air Cleaner Features**


- Unique, flared inlet allows maximum airflow with low restriction
- 21" body diameters
- Two-stage air cleaning deals with very dusty environment:
  (1) Built-in louver spins air to separate up to 85% of incoming dust before it reaches the filter
  (2) Primary filter removes up to 99.99% of the remaining dust
- Built-in Vacuator<sup>™</sup> Valve collects and releases pre-cleaned dust
- Safety filter on all models protects engine inlet during primary filter change out
- Housing is metal and coated with a corrosion and chemical resistant polymer paint

### **Filter Features**

 Replacement filter choices include an extended service, high efficiency filter for restriction maintenance, or a standard life filter for scheduled maintenance

### **Accessories**

- See the Accessories section for details on Donaldson air intake add-ons that can enhance the performance of your system
- Each FVG is tapped to accept a filter service indicator
- Order mounting bands, hoods, and other accessories separately

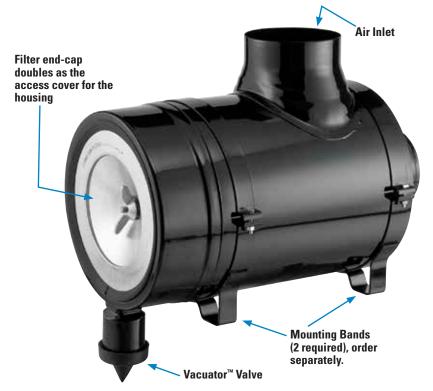






FVG air cleaners are used in tandem on this underground mining equipment to double the airflow throughput to the engine.

MEDIUM DUST AIR CLEANERS

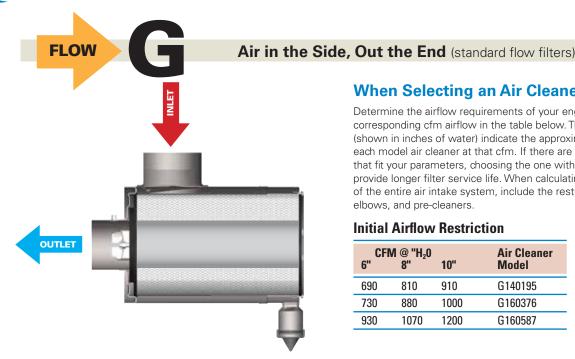

### When Selecting an Air Cleaner . . .


Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table below. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.


### **Initial Airflow Restriction**


	6" CFI	M @ "H <sub>2</sub> 0 8"	10"	Air Cleaner Model
ĺ	690	810	910	G140195
	730	880	1000	G160376
	930	1070	1200	G160587

Looking for a different air cleaner with newer Donaldson technologies? Check out the FRG Air Cleaners. This line has models that cover this airflow range.

### **FVG Air Cleaner Performance Curves (Restriction & Dust Capacity)**

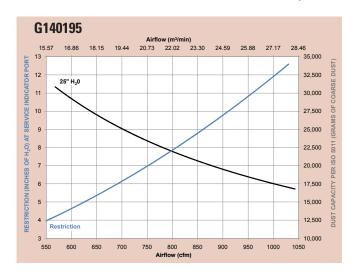

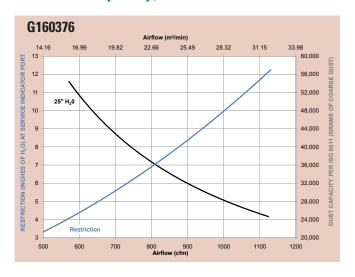

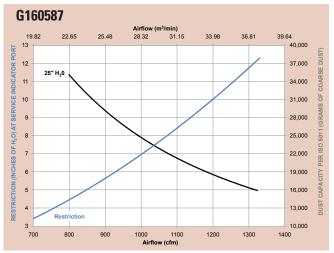




# FVG Cycloflow™ Air Cleaners



### **FVG Cycloflow**<sup>™</sup> **Specification Illustration**

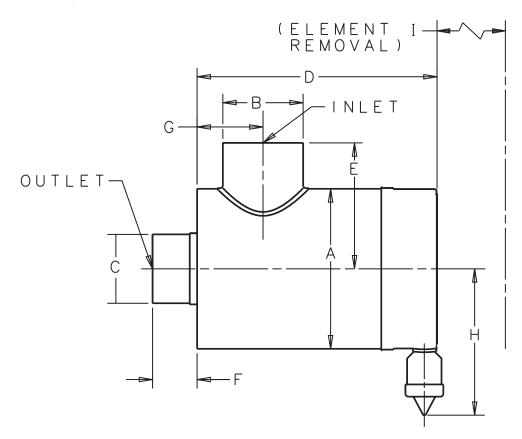

### **FVG Specifications**


Air Cleaner Models	Bod <sup>a</sup> Diame (A) in		Inl Diam (B in	eter	Out Diam (C in	eter	Lenç (D in	jth ) mm	(E	) mm	Inl Leng (F in		(G	) mm	(H	) mm	Serv Cleara (I) in		Wei lbs	ght kg
G140195	13.95	354	7.00	178	6.00	152	20.87	530	10.98	279	3.88	99	5.75	146	12.71	323	20.72	526	48	22
G160376	16.00	406	7.00	178	7.00	178	20.87	530	13.00	330	3.88	99	5.28	134	13.80	351	20.72	526	62	28
G160587	16.00	406	7.00	178	7.00	178	24.87	632	13.00	330	3.88	99	5.75	146	13.80	351	24.50	622	66	30

For FVG air cleaner service servicing information see pages 118-120.





### **FVG Exploded View**

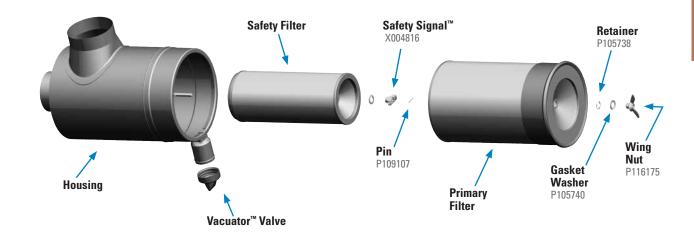

### **FVG Service Parts & Accessories**

G140195	FVG
Elbow, 45°	P105547
	P105535
	P1820433
Filter, primary-Dor	naldson Blue™ DBA5043
Filter, primary - SN	Л P181043
Filter, safety	P124860
Gasket washer	P105740
	P105612
Informer <sup>™</sup> indicato	or 25" H₂0 X002277
Inlet hood, metal	H000339
	H000607
Mounting band	H0003502
Mounting bands, r	netal H000350
Outlet band clamp	P148347
	P109107
Retainer	P105738
	ator X004816
	P103198
Wing nut	P116175

G160376	FVG
Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary	P124867
Filter, safety	P124866
	P105740
Hump hose	P105613
Informer™ indicato	or 25" H <sub>2</sub> 0 X002277
Inlet hood, metal	H000339
Inlet hood, plastic.	H000607
Mounting band	H0003512
Mounting bands, r	netal H000351
Outlet band clamp	P148348
	P109107
Retainer	P105738
	atorX004816
	P103198
Wing nut	P116175

G160587 FVG	
Elbow, 45°	P105548
Elbow, 90°	
Filter, primary	
Filter, primary-Donaldson Blue™	
Filter, primary - SM	
Filter, safety	
Gasket washer	
Hump hose	
Informer™ indicator 25" H <sub>2</sub> 0	
Inlet hood, metal	
Inlet hood, plastic	
Mounting band	
Mounting bands, metal	
Outlet band clamp	
Pin	
Retainer	
Vacuator™ Valve	
Wing nut	F1101/3

### NOTES:

2 = Two required for proper installation

3 = Shipped with air cleaner initially

SM=Scheduled Maintenance Donaldson Blue™ = High Efficiency, Extended Service

# Even More

### **Donaldson Delivers**

# Innovative Filtration Solutions for Engines, Equipment and the People Who Use Them

### **Fuel Filtration**

Expanded line of fuel filters protect engine components and extend equipment life.

- Includes a full complement of filters to fit Stanadyne® and Racor® fuel systems, and Cummins® engines.
- Twist&Drain<sup>™</sup> valves turn the complicated task of removing water into an easy process.



Stanadyne® is a registered trademark of Stanadyne Corporation. Racor® is a registered trademark of Parker Hannifin Corporation. Cummins® is a registered trademark of Cummins Inc.

### **Lube Filtration**

Donaldson lube filters keep engine oil clean by capturing contaminants that can cause engine damage.

- With coverage for a full range of popular engines, Donaldson lube filters meet or exceed application requirements.
- Donaldson Endurance<sup>™</sup> lube filters with Synteq<sup>™</sup> media deliver improved lubricant flow, improved cold start performance and a higher level of engine protection to prolong engine and equipment life.





### **Hydraulic and Transmission Filtration**

- Offering a broad line of spin-on, cartridge-style and in-tank hydraulic filters — including high, medium and low pressure options — that protect transmissions, machinery and components in hundreds of applications.
- A complete line of hydraulic accessories to accommodate virtually any mobile application.
- T.R.A.P.<sup>™</sup> breather technology
- Donaldson Duramax® filters are the highest rated medium pressure filters available.



### **DURAMAX®**

### **Coolant Filtration**

- Donaldson coolant filters remove contaminants and maintain cooling system balance keeping today's hot-running engines cool and reducing downtime.
- Donaldson Endurance<sup>™</sup> coolant filters allow you to extend filter life while maintaining coolant condition.



### Mufflers & Exhaust Accessories

• For more than 60 years, Donaldson has been a leading supplier of exhaust systems, components and accessories for medium- and heavy-duty diesel powered trucks and equipment.



### Air Cleaners for **Heavy Dust Conditions** S Series



### **Heavy-Duty Two-Stage Filtration for Diesel Engines Operating in Severe Dust Conditions**

Heavy construction vehicles (haul trucks, crawlers, dozers), above ground and underground mining machines, agricultural equipment (combines, tractors) and other off-highway vehicles and engines that operate daily in intensely dusty environments need powerful, reliable air filtration systems to protect them and keep them running reliably.

Donaldson S Series Air Cleaners provide:

- Durable, reliable protection
- Two cleaning stages to handle very dusty conditions
- Choice of filtration efficiency, Donaldson (standard) and Donaldson Blue™ (high efficiency) replacement filters
- Low restriction so the engine receives a high volume of air
- Sturdy, vibration-resistant, long-life construction

### SSG Air Cleaner



### **SRG Air** Cleaner



SRG Air Cleaner Conversion Kit



### **STG Air Cleaner**



**STB Air Cleaner** 




### **Section Index**

SSG Donaclone <sup>™</sup>	132
Service Instructions	139
STG Donaclone™	142
Service Instructions	148
SRG to SSG Conversion Kit	151
SRG Donaclone <sup>™</sup>	152
Service Instructions	157
STB Strata <sup>™</sup>	160

### Donaclone® Tubes

The pre-cleaner of our S Series air cleaners uses clusters of Donaclone tubes positioned ahead of the primary filter. The Donaclone tube has no mechanical moving parts, so there's nothing to break down: it works automatically and properly whenever the engine is on.

Air is drawn into the tube and spun. Centrifugal force separates much of the dirt

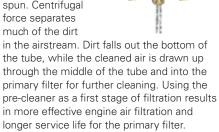

### **Attention: Upgrade SRG Models to Newer Filtration Technology!**

The SRG air cleaner models will be phased out over time and replaced with our new SSG air cleaners.

Upgrade your housing to an SSG style with RadialSeal™ filters for faster filter changeout.

SRG Housing Item No.	SRG to SSG Kit Kit No.	SSG Housing Item No.
G200008	X009702	G200087
G200013	X009701	G200086
G290000	X009230	G290057
G290023	X009230	G290052
G290012	X009231	G290053





### **Designed for the Worst Dust Conditions**

**New Choice for Construction and Off-Highway Applications** 

The SSG Air Cleaner offers design improvements over our older SRG air cleaner style.

### **Design Improvements**

The SSG Air Cleaner has filters that use RadialSeal™ sealing technology, compared to axial seal style filters.

This single design improvement eliminates the need to replace filter and cover gaskets, which means less service time and fewer parts to inventory.






The large, massive mining vehicle in the picture above is an ideal match for the Donaldson SSG Air Cleaner.


Additional design improvements: the air cleaner service cover now has quick-release

cover latches and a chain that connects it to the housing.



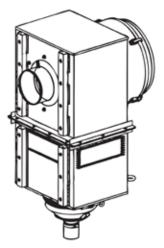

Mounting (back) side view of an SSG 20 model

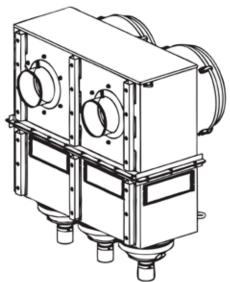

Mounting (back) side view of an SSG 29 model







#### Versatile SSG Provides Airflow to 4800 cfm

#### With Improved Design Features Compared to our Older SRG Model

#### **Applications**

- Allows 1700 to 2400 cfm airflow throughput for the SSG 20 model and 2580 to 4800 cfm airflow throughput for the SSG 29 models
- Horizontal installation
- Off-road, heavy or extreme dust conditions
- Ideal for scrapers, earth movers, graders and haul trucks

#### **Air Cleaner Features**

- Single and dual outlet models two high-flow models available
- Inlet has perforated holes on three sides; rain shrouds available if required
- Filters have urethane end caps with RadialSeal<sup>™</sup> sealing technology
- Built-in pre-cleaning tubes separate up to 97% of the in-coming dust
- Latch-style cover with attached safety chain for faster and simpler filter service
- Constructed of heavy-gauge steel with a primed, ready-to-paint finish
- Same overall package size as older Donaldson SRG axial seal style housings
- Dust Dumpa tube accessory available — simplifies routine air cleaner inspections

#### **Filter Features**

- Replacement primary filter choices: Standard life filters (for scheduled maintenance) and Donaldson Blue™ high efficiency, extended service filters for restriction maintenance practices. Air cleaners ship with the standard filters
- Grab handles on the primary filter to help remove the loaded filter during service
- Safety filter on all models



Dust Dumpa kits installed on a Donaldson SSG29 with rain shields. Notice the piles of dust gathered on the platform during vehicle operation.

#### **Powerful Two-Stage Filtration**

The first stage of this powerful air cleaner consists of hundreds of our exclusive, patented Donaclone™ pre-cleaner tubes. Each tube spins the incoming air to create a centrifugal force that separates up to 97% of the dust and dirt in the airstream. Donaclone™ tubes have no moving parts — so there is nothing to break down or maintain. They function properly whenever the engine is running.

The pre-cleaned dust is automatically ejected from the dust cup with a Vacuator™ Valve, which is located below the lower housing body.






The second stage of filtration is the primary filter. A safety filter, which fits inside the primary filter, is standard on all models for protection during primary filter change out.



## SSG Donaclone™ Air Cleaners



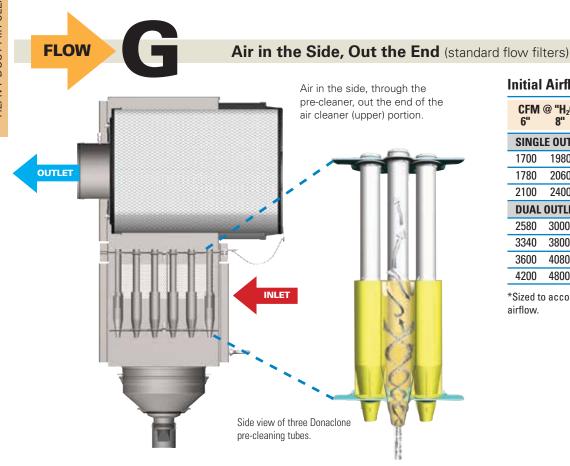

#### **Initial Airflow Restriction**


CFM	@ "H <sub>2</sub> 0	Air Cleaner
6"	8"	Model
SING	E OUTLE	T MODELS
1700	1980	G200087
1780	2060	G200086
2100	2400	G200088*
DUAL	OUTLET	MODELS
2580	3000	G290057
3340	3800	G290052
3600	4080	G290053
4200	4800	G290055*


<sup>\*</sup>Sized to accommodate higher airflow.

#### When Selecting an Air Cleaner . . .

Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table above. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.


#### **SSG Air Cleaner Performance Curves**

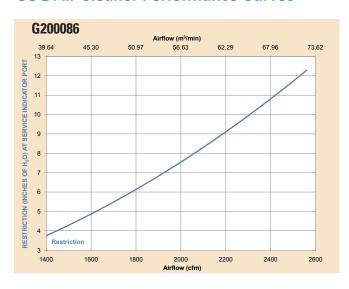


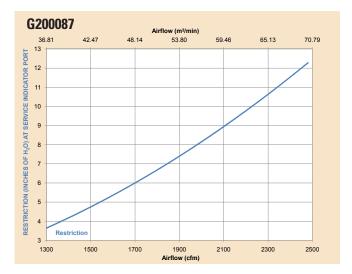



## SSG Donaclone<sup>™</sup> Air Cleaners


#### **continued** — SSG Air Cleaner Performance Curves

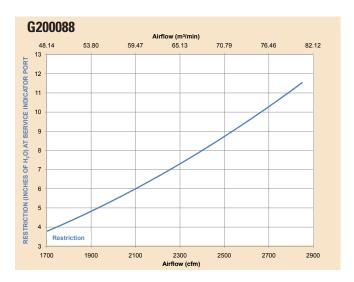

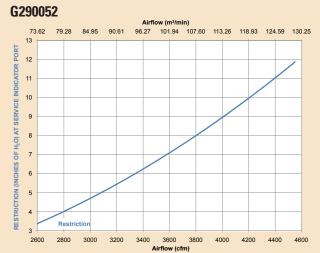

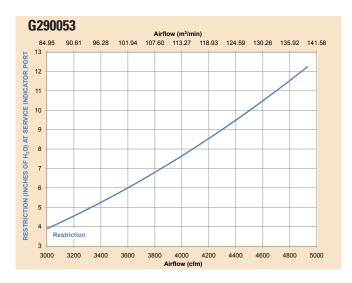

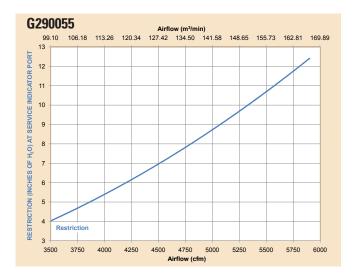

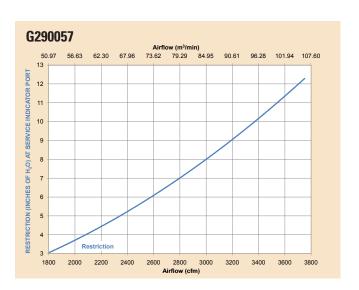




## SSG Donaclone<sup>™</sup> Air Cleaners




### **SSG Specification Illustrations**


#### **Front View Dual Outlet**

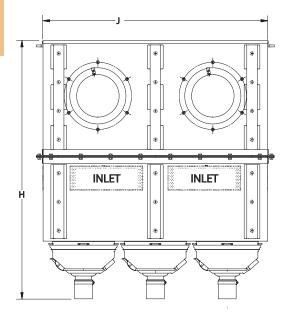

#### **Front View Single Outlet**

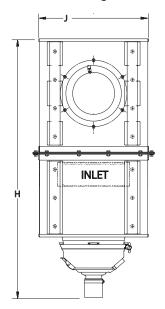

#### **Side View Dual and Single**

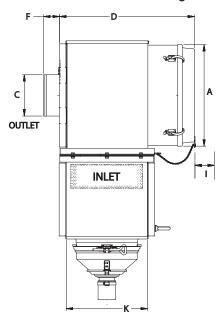

#### **SSG Specifications**

Air Cleaner Models	Bo Dian (A in	neter	Out Diam (C in	eter	Len (C in		Le	utlet ngth F) mm	Hei (H in		Serv Cleara (I) in	ance	Wid (J in		Dep (K in		Weig lbs	jht kg
SINGLE OU	JTLET M	ODELS																
G200087	19.67	500	8.0	203	26.2	665	3	76	50.15	1274	22.0	559	21.00	533	15.75	400	200	91
G200086	19.67	500	10.0	254	26.2	665	3	76	50.15	1274	22.0	559	21.00	533	15.75	400	200	91
G200088	19.67	500	10.0	254	31.4	798	3	76	50.15	1274	27.0	686	21.00	533	23.50	597	240	109
DUAL OUT	LET MO	DELS																
G290057	19.67	500	8.0	203	26.2	665	3	76	49.42	1255	22.0	559	43.00	1092	15.75	400	340	154
G290052	19.67	500	8.0	203	26.2	665	3	76	49.42	1255	22.0	559	43.00	1092	15.75	400	340	154
G290053	19.67	500	10.0	254	26.2	665	3	76	49.42	1255	22.0	559	43.00	1092	15.75	400	340	154
G290055	19.67	500	10.0	254	31.4	798	3	76	49.42	1255	27.0	686	43.00	1092	23.50	597	420	190

#### **Accessories Recommendations**


Air Cleaner Model	Outlet Band Clamp	Hump-hose Connector	Elbows 45°	90°	Restriction Indicator
G200088	P148350	P111414	P114313	P114314	X002277
G290055	P148350	P111414	P114313	P114314	X002277
G290057	P148349	P112608	P112606	P112605	X002277





#### **Service Parts Listing by Model Number**

#### Single Outlet Model — SSG 20

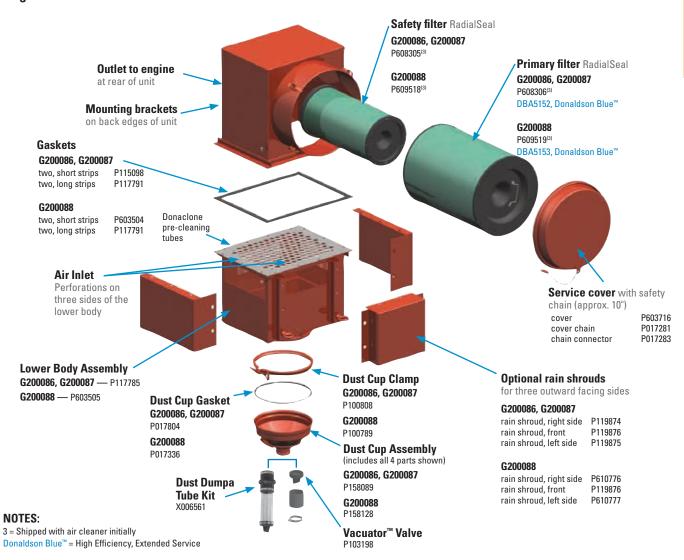

#### **Dust Dumpa Tube Extension**

**How it works:** When installed on the dust cups on the lower assembly, the rubber connector vibrates during normal vehicle operation and gravity expels the pre-cleaned dust.

- Improves dust evacuation from the air cleaner
- Clear tube allows for visual inspection of dust collection
- Reduces air cleaner inspection time
- Ships fully assembled
- Proper conversion requires drop down tube for every dust cup

For more information features and dimensions, see accessories section.



#### **SSG Housing Primary Filter Choices**

For high efficiency filtration, upgrade to Donaldson Blue™ Air Filters with Ultra-Web® Filtration Technology. SSG Air Cleaners and retrofit kits ship with standard life filters.

Air	Standard	High
<u>Cleaner</u>	Life	Efficiency
G200086	P608306	DBA5152
G200087	P608306	DBA5152
G200088	P609519	DBA5153

If it's Blue it's True!
Blue filters have Ultra-Web®
Filtration Technology






#### SSG Donaclone™ Air Cleaners



#### **Service Parts Listing by Model Number**

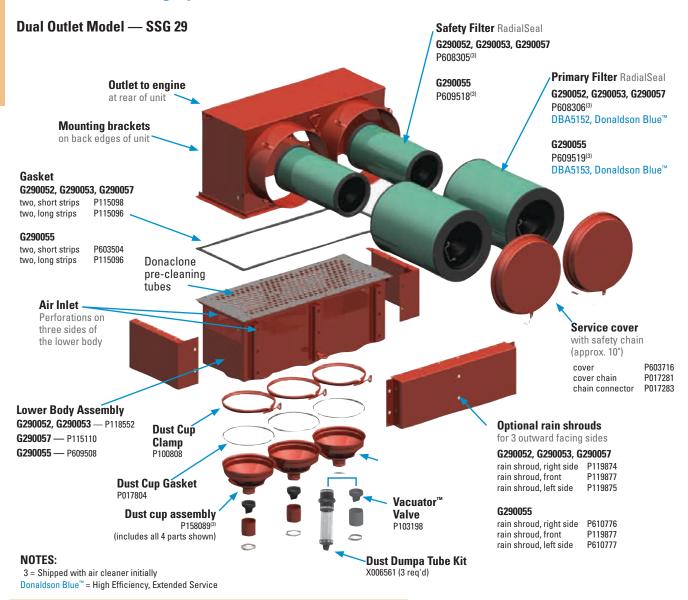

#### **Dust Dumpa Tube Extension**

**How it works:** When installed on the dust cups on the lower assembly, the rubber connector vibrates during normal vehicle operation and gravity expels the pre-cleaned dust.

- Improves dust evacuation from the air cleaner
- Clear tube allows for visual inspection of dust collection
- Reduces air cleaner inspection time
- Ships fully assembled
- Proper conversion requires drop down tube for every dust cup

For more information features and dimensions, see accessories section.



Part No. X006561

#### **SSG Housing Primary Filter Choices**

For high efficiency filtration, upgrade to Donaldson Blue™ Air Filters with Ultra-Web® Filtration Technology. SSG Air Cleaners and retrofit kits ship with standard life filters.

Air <u>Cleaner</u>	Standard Life	High Efficiency	
G290052	P608306	DBA5152	
G290053	P608306	DBA5152	
G290055	P609519	DBA5153	
G230057	P608306	DBA5152	
	If it's Blue it's Blue filters have Filtration Techno	Ultra-Web®	



#### SSG Donaclone®Air Cleaners Service Instructions



This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

#### **SERVICE TRAINING VIDEOS**



http://www.youtube.com/user/ donaldsonengine

**Donaldson Service Training Videos** are on YouTube. Scan the QR code or go to http://www.youtube.com/user/ donaldsonengine to watch videos on how to service Donaldson Air Cleaners, like the SSG

#### **Check the Restriction** Replace the filter only when the restriction level has reached the maximum recommended by the engine or equipment manufacturer.





#### **Empty the Dust Cup &** Check the Vacuator™ Valve

Shut off the engine. The dust cup should be emptied when it is 2/3 full. Frequency of dust cup service varies with dust severity. On dust cups with a Vacuator™ Valve, dust cup service is minimal.

Just check the Vacuator™ Valve to see that it is not inverted, damaged or plugged. If it looks damaged or is missing, replace it immediately. When reinstalling the dust cup, be sure it seals properly 360° around the air cleaner body.

The optional Donaldson Dust Dumpa tube extension is available for the SSG.





If your SSG Air Cleaner has a dust cup with a Vacuator Valve, replace it immediately if it is inverted or looks like any of the images below.









#### **Inspect the Donaclone**<sup>™</sup> **Pre-Cleaning Tubes**

Visually check the Donaclone tubes. Generally, the tubes are self-cleaning and need no service, but under unusual circumstances, plugging can occur. In those circumstances, cleaning with a stiff brush may be required.

Never clean Donaclone tubes with compressed air unless both the primary and safety filters are properly fitted in place. Do not steam-clean Donaclone tubes.





Continued on next page

## SSG Donaclone®Air Cleaners Service Instructions



## Remove the Primary Filter and Visually Inspect the Safety Filter

When the restriction indicates that filter service is required, unfasten or unlatch the filter service cover. Because the filter fits tightly over the outlet tube there will be some initial resistance, similar to breaking the seal on a jar. Grasp the filter service handle and pull the filter out. Gently move the filter from side to side to break the seal, but avoid knocking the filter against the housing during removal.

Visually check safety filter for damage and replace if damaged, but do not remove it unless a change-out is necessary. You should replace the safety filter every three primary filter changes. Also verify that the safety filter is properly seated in the housing. If the safety filter is removed and the new filter is not to be installed immediately, be sure to cover the seal tube with a cloth or the housing cover.

Wipe the interior of the air cleaner with a clean damp cloth.



The safety filter should be replaced every three primary filter changes.

## Inspect and Install the New Filter(s)

Inspect the new filter carefully, paying attention to the inside of the open end, which is the sealing area. NEVER install a damaged filter. A new Donaldson RadialSeal™ filter may have a dry lubricant on the seal to aid installation.

If you are servicing the safety filter, make sure it is seated into position before installing the primary filter.

Insert the new filter carefully by hand, making certain it is completely seated into the air cleaner housing before securing the cover in place.

The critical sealing area will compress slightly, adjust itself and distribute the sealing pressure evenly. To complete a tight seal, apply pressure by hand at the outer rim of the filter, not at the center. (Avoid pushing on the center of the end cap.) No cover pressure is required to hold the seal.



Note: NEVER use the service cover to push the filter into place! Using the cover to push the filter in could cause damage to the housing or cover fasteners and will void the warranty.

## SSG Donaclone®Air Cleaners Service Instructions



If the service cover contacts the filter before it is fully in place, remove the cover and push the filter (by hand) further into the air cleaner and try again. The cover should go on with no extra force.


Once the filter is in place, secure the service cover.







Finally, inspect and tighten all air cleaner system hoses, tubing and connections. If there are holes or damage, replace immediately. Reset filter service indicators if they don't automatically reset.

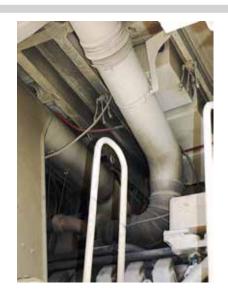





#### STG Donaclone: Field Proven & Reliable

#### **Heavy-Duty Workhorse for Construction & Off-Highway Applications**

Donaldson's STG Donaclone™ air cleaner has been applied to a wide variety of heavy-duty equipment around the world. Its broad application is a testament to its reliability and durability.

## Powerful Two-Stage Filtration

The first stage of this powerful air cleaner consists of a cluster of our Donaldson Donaclone™ tubes. They spin the incoming air to create a centrifugal force that separates up to 97% of the dust and dirt in the airstream. Donaclone™ tubes have no moving parts — so there is nothing to break down or maintain. They function properly whenever the engine is running.

Pre-cleaned dust falls into the dust cups and expels through Vacuator™ Valves at the bottom of the air cleaner.

The second stage of filtration is the primary filter, a cylindrical-shaped unit of specially-developed pleated filter media, designed to trap and stop dust particles, both large and small. The result is air to your engine that is up to 99.9% contaminant free!


A safety filter, which fits inside the primary filter, is standard on all models for protection during primary filter changeout. Physical orientation does not affect the proper functioning of either cleaning stage. The STG can be mounted horizontally or vertically. If mounting horizontally, the Vacuator™ Valve option on the dust cup is required.



This STG Donaclone, mounted on a large mining machine, is protecting the engine from harmful dirt in this severe dust environment.

Mounting: Sturdy mounting brackets are attached to the top section of the STG. For secure mounting, Donaldson recommends an additional mounting band for the lower body.

STG air cleaners feature a corrosionresistant, chemical-resistant coating that provides a long-lasting, hard protective finish.

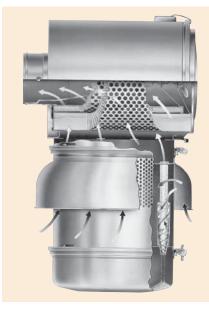

## How the Two-Stage STG Donaclone Works

Air is drawn in through the perforations in the lower part of the unit and forced down through a bank of Donaclone tubes. The Donaclone tubes spin the air so that centrifugal force causes the heavier dust particles to separate from the airstream.

While these particles fall into the cup at the bottom, the partially cleaned air is directed upward, into the primary filter in the upper portion of the unit for the second stage of filtration.





#### Versatile STG Provides Airflow to 1760 cfm

**Choose Peripheral or Tubular Inlet, Horizontal or Vertical Mount** 

#### **Applications**

- Allows 390 to 1760 cfm airflow throughput per air cleaner
- Horizontal or vertical installation
- Off-road, high dust conditions
- Ideal for scrapers, earth movers, graders

#### **Air Cleaner Features**

- Very reliable. Only one critical filter seal.
- Airflow throughput can be doubled by using two air cleaners
- Two body styles (peripheral inlet, shown on right, and tubular inlet) to accommodate location and ducting
- Optional inlet shroud available for peripheral style
- When the air cleaner is mounted directly on the engine and there is clearance around it for airflow, choose the peripheral inlet style (shown on right)
- When the air cleaner is mounted above the cab or somewhere far from the engine to get above the dust cloud, choose the tubular inlet style, which will accept ducting into the inlet
- Built-in Donaclone pre-cleaning tubes separate up to 97% of incoming dust to the dust cup before it reaches the filter, resulting in more thorough cleaning and fewer filter changes.
- Choose the dust cup best suited to your maintenance practices. For choices see Accessories section.
- All models include a fitting for a filter service indicator

#### **Filter Features**

- Replacement primary filter choices: Standard life filters (for scheduled maintenance) and Donaldson Blue™ high efficiency, extended service filters for servicing by restriction
- Uses standard airflow filters
- Safety filter on all models









### STG Donaclone™ Air Cleaners





#### **STG Air Cleaner Performance Curves (Restriction & Dust Capacity)**


Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table on the next page. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.

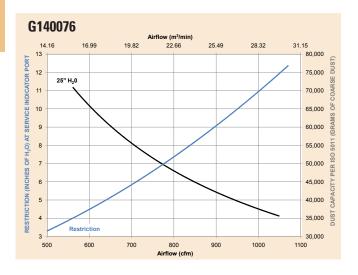


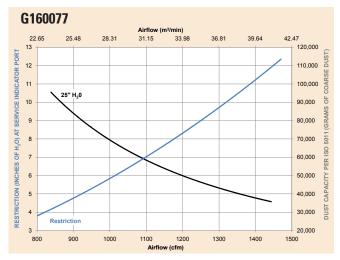

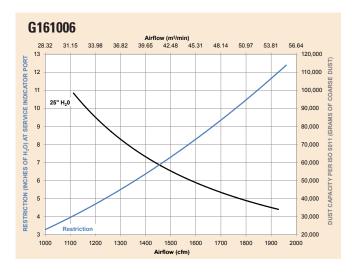

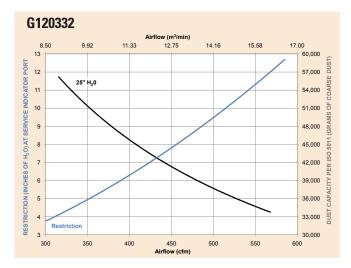

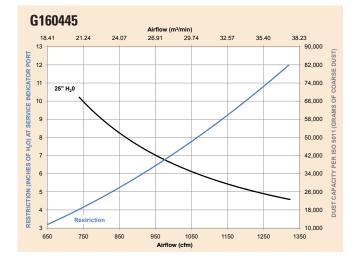

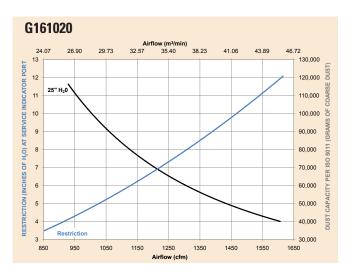

## STG Donaclone™ Air Cleaners


#### **Initial Airflow Restriction**

6" CI	FM @ "H 8"	<sub>2</sub> 0 10"	Air Cleaner Model				
STG W	ITH PER	IPHERAL I	NLET				
710	840	950	G140076				
1015	1175	1320	G160077				
1360	1570	1760	G161006				


CF 6"	M @ "H <sub>2</sub> 8"	Air Cleaner Model	
STG W	ITH TUB	ULAR INLE	T
390	455	515	G120332
915	1065	1200	G160445
1127	1308	1466	G161020

#### **STG Specification Illustrations**

#### Peripheral Inlet Side View

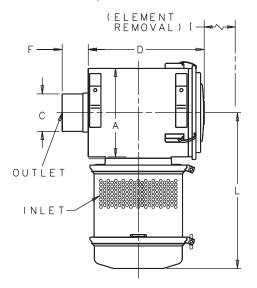

#### **Tubular Inlet Side View**

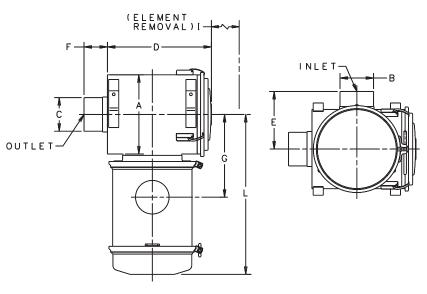

#### **STG Donaclone™ Specifications**

Air Cleaner Models	Boo Diam (A in	eter	Inle Diam (B in	eter	Out Diam (C in	eter	Lenç (D		(E in	) mm	Inl Leng (F	gth	(G in	) mm	Servi Cleara (I) in		(L	) mm	Wei lbs	ght kg
STG WITH																				9
G140076	14.00	356	n/a	a	6.00	152	17.38	441	n/a	ì	3.88	99	15.47	393	15.25	387	24.16	614	75	34
G160077	16.00	406	n/a	a	7.00	178	19.69	500	n/a	ì	3.88	99	17.29	439	17.00	432	26.16	664	91	41
G161006	16.00	406	n/a	a	8.00	203	26.06	662	n/a	ì	3.50	89	17.30	439	23.38	594	26.93	684	115	52
STG WITH	TUBUL	AR INL	.ET																	
G120332	11.81	300	5.00	127	5.00	127	15.43	392	7.88	200	3.94	100	11.54	293	13.19	335	22.06	560	53	24
G160445	16.00	406	7.00	178	7.00	178	19.59	498	11.00	279	3.87	98	14.81	376	17.25	438	26.31	668	93	42
G161020 <sup>1</sup>	16.00	406	6.00	152	8.00	203	26.06	662	10.02	255	3.50	89	14.06	357	23.38	594	26.31	668	120	55

<sup>1 -</sup> G161020 has two inlets, each 6" (152mm) in diameter

NOTE: All STG models are tapped to accept a filter service indicator

#### **Accessory Recommendations**

Air Cleaner	Mounting	<b>Outlet Band</b>	Hump-hose		Elbows		Restriction	Inlet	Hood
Model	<b>Band Metal</b>	Clamp	Connector	45°	90°	90° Reducing	Indicator	Plastic	Metal
G120332	H000349	P148345	P105610	P109021	P107844	P143895	X002277	H000469	H000165
G140076	H000350	P148347	P105612	P105547	P105535	P143895	X002277		
G160077	H000351	P148348	P105613	P105548	P105536		X002277		
G161006	H000351	P148349	P112608	P112606	P112605		X002277		
G161020	H000351	P148347	P105612	P105547	P105535		X002277		

## STG Donaclone™ Air Cleaners



## STG Peripheral Service Parts


G140076	STG-PERIPHERAL
Body, lower	P102256
Clamp, cup	P100866
	nbly P017617
Dust cup	P1008603
Elbow, 45°	P105547
	P105535
Filter, primary	P1820413
Filter, primary-Dor	naldson Blue™ DBA5041
Filter, primary - SN	ЛP181041
Filter, safety	P119370
	X0035389
	P105740
Gasket, body or cu	ıp P017335
Gasket, cover	P016972
Inlet shroud	P102870
Mounting band	H0003502
SafetySignal indic	ator X004816
Spring clip & pin	X005555
Wing nut	P109062

#### G160077 STG-PERIPHERAL

<b></b>	
Body, lower	P115023
Clamp, body	P100780
Clamp, cup	
Cover	P109153
Cover latch assembly	P017617
Dust cup	
Dust cup, quick release	P107377
Dust cup, VacValve, horz	P103530
Dust cup, VacValve, vert	P104973
Filter, primary	P1820393
Filter, primary-Donaldson Blue™.	
Filter, primary - SM	P181039
Filter, safety	P114931
Gasket kit	X0035399
Gasket washer	P105740
Gasket, body or cup	P017336
Gasket, cover	P017367
Inlet shroud	
Mounting band	H0003512
Outlet band clamp	
SafetySignal indicator	X004816
Spring clip & pin	X005555
Wing nut	

#### G161006 STG-PERIPHERAL

4101000	OTO TEIM HEIDAE
Clamp, body	P100780
Clamp, cup	P100789
Dust cup	P1007943
Dust cup, quick re	lease P107377
Dust cup, VacValv	e, horz P103530
Dust cup, VacValv	e, vert P104973
Filter, primary	P1820423
Filter, primary-Dor	aldson Blue™ DBA5042
Filter, primary - SN	ЛP181042
Filter, safety	P128408
Gasket kit	X0035399
Gasket washer	P105740
Gasket, body or cu	ıp P017336
Gasket, cover	P017367
Inlet shroud	P101759
Mounting band	H0003512
SafetySignal indic	ator X004816
Wing nut	P109062

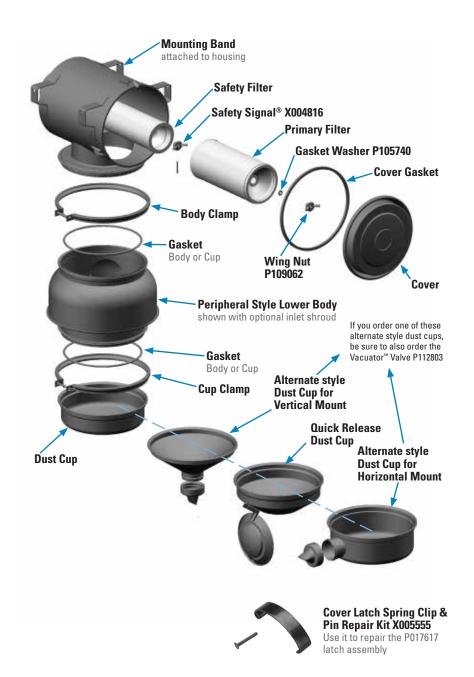

#### NOTES:

- 2 = Two required for proper installation
- 3 = Shipped with air cleaner initially
- 9 = Gasket Kit includes all gaskets listed

SM=Scheduled Maintenance Donaldson Blue™ = High Efficiency, Extended Service





#### STG Tubular Service Parts

G120332	STG-TUBULAR
Body, lower	P110875
Dust cup, quick re	elease P107375
Filter, primary	P1820443
Filter, primary-Doi	naldson Blue™ DBA5044
Filter, primary - SN	И P181044
Filter, safety	P119371
Gasket washer	P105740
Gasket, body or c	up P017804
Gasket, cover	P017365
SafetySignal indic	ator X004816
Spring clip & pin	X005555
Wing nut	P109062

#### G140445 **STG-TUBULAR**

Body, lower	P114100
Cover latch assembly	P017617
Dust cup	P1008603
Filter, primary - SM	P181041
Filter, primary-Donaldson Blue™	
Filter, primary	P1820413
Filter, safety	
Gasket kit	X003538
Gasket washer	P105740
Gasket, body or cup	P017335
Gasket, cover	P016972
Mounting band	H0003502
SafetySignal indicator	X004816
Spring clip & pin	X005555
Wing nut	

#### G160445 **STG-TUBULAR**

Cover lateb accomply	
Cover latch assembly Dust cup	
Dust cup, quick release	
Dust cup, VacValve, horz	
Dust cup, VacValve, vert	
Filter, primary - SM	
Filter, primary-Donaldson Blue™	DBA5039
Filter, primary	P1820393
Filter, safety	. P114931
Gasket, body or cup	. P017336
Gasket, cover	. P017367
Gasket kit	X0035399
Mounting band	H0003512
Spring clip & pin	. X005555

#### G161020 **STG-TUBULAR**



Inlet view of Donaclone™ pre-cleaning tubes inside the Lower Body Assembly.

#### NOTES:

- 2 = Two required for proper installation
- 3 = Shipped with air cleaner initially
- 9 = Gasket Kit includes all gaskets listed

#### SM=Scheduled Maintenance

Donaldson Blue™ = High Efficiency, Extended Service

If your current STG air cleaner has adequate clearance, one of the Dust Dumpa kits has the potential to save service time. X006562 includes

new gasket Length 22.55" / 5723mm Not for horizontal mounted air cleaners.



X006561 Length 16.54" / 420mm



### STG Donaclone<sup>™</sup> Air Cleaners Service Instructions



This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

Check Replace restriction

#### **Check the Restriction**

Replace the filter only when the restriction level has reached the maximum recommended by the engine or equipment manufacturer.



2 Empty the Dust Cup and Check the Vacuator™ Valves

Switch off the engine. The dust cup should be emptied when 2/3 full. Frequency of dust cup service varies with the dust severity.

On dust cups with a Vacuator Valve, dust cup service is minimal. Just check the Vacuator Valve to see that it is not inverted, damaged or plugged. If it is damaged or missing, replace it immediately.

Visually inspect gasket between dust cup and lower body — if worn or damaged, replace.

Tip: Save Service Time — Install Dust Dumpa on Vertical STG Air Cleaners!







If your STG Air cleaner has a dust cup with a Vacuator Valve that is inverted or looks like any of the images below replace it immediately.









#### 3 Inspect the Donaclone™ Pre-Cleaning Tubes

With the dust cup removed, check the tubes. Generally, the tubes are self-cleaning and need no service, but under unusual circumstances, plugging can occur. A visual inspection is usually adequate.

If the tubes carry light dust, remove it with a stiff brush. If plugging with fibrous material is evident, remove the Strata™ or Donaclone section. Clean it with compressed air or water no hotter than 160 °F / 72 °C.

Any time the Donaclone tube lower body is removed, the body gaskets should be replaced. When reinstalling the dust cup, be sure it seals 360° around the air cleaner body.





Never clean Donaclone tubes with compressed air unless both the primary and safety filters are installed in the air cleaner.

Do not steam-clean Donaclone or Strata tubes.

### STG Donaclone™ Air Cleaners **Service Instructions**



#### **Remove the Primary Filter and Visually Inspect the Safety Filter** Unlatch the service cover to access

the filters.

Loosen the wing nut and remove the primary filter. The wing nut on the old filter should be held in place with a clip. Visually inspect the safety filter but do not remove the filter unless it is damaged or due for change-out.

The safety filter should be replaced every three primary filter changes.













Note: If you perform filter maintenance service on a schedule vs. using service indicators, you may want to write the service date on the filter end cap.

The safety filter should be replaced every three primary filter changes.

#### **Always Clean the Inside** of the Filter Housing

Dirt left in the air cleaner housing can be harmful for your engine. Starting with the sealing surfaces, use a clean, damp cloth to wipe the inside surfaces clean. An improper gasket seal is one of the most common causes of engine contamination, so make sure that all hardened dirt ridges are completely removed.







Continued on next page

### STG Donaclone<sup>™</sup> Air Cleaners Service Instructions



## 6

#### **Install the New Filters**

The safety filter should be replaced every three primary filter changes or as denoted by the SafetySignal™ service indicator. When replacing the safety filter, install the new filter immediately or cover the inlet with a cloth so that dirt is not ingested.

Before installing the new filters, inspect them for shipping damage and gasket integrity. If a filter is damaged, do not install it. If the safety filter is being replaced, and a SafetySignal is used, secure it in place with a cotter (split) pin.

Secure the primary filter in place with the wing nut (hand tighten) using a new gasket washer. Use a new wing nut clip and reset the filter service indicator.















## Inspect Air Cleaner System

Finally, inspect and tighten all air cleaner system connections. If there are holes or damage, replace immediately. Inspect all air ducting for worn spots or damage. Annual replacement of air cleaner system gaskets is recommended.





#### **Save Maintenance Time & Costs**

#### **Convert Older SRG Housings to new SSG Housing Style!**



Replacing an older SRG housing with the new SSG housing allows you to simplify your routine filter service — no more separate gaskets at each filter change or removing a bolted on cover. SSG filters have RadialSeal™ end caps that provide a more reliable, consistent seal. Choose from an upper assembly conversion kit or you may want to install a complete new housing if your current SRG assembly needs repair or is reaching the end of it's useful life.




#### **SRG29 Housing**

#### **Upper Body Conversion Kit**

SSG29 Housing



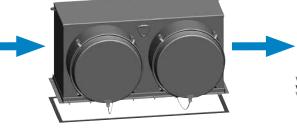



SRG Housing	SRG to SSG Kit*	SSG Housir
Item No.	Kit No.	Item No.
G200008	X009702	G200087
G200013	X009701	G200086
G290000	X009230	G290057
G290023	X009230	G290052
G290012	X009231	G290053

<sup>\*</sup> The finish on the replacement kit upper assembly is a white, powdered-coated paint. Installation instructions are included with the kit.

#### Other Changes That Can Save You Time and \$\$ After Converting to an SSG!

Kit Order Information

#### Upgrade to Donaldson Blue™ Filters

Donaldson Blue, high efficiency filters are available for the SSG product line. These filters have Donaldson's advanced Ultra-Web® Filtration Technology to protect your engines from submicron and mixed contaminant.



#### **Install Dust Dumpa**

Dust Dumpa is a direct replacement to our dust cups. You can greatly reduce, if not eliminate, the routine step of emptying the dust cup—two models available X006561 [left] and X006562 [right].



### SRG Donaclone™ Air Cleaners



#### **SRG Donaclone Protects the Largest Engines**

For Simpler Service, Convert Your Old SRG to an SSG Style!

Upgrade old SRG housings two ways: upgrade kit or a new SSG air cleaner

#### **Applications**

- Allows 1700 to 4080 cfm airflow throughput per air cleaner — use two air cleaners to double airflow throughput
- Designed for large, high horsepower, off-road equipment
- For large engines operating in severe dust environments

#### **Air Cleaner Features**


- Single outlet: SRG20 (1 filter)
   Dual outlet: SRG29 (2 filters)
- Very reliable. Only one critical filter seal. No moving parts.
- Built-in Donaclone™ pre-cleaning tubes separate up to 97% of incoming dust to dust cup before it reaches the filter
- SRG air cleaners are finished with a red oxide primer, ready to be painted to match your equipment
- Dust cup options:
  - Dust Cup Kit with Dust Dumpa
  - Quick-release, for manual dumping (shipped with SRG initially)
  - Vacuator<sup>™</sup> Valve, for automatic dumping (optional replacement style)
- Vertical mounting
- Perforated inlets on all models
- Heavy metal rain shrouds available optionally
- Taps for filter service indicators on all models
- Optional Dust Dumpa to simplify dust cup maintenance.

A huge double-unit SRG29 engine air cleaner, protects this haul truck under severely dusty operating conditions. The SRG29 has three dust cups on the bottom of the unit.



This SRG20 (single outlet style) with rain shroud is easy to service because the access cover, which is out front, is attached to the filter. Simply unscrew the wing nut and pull the filter out horizontally. Inside, a safety filter protects the air inlet during filter service.



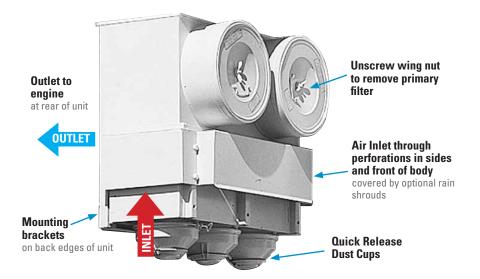



#### STOP!

The SRG air cleaner models will be phased out over time and replaced with our new SSG air cleaners that have design improvements over this style.

# Upgrade from SRG housings to new SSG! SRG Model SSG Model G200008 G200087 G200013 G200086 G290000 G290057 G290023 G290052 G290012 G290053


#### **Initial Airflow Restriction**


CFM @ 6"	"H <sub>2</sub> 0 8"	Air Cleaner Model
1700	1980	G200008
1780	2060	G200013
2580	3000	G290000
3340	3800	G290023
3600	4080	G290012


## When Selecting an Air Cleaner . . .


Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table at left. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.

#### **SRG Air Cleaner Performance Curves (Restriction & Dust Capacity)**

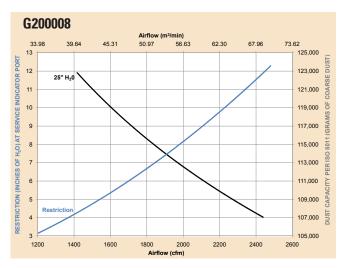

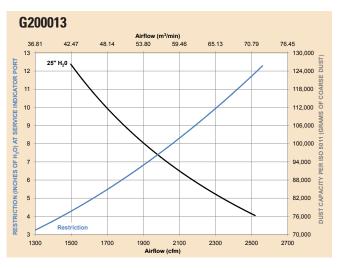


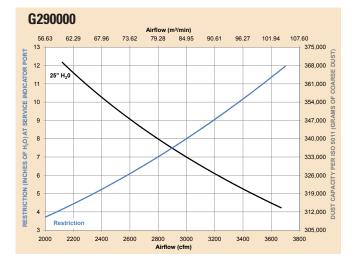

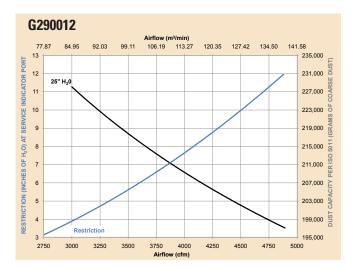

## SRG Donaclone<sup>™</sup> Air Cleaners



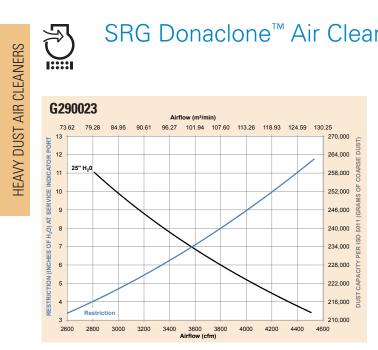

## **SRG Specification Illustrations** (ELEMENT REMOVAL) OUTLET C 0 INLET INLET

#### **SRG Specifications**

Air Cleaner Models	Bod Diamo (A) in	eter	Outl Diamo (C) in	eter	Leng (D) in	th mm	Out Leng (F in	gth	(H	) mm	Serv Cleara (I) in		Wid (J) in		Dep (K) in	th ) mm	Service Indicator Tap	Wei lbs	ight kg
SINGLE OU	SINGLE OUTLET MODELS																		
G200008	19.50	495	8.00	203	25.03	636	2.54	65	46.13	1172	23.75	603	21.00	533	15.75	400	Yes	225	102
G200013	19.50	495	10.00	254	25.03	636	2.54	65	46.13	1172	23.75	603	21.00	533	15.75	400	Yes	200	91
DUAL OUT	DUAL OUTLET MODELS																		
G290000	19.50	495	8.00	203	25.03	636	2.54	65	45.28	1150	23.75	603	43.00	1092	15.75	400	Yes	340	154
G290012	19.50	495	10.00	254	25.03	636	2.54	65	45.28	1150	23.75	603	43.00	1092	15.75	400	Yes	340	154
G290023	19.50	495	8.00	203	25.03	636	2.54	65	45.28	1150	23.75	603	43.00	1092	15.75	400	Yes	340	154





#### **SRG20 Service Parts**

#### **Primary Filter Choices**


#### G200008

#### G200013

#### **NOTES:**

3 = Shipped with air cleaner initially

SM = Scheduled Maintenance Donaldson Blue™ = High Efficiency, Extended Service

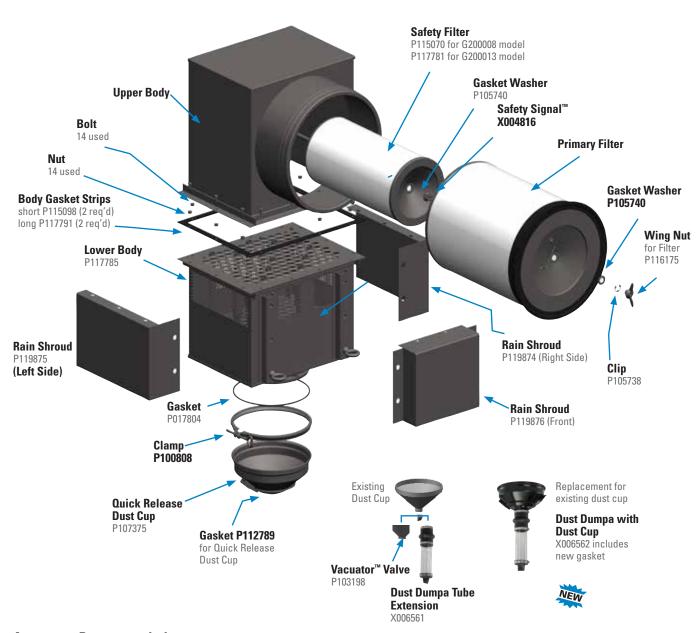

#### **Accessory Recommendations**

Air Cleaner	Outlet Band	Hump-hose	Elbo	ws	Restriction
Model	Clamp	Connector	45°	90°	Indicator
G200008	P148349	P112608	P112606	P112605	X002277
G200013	P148350	P111414	P114313	P114314	X002277
G290000	P148349	P112608	P112606	P112605	X002277
G290012	P148350	P111414	P114313	P114314	X002277
G290023	P148349	P112608	P112606	P112605	X002277



### SRG Donaclone™ Air Cleaners



#### **SRG29 Service Parts**

#### **Primary Filter Choices**

#### G290000 & G290023

Filter,	primary - SM	P181038	
Filter,	primary-Donaldson Blue™	<b>DBA5038</b>	
Filter,	primary	P182038	3


#### **G290012 Filters**

Filter, primary - SM	P181040	
Filter, primary-Donaldson Blue™	<b>DBA5040</b>	)
Filter, primary	P182040	3

#### NOTES:

3 = Shipped with air cleaner initially

SM = Scheduled Maintenance Donaldson Blue™ = High Efficiency, Extended Service

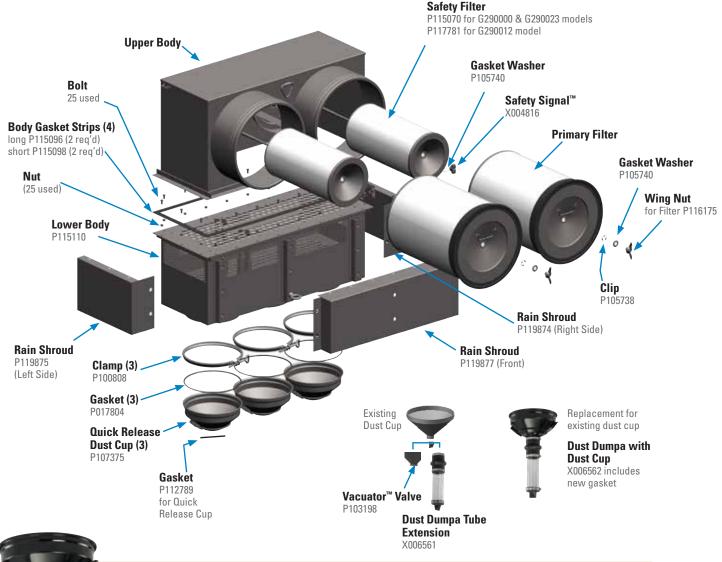



X006562

#### **Dust Dumpa Tube Extension**

How it works: When installed on the dust cups on the lower assembly, the rubber connector vibrates during normal vehicle operation and gravity expels the pre-cleaned dust.

- Improves dust evacuation from the air cleaner
- Clear tube allows for visual inspection of dust collection

- Reduces air cleaner inspection time
- · Ships fully assembled
- Proper conversion requires a Dust Dumpa tube extension for every dust cup

Order X006562 if your housing has a quick release style dust cup. Order X006561 if regular dust cup.

For more information, see Accessories section.



## SRG Donaclone<sup>™</sup> Air Cleaners Service Instructions



This servicing information is provided as a best practices guide. It is not intended to replace or supersede the service instructions supplied by your engine or vehicle manufacturer.

### SERVICE TRAINING VIDEOS



http://www.youtube.com/user/ donaldsonengine

Donaldson Service Training Videos are on YouTube. Scan the QR code or go to http://www.youtube.com/user/donaldsonengine to watch videos on how to service Donaldson Air Cleaners, like the SRG.

## Check the Restriction Replace the filter only when the restriction level has reached the maximum recommended by the engine or equipment manufacturer.



## Empty the Dust Cup and Check the Vacuator™ Valves

Switch off the engine. The dust cup should be emptied when 2/3 full. Frequency of dust cup service varies with dust severity.

On dust cups with a Vacuator Valve, dust cup service is minimal. Just check the Vacuator Valve to see that it is not inverted, damaged or plugged. If it is damaged or missing, replace it immediately.

Visually inspect gasket between dust cup and lower body — if worn or damaged, replace.

Tip: Save Service Time — Install Dust Dumpa on Vertical STG Air Cleaner Installations!



If your SRG Air Cleaner has a dust cup with a Vacuator Valve, replace it immediately if it is inverted or looks like any of the images below.









#### Inspect the Donaclone™ Pre-Cleaning Tubes

With the dust cup removed, check the tubes. Generally, the tubes are self-cleaning and need no service, but under unusual circumstances, plugging can occur. A visual inspection is usually adequate.

Any time the Donaclone tube lower body is removed, the body gaskets should be replaced. When reinstalling the dust cup, be sure it seals 360° around the air cleaner body.





View of Donaclone Tubes with Dust Cup removed.

If the tubes carry light dust, remove it with a stiff brush. If plugging with fibrous material is evident, remove the Strata™ or Donaclone section. Clean it with compressed air or water no hotter than 160 °F / 72 °C.



Continued on next page



#### SRG Donaclone<sup>™</sup> Air Cleaners Service Instructions





#### Remove the Primary Filter and Visually Inspect the Safety Filter

Unlatch the service cover to access the filters.

Loosen the wing nut and remove the primary filter. The wing nut on the old filter should be held in place with a clip. Visually inspect the safety filter but do not remove the filter unless it is damaged or due for change-out.





#### Always Clean the Inside of the Filter Housing

Dirt left in the air cleaner housing can be harmful for your engine. Starting with the sealing surfaces, use a clean, damp cloth to wipe the inside surfaces clean. An improper gasket seal is one of the most common causes of engine contamination, so make sure that all hardened dirt ridges are completely removed.

Block the outlet tube of the air cleaner using a clean, dampened towel prior to proceeding with cleaning the inside of the housing to avoid contaminating the induction system.







## SRG Donaclone<sup>™</sup> Air Cleaners Service Instructions



#### Install the New Filters

The safety filter should be replaced every three primary filter changes or as denoted by the SafetySignal™ service indicator. When replacing the safety filter, install the new filter immediately or cover the inlet with a cloth so that dirt is not ingested.

Before installing the new filters, inspect them for shipping damage and gasket integrity. If a filter is damaged, do not install it. If the safety filter is being replaced, and a SafetySignal is used, secure it in place with a cotter (split) pin.

Secure the primary filter in place with the wing nut (hand tighten) using a new gasket washer. Use a new wing nut clip and reset the filter service indicator.













## 7 Inspect Air Cleaner System

Finally, inspect and tighten all air cleaner system connections. If there are holes or damage, replace immediately. Inspect all air ducting for worn spots or damage. Annual replacement of air cleaner system gaskets is recommended.





## The All-in-One STB Strata<sup>™</sup> System

#### Air Cleaner and Pre-Cleaner In One Package

#### **Applications**

- Allows 1050 to 1400 cfm airflow throughput per air cleaner
- For severe dust conditions, usually off-road applications: crawler tractors, scrapers, loaders, large agricultural tractors
- Horizontal installation


#### **Air Cleaner Features**

- Air cleaner and pre-cleaner in one package (exhaust ejector, scavenge hose and clamps sold separately)
- Pre-cleaned dust is ejected with the engine exhaust through an aspirated muffler or exhaust ejector
- Airflow pattern "B" air through the pre-cleaner, out the end of the air cleaner
- · Perfect for:
  - turbocharged engines
  - intercooled engines
  - naturally aspirated engines
- Fitting for filter service indicator on all models
- Finished in corrosion-resistant paint
- Weight: 78 lbs. (35.4 kg)

#### **Filter Features**

- Two replacement filter choices: standard life filter for shops that service air cleaners on scheduled maintenance (shipped with STB initially), or extended life filter for those who measure restriction to obtain full filter life
- Safety filter on all models provide continuous protection during primary filter change out


For installation instructions on the STB system, see the Technical Reference section.

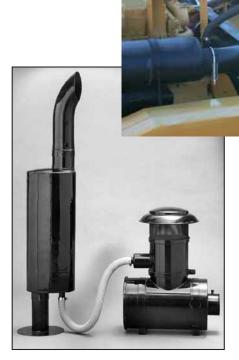

The STB Strata™ System protects heavyduty engines (like this one operating in severe dust conditions) with two-stage filtration and the convenience of aspirated dust ejection.

Ejector muffler, hose and clamps not included with B160071 — order parts separately.

#### **How the STB System Works**

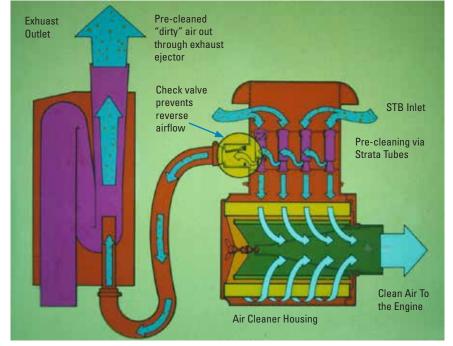



## When Selecting an Air Cleaner . . .

Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table at right. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lower restriction will provide longer filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, and pre-cleaners.

#### **Initial Airflow Restriction**


6" C	FM @ "H 8"	l₂0 10"	Air Cleaner Model
1050	1225	1400	B160071

#### Airflow Pattern "B"

Air in through the pre-cleaner, out the end of the air cleaner (lower) portion.




#### **STB Air Cleaner Performance Curve (Restriction & Dust Capacity)**

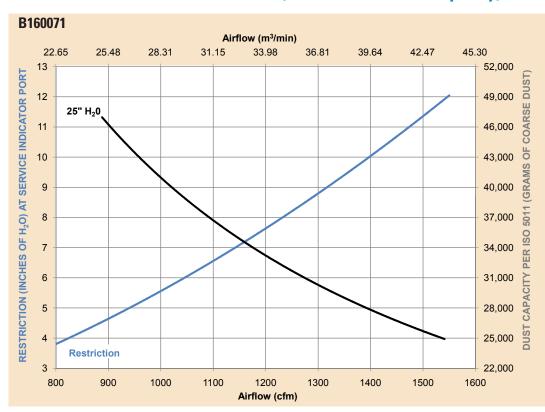

### STB Strata<sup>™</sup> Air Cleaners



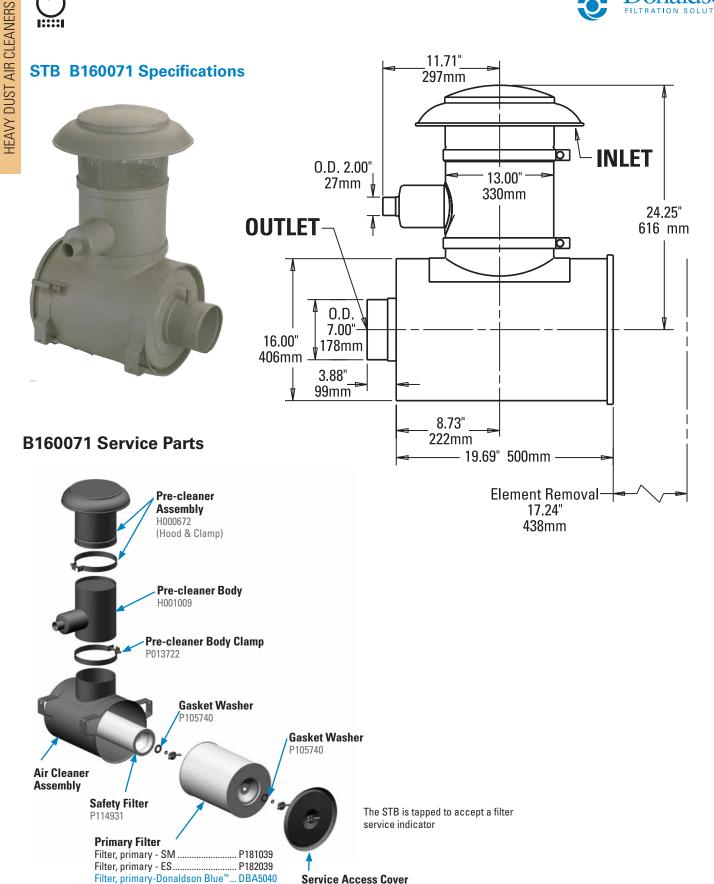

SM = Scheduled Maintenance ES = Extended Service Donaldson Blue™ = High Efficiency, Extended Service

**162** • Engine Air Filtration www.buydonaldson.com

**Service Access Cover** part of the air cleaner assembly





## Intake Accessories On- and Off-Road

#### **Accessories Help You . . .**

#### Set a Filter Service Schedule:

 Restriction indicators go-no-go, lock-up styles, electric, in-field manometers, safety filter indicator

## Aspirate (or scavenge) an intake system:

- Strata<sup>™</sup> Cap
- Donaspin<sup>™</sup>
- Exhaust Ejectors
- Air Stack Extension
- Check Valve

#### **Evacuate air cleaner dust:**

- Vacuator<sup>™</sup> Valves
- Quick Release Dust Cups
- Dust Dumpa
- Donaspin<sup>™</sup>
- STB Air System

#### Solve air intake water problems:

- Air Ram<sup>™</sup> Inlet Hood
- In-line Moisture Skimmer
- In-line Moisture Separator
- Stack Top Moisture Eliminator

## Pre-clean or protect air inlet from debris:

- Pre-cleaners
  - Strata<sup>™</sup> Cap
  - TopSpin<sup>™</sup> Pre-Cleaner
  - TopSpin™ HD Pre-Cleaner
  - Full-View Pre-Cleaner
  - In-line Separator
  - Donaspin™
- Air Ram<sup>™</sup> Inlet Hood
- Inlet Hoods

#### **Connect intake components:**

- Rubber Elbows and Connectors
- Clamps
  - Aluminum Tubing
  - Rubber and Silicone Hump/Reducers
  - Charge Air Connectors

#### Mount or install an air cleaner:

- Mounting Bands
- Straight Pipe



#### **Section Index**

Pre-Cleaners	164
Strata™ Cap	166
TopSpin™	170
TopSpin <sup>™</sup> HD	172
Full-View	174
Donaspin <sup>™</sup>	176
In-Line Separators	177
Inlet Hoods / Rain Caps	178
Air Cleaner Mounting Bands	180
Hose & T-Bolt Clamps	
Filter Service Indicators & Gauges	182
Rubber Elbows & Connectors	186
Charge Air Connectors	189
Vacuator <sup>™</sup> Valves	190
Dust Dumpa Tube Extensions	192
Exhaust Ejectors	194
Ejector Check Valves	195
Inlet Hood, Air Ram™	196
Moisture Skimmer	197
Moisture Eliminator	197
Air Stack Extensions	198
Intake Tubing	198
Breathers	198



#### No Matter What Dust Condition, Pre-cleaners Extend Air Filter Life

Pre-cleaners remove contaminant of varying sizes from entering the intake duct, and they don't require any engine power to operate. Some devices collect the contaminant (Full-View), others just eject or drop the contaminant (TopSpin,™ TopSpin™ HD, in-line separator), or are connected via a scavenge system and route debris out the exhaust system (Donaspin, Strata™ Cap).

#### **Product Offering**

- Six pre-cleaner styles offer the broadest product range in the industry
- Strata<sup>™</sup> Cap is the new scavenge system option for operating in heavy dust environments
- TopSpin™ HD is the new all-metal option for heavy-duty applications where a rugged and durable precleaner is needed
- Pre-cleaners extend life of vehicle air filters and serve as rain caps
- Units are made of durable materials — either metal or impact resistant plastic
- Most units install outside of engine compartment — leaving more space under hood for other components (exception-in-line separator)
- No wires or power requirements
- Please note: Strata Cap and Donaspin require additional components for scavenge system — hoses, check valves, clamps and exhaust ejector

## To Scavenge or Not To Scavenge . . .

Air cleaners are designed to operate with or without aspiration. Aspiration (otherwise known as scavenging) is accomplished by introducing a secondary airflow in the intake ducting (generally through the use of an exhaust ejector or ejector muffler). This secondary airflow pulls the separated contaminant from the pre-cleaner and ejects it into the exhaust stream.



The advantages to scavenging are:

- Higher pre-cleaner efficiency (resulting in longer primary filter service life)
- Completely self-servicing (no regular maintenance needed on pre-cleaner)
- Drop tube can be located in a variety of orientations (not just straight down as is necessary on non-scavenged systems)

Aspirating an intake system through the use of a scavenging device adds more components (an ejector and some plumbing) to the overall system, but will enhance the separator efficiency of the precleaner and consequently extend the primary filter service life.

## An alternative . . . Air Cleaners with Built-in Pre-Cleaning


Before you decide on adding a pre-cleaner. Take a look at our PowerCore® air cleaner housings — the PowerCore PSD Series. PowerCore air cleaners have a pre-cleaning section built directly into the housing. If you have the room, choosing a PowerCore air cleaner will reduce the number of components in your intake system — fewer parts to track, maintain and manage. And, some PSD air cleaner models can also be used in scavenged systems.

See the PowerCore PSD Series section for more information.



#### **Selection**

Select the style that matches dust conditions, airflow and desired efficiency level. Each pre-cleaner family is presented on the following pages.

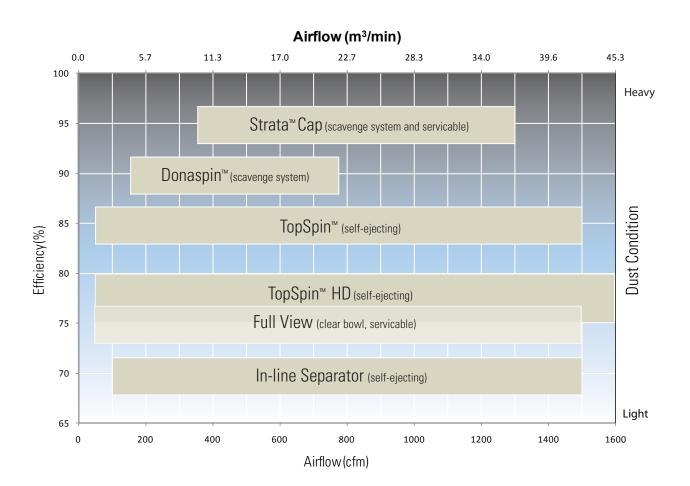

#### Compare — Weight, Scavenge, Service and Materials

Additional characteristics about our pre-cleaner line to help you decide on the style that's best for you.

Dust Condition	Max. Septr Efficiency	Unit Wei Ibs.	ght Range kg.	Pre-Cleaner Family	Scavenge Required	Service Required	Material
Heavy	96%	6.2 - 9.1	2.82 - 4.14	Strata™ Cap	Yes	Yes	Plastic
	90%	8.0 - 10.0	3.63 - 4.54	Donaspin™	Yes	No	Steel
Medium	85%	1.0 - 6.0	0.45 - 2.72	TopSpin™	No	No	Plastic
	80%	1.0 – 9.5	0.5 – 4.3	TopSpin™ HD	No	No S	Aluminum/ Stainless Steel
	70%	11.5 – 14.8	5.23 - 6.70	In-Line Separator	· No	No	Steel
	75%	0.8 - 9.2	0.37 - 4.17	Full-View	No	Yes	Steel/Plastic

### Strata™ Cap Pre-Cleaner



#### Low Profile Pre-cleaner and Rain Cap in One!

The scavenged Strata™ Cap pre-cleaner removes up to 96% of incoming contaminant — the highest efficiency compared to all other Donaldson pre-cleaners. It is designed for the most demanding heavy dust environments in the construction and mining industry.

#### **Features**

Separates up to 96% of incoming contaminant per ISO 5011/SAE J726

- Significantly extends air filter life
- Reduces air filter servicing and replacement
- Lowers cost per operating hour
- Separates more than 99% of 20 micron and above particles

Low profile for maximum operator visibility

Robust design for heavy-duty environments

- No moving parts
- Both a rain cap and pre-cleaner
- No bowl to clean or empty
- UV resistant plastic construction

#### Simple installation

- Unit installs outside of engine compartment, leaving more space under hood for other components
- No wires or power requirements
- Requires additional standard components for scavenge

#### Lighter Weight

- Low profile
- Lighter weight compared to other Donaldson scavenge systems; e.g., STB System and Donaspin™ pre-cleaner

#### **Application**

- Accommodates a range of airflows from 350 to 1,300 cfm (9.9-36.8 m3/min).
- Primarily used in heavy dust environments
- Great for off-road vehicles and equipment from crawler tractors to farm tractors to skid steer loaders
- Recommended mounting: outside of engine compartment on top of the air cleaner inlet stack



The scavenged Strata™ Cap pre-cleaner removes up to 96% of incoming contaminant — the highest pre-cleaning efficiency ever invented by Donaldson.




### Strata<sup>™</sup> Cap Pre-Cleaner

#### **Advantages of Scavenging**


Scavenging is accomplished by introducing a secondary airflow to the drop tube on the air cleaner (generally through the use of an ejector or ejector muffler). This flow pulls the separated contaminant from the pre-cleaner and inserts it into the exhaust stream.

- Higher pre-cleaner efficiency (resulting in longer filter service life)
- Completely self-servicing (no regular maintenance needed on pre-cleaner)

Aspirating an intake system through the use of a scavenging device adds more components (an ejector and some plumbing) to the overall system, but will enhance the separator efficiency of the pre-cleaner and consequently extend the filter service life.

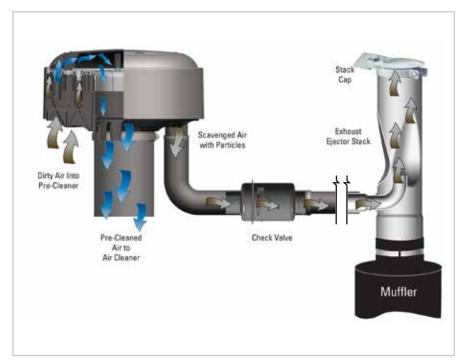


#### **Performance — Restriction at 10% Scavenge**

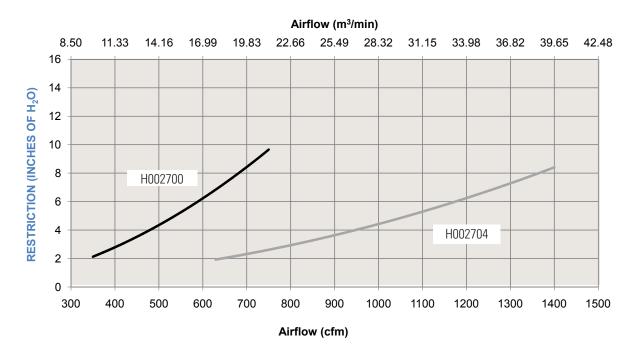


### Strata<sup>™</sup> Cap Pre-Cleaner



#### Performance — Initial Efficiency at 10% Scavenge

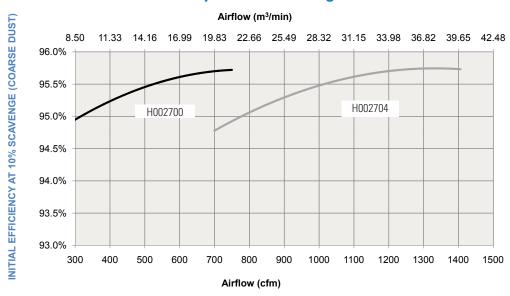

## Dimensional Specifications

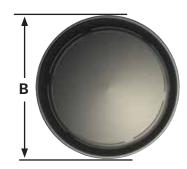



Overa Heigl in		Body Dia. (B) in mm	Outlet I.D. (C) in mm	Scavenge Hose I.D. (D) in mm	Part Number	Weight lbs. kg.	Rated Air Flow @ 6" H <sub>2</sub> O
8.00	218	14.00 356	5.00 127	2.00 51	H002700	13.6 6.2	600 cfm / 17.0 m³/m
8.60	218	17.20 437	8.00 203	2.00 51	H002704	19.4 8.8	1140 cfm / 32.3 m³/m

#### Installation

For proper function, the pre-cleaner/rain cap installs over a 5.0" or 8.0" OD metal intake tube and connects to a 2.0" I.D. scavenge hose. The scavenge hose should be secured from movement within 12.0" / 305mm of the pre-cleaner/rain cap.

Additional components are required for proper installation:

- Scavenge hose (2.0" / 51mm I.D.) need enough for two cut lengths connecting to the Strata™ Cap to check valve and the check valve to exhaust ejector
- Hose clamps (x 4) (Part No. P115200)
- Check Valve (Part No. H000722)
- Metal Intake Tube (O.D.) to mount Strata<sup>™</sup> Cap to Air Cleaner (5.0" / 127mm or 8.0" / 203mm Dia. — depends on your Strata<sup>™</sup> Cap size)
- Standard and expanded I.D. exhaust ejectors available



### Strata<sup>™</sup> Cap Service Instructions

#### **Service Procedure**

The pre-cleaner/rain cap may need to be cleaned over time. The procedure below recommends removal and disassembly of the unit to clean. The unit can be cleaned with either water, mild-soapy water or compressed air. Tapping or hitting the components to dislodge contaminant should be avoided. It may cause damage and prevent reassembly.

Cover

Upper Baffle and Gasket

Lower Baffle

Screen

6 Screws (10-24x4") Torque 2.3 ± 0.3-0.6 N•m


Clamp 11.3 ± 2.0 N·m.



### Service Parts

**Strata Cap Model No. Gasket**H002700
P617476
H002704
P167475

**1/2 Screen** P617922 P617923

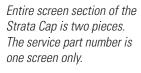

- 1. Turn off engine.
- Loosen both connecting clamps (metal pipe and scavenge hose) and remove the Strata™ Cap pre-cleaner.

Note: Cover or plug intake pipe to protect air intake system from contamination during service.

- 3. Turn unit upside down.
  Remove the screws (save for reassembly) and disassemble the unit (screen is two pieces).
- 4. Clean all the parts to remove dust and debris from each component.
- 5. After cleaning, inspect the gasket on the perimeter of the upper baffle. If damaged in any way replace with new gasket. Check gasket position, make sure it is installed evenly around upper baffle permitter.

Note: Using the unit without gasket properly installed will affect Strata Cap pre-cleaning performance.

- With cover upside down, reassemble components. Unit has alignment guides to aide reassembly.
- With all components together, reinstall and torque the 6 screws to 2.3 ± 0.3-0.6 N•m

Note: Removable screw adhesive is to be used on the screws if original blue patch has been worn off.

8. Replace Strata Cap on intake stack, reconnect scavenge hose. Tighten clamps to torque specifications. If scavenge support was disconnected, reconnect.

### TopSpin™ Pre-Cleaner



### **TopSpin™ Can Extend Filter Life in Heavy Dust Conditions**

Donaldson TopSpin™ will extend primary air filter life, boost system efficiency, and extend engine life.

#### **Features**

# Separates up to 85% of incoming contaminant per ISO 5011/SAE J726

- Greatly extends air filter life
- Reduces air filter usage
- Lowers cost per operating hour
- Automatically ejects mixed debris
- Separates more than 99% of 20 micron and above particles

#### Self-cleaning/self-scavenging

- No maintenance to clean bowl
- No exhaust ejector required

#### Easy installation

- Quick installation
- One clamp to tighten
- No wires or power requirements

#### Dual mounted bearings

- More robust design
- Extends bearing life

#### Lighter Weight

- Lighter than competitive precleaners
- Lighter than Donaldson full-view pre-cleaner

#### **Application**


- Engine airflows of 80 to 1500 cfm (2.3-42.5 m3/min).
- Primarily used in medium to heavy dust environments
- Great for off-road vehicles and equipment from crawler tractors to farm tractors to skid steer loaders
- Recommended mounting: on top of the air cleaner inlet stack








Donaldson TopSpin™ in Action
Upper left, TopSpin on exacvator; upper right, millitary ground vehicle in middle east; left, TopSpin on pumper truck in Australia.

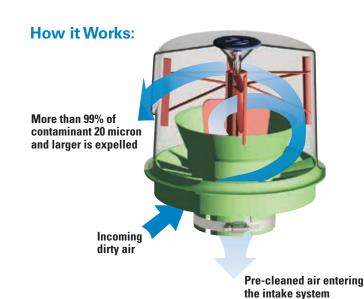




#### **Performance Curves**


Multiple tests conducted per ISO 5011/SAE J726 and average results are shown in charts below.

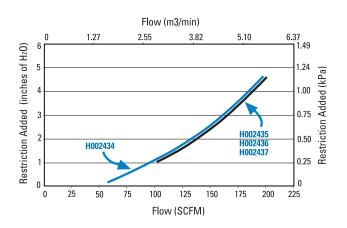


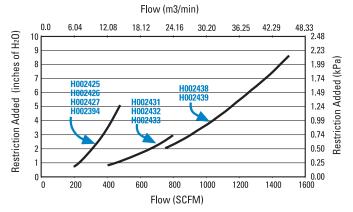

#### **Dimensional Specifications**

Donaldson TopSpin™ can be mounted horizontally or vertically. Installation instructions, stainless clamp and warranty are included. Operating temperature range: -40 °F to 180 °F (-40 °C to 82 °C)

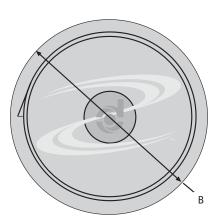

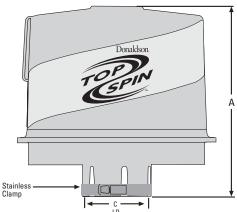



Out I.D. in		Over Heigh in		Bod Dia. in	.* .	Part Number	We lbs.	ight kg.
2.03	52	5.75	146	6.38	162	H002434	1.0	0.4
2.27	58	5.75	146	6.38	162	H002435	1.0	0.4
2.53	64	5.75	146	6.38	162	H002436	1.0	0.4
3.03	77	5.75	146	6.38	162	H002437	1.0	0.4
3.07	78	9.39	238	9.51	242	H002425	2.2	1.0
3.83	97	9.39	238	9.51	242	H002426	2.2	1.0
4.06	103	9.39	238	9.51	242	H002394	2.2	1.0
		11.30	287	11.32	288	H002431	2.7	1.2
4.56	116	9.39	238	9.51	242	H002427	2.2	1.0
		11.30	287	11.32	288	H002432	2.7	1.2
5.03	128	11.30	287	11.32	288	H002433	2.7	1.2
6.03	153	13.57	345	15.62	397	H002438	6.0	2.7
7.03	179	13.57	345	15.62	397	H002439	6.0	2.7

Cross reference from a full-view pre-cleaner to a TopSpin pre-cleaner can be found on the Full-view Pre-cleaner page.

### TopSpin™ HD Pre-Cleaner



### All-Metal Pre-cleaner is Durable Solution for Punishing Conditions

Donaldson TopSpin™ HD will extend primary air filter life, boost system efficiency and extend engine life in medium to heavy dust environments.

#### **Features**

#### Separates up to 80% of incoming contaminant per ISO 5011

- All-metal construction
- Greatly extends air filter life
- Reduces air filter usage
- Lowers cost per operating hour
- Automatically ejects mixed debris

#### Self-cleaning/self-scavenging

- No maintenance to clean bowl
- No exhaust ejector required

#### Easy installation

- Quick installation
- One clamp to tighten
- No wires or power requirements

#### **Application**

- Engine airflows of 50 to 1600 cfm (1.4-45.3 m3/min).
- Primarily used in medium to heavy dust environments
- Great for off-road vehicles and equipment, including crawler tractors, farm tractors, skid steer loaders, mining, and fracking machines
- Recommended mounting: on top of the *metal* air cleaner inlet stack. Do not mount on non-metal inlet stack



### Built as tough as your equipment

Rugged one-piece aluminum hood with recessed discharge louver sheds flying debris.



One-piece stainless steel impeller is the only moving part. Dual bearings ensure reliable performance.


locking nut makes installation quick and secure. Clamp is included with each TopSpin HD.


All the interior components are solid stainless steel to resist dirt, water, heat, and debris encountered in demanding environments.






#### **TopSpin HD Performance Curves**

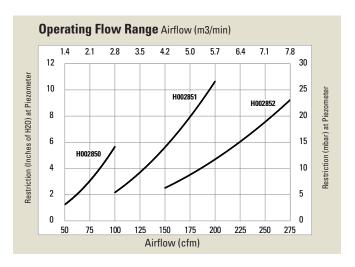


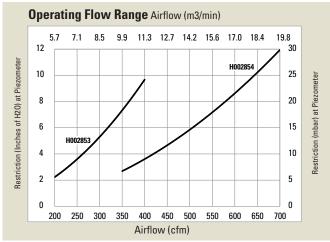


#### **Dimensional Specifications**

Donaldson TopSpin™ HD can be mounted in an upright position or horizontally with louver opening at the bottom. Installation instructions, stainless steel clamp and limited lifetime warranty are included. Operating temperature range: -40 °F to 180 °F (-40 °C to 82 °C).

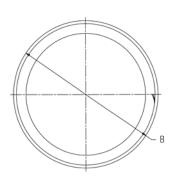

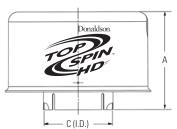

Cross reference from a Full-View pre-cleaner to a TopSpin™ HD pre-cleaner can be found on the Full-view Pre-cleaner page.

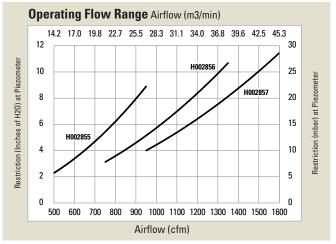



Out I.D. in		Ove Heigl in		Boo Dia. in	•	Operating FI SCFM*	ow Range m3/min.	Part Number	Weig lbs.	jht kg.
2.06	52.3	3.41	86.5	5.4	137.2	50-100	1.4-2.8	H002850	1.0	0.5
2.58	65.5	4.25	108	6.3	160	100-200	2.8-5.6	H002851	1.75	0.8
3.07	78	4.96	125.9	7.2	182.9	150-275	4.2-7.8	H002852	2.75	1.2
4.10	104.1	5.81	147.6	8.72	221.6	200-400	5.6-11.3	H002853	3.75	1.7
5.08	129	7.56	192.1	11.19	284.2	350-700	10-20	H002854	6.5	3.0
6.10	154.9	7.72	196	12.78	324.6	500-950	14-27	H002855	7.25	3.3
7.10	180.3	8.38	212.7	14.75	374.6	750-1350	21-38	H002856	9.5	4.3
8.08	205.2	8.38	212.7	14.75	374.6	950-1600	26.6-44.8	H002857	9.5	4.3

\*SCFM = Standard Cubic Feet per Minute. The ISO 5011/SAE J726 test procedure was used to extract the results in the charts above. The ISO 5011/SAE J726 is a widely accepted industry test used by 0EMs to evaluate the efficiency of the intake system components. Test results are an average from testing several units.



# Full-View Pre-Cleaner Helps Extend Filter Life on Agricultural & Construction Equipment

#### **Features**

- Recommended mounting: on top of the engine intake stack
- Centrifugal force in bowl separates up to 75% of incoming dust *before* it enters the engine air intake system
- Low maintenance
- Durable, lightweight, noncorrosive construction
- Full-view plastic bowl lets operator easily see when service is needed
- One-bolt cover retention for easy service. When dirt reaches the level of the arrow, remove top nut and plastic body, then empty

  — no tools required
- Mounting clamp included









### **Tired of Emptying the Cup?**

Before you consider replacing your full-view pre-cleaner with another one, check out the TopSpin™ and TopSpin™ HD models on the previous pages.







#### Pre-cleaner Upgrade Path

Full-View	TopSpin	TopSpin <sup>™</sup> HD
H000820	H002425	
H000821	H002426	
H000858	H002394	H002853
H000823	H002427	
H001250	H002435	
H001251	H002436	H002851
H001249	H002437	H002852
H001823	H002434	H002850
H002043	H002433	H002854
H002044	H002432	
H002045	H002431	
H002223	H002438	H002855
H002224	H002439	H002856
N/A	N/A	H002857



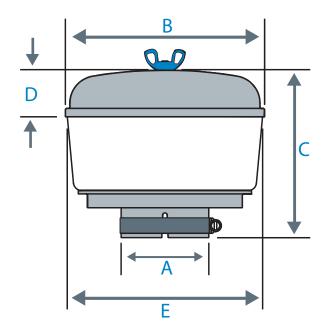

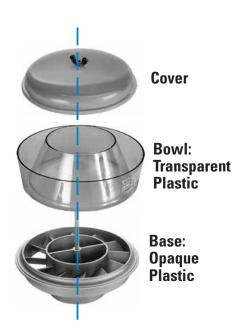

### **Full-View Pre-Cleaners Specifications**

Inlet	(ID/OD)	B		C		D	)	F		Wei	aht	Entire F.V. Pre-	Renlac	ement	Max. Airflow
in	mm	in	mm	in	mm	in	mm	in	mm	lbs	kg	Cleaner	Cover	Bowl	CFM
1.75	44	5.59	142	4.75	121	1.72	44	5.50	140	0.8	0.37	H002042	P020116	P020115	80
2.00	51	5.59	142	4.75	121	1.72	44	5.50	140	0.9	0.41	H002040	P020116	P020115	90
		7.34	186	6.19	157	1.72	44	7.25	184	1.4	0.64	H001823 <sup>1</sup>	P020648	P020227	110
2.25	57	7.34	186	6.19	157	1.72	44	7.25	184	1.5	0.68	H001250	P020648	P020227	130
2.50	64	7.34	186	6.19	157	1.72	44	7.25	184	1.5	0.68	H001251	P020648	P020227	150
3.00	76	7.34	186	6.19	157	1.72	44	7.25	184	1.6	0.73	H001249	P020648	P020227	170
		10.63	270	7.66	195	1.84	47	10.50	267	3.4	1.54	H0008201	P016548	P016330	320
3.75	95	10.63	270	7.66	195	1.84	47	10.50	267	3.4	1.54	H000821	P016548	P016330	330
4.00	102	10.63	270	7.66	195	1.84	47	10.50	267	3.4	1.54	H000858	P016548	P016330	340
		12.06	306	8.19	208	2.00	51	11.94	303	4.5	2.04	H002045 <sup>1</sup>	P020345	P020344	660
4.50	114	10.63	270	7.66	195	1.84	47	10.50	267	3.4	1.54	H000823	P016548	P016330	340
		12.06	306	8.19	208	2.00	51	11.94	303	4.5	2.04	H002044 <sup>1</sup>	P020345	P020344	700
5.00	127	12.06	306	7.69	195	2.00	51	11.94	303	4.5	2.04	H002043	P020345	P020344	740
6.00	152	16.25	413	10.00	254	2.81	71	15.94	405	9.2	4.17	H002223	P104691	P158324	1300
7.00	178	16.25	413	10.00	254	2.81	71	15.94	405	9.2	4.17	H002224	P104691	P158324	1500

1 - Heavy Duty Option

### Donaspin<sup>™</sup> Pre-Cleaner



### **Extends Filter Life in Extremely Heavy Dust Conditions**

The Donaspin™ Pre-Cleaner extends the life your air filter by removing up to 90% of the dirt and contaminant before it reaches the filter and ejecting it automatically via the exhaust system.

Donaspin is designed especially for equipment operating in very heavy dust/debris environments.


#### **Application**

- Vehicles: agricultural equipment, construction and waste haul vehicles
- For engine airflows of 305 to 800 cfm
- Recommended mounting: on top of the air inlet stack

#### **Features**

- Built-in louvers spin air to separate up to 90% of incoming dirt and debris from the air intake system
- Works as part of a scavenged flow system to continuously expel pre-cleaned contaminants through the exhaust flow
- Durable, corrosion-resistant steel construction
- High efficiency with low restriction
- No maintenance. Self-cleaning. No moving parts.
- · Mounting clamp is included




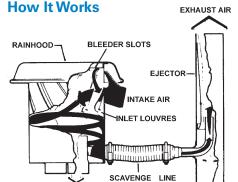

To create a scavenged flow system, combine the Donaspin with a Donaldson exhaust ejector and ejector check valve.



The Donaspin installed on this combine removes most of the incoming dirt, then directs the contaminant out of the system with the exhaust gases.

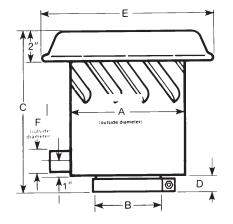

#### Donaspin™ Pre-Cleaner

/	Α	B (I	l. <b>D</b> .)	(	)	D	)	E			F	Rated Airflow @ 5" H <sub>2</sub> 0	App We	rox. ight	Part
in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	Added	lbs	kgs	Number
8.00	203	3.00	76	11.98	304	2.15	55	12.00	305	1.25	32	305	8	3.6	H001212
8.00	203	4.50	114	10.93	278	1.10	28	12.00	305	1.25	32	465	8	3.6	H001215
8.00	203	5.00	127	11.14	283	1.31	33	12.00	305	1.25	32	530	8	3.6	H001308
9.00	229	6.00	152	14.68	373	1.10	28	13.00	330	1.25	32	770	10	4.5	H001375



### **Two-stage Cleaning for Unexpected Dust/Moisture Conditions**

When your truck is being used in heavier-than-anticipated dust or moisture conditions, you may not have to replace the entire air cleaner. The problem may be solved by adding a Donaldson in-line separator.


Installing this unit on your singlestage system **creates a two-stage air filtration system**. This enables an over-highway vehicle, which usually sees only light dust, to be easily and economically adapted to off-road medium to heavy dust conditions.

#### **Applications**

- Vertical model: On/off road, mounted on inlet tubing or cowl mounted directly to air cleaner
  - Compatible with engine airflows of 500 to 1500 cfm
- Horizontal model: On/off road, typically mounted underhood
  - Compatible with engine airflows of 100 to 1400 cfm

#### **Features**


- 80% water removal efficiency
- 70% dust removal efficiency

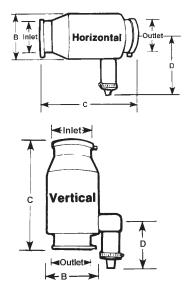



#### **How It Works**

- 1. When moisture and/or dust-filled air enters at one end, the built-in, stationary vanes cause the air to spin.
- 2. This spin creates centrifugal force, which pushes all moisture and dust to the outside wall where it separates from the air.
- 3. Moisture and dust are thrown into the Vacuator Valve tubing, then automatically released by the Vacuator Valve.
- 4. Clean air (acceptable for maximum filter life and engine performance) passes to the air cleaner.

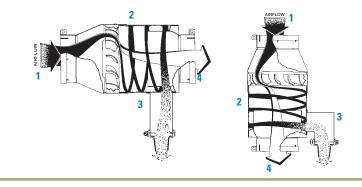

#### **In-Line Separators**


Part Number	CFM Range	ln in	let mm	Ou in	ıtlet mm	Diame in	eter (B) mm	Lengt in	h (C) mm	(D in	) mm
HORIZONT	AL STYLE										
H001474	100-400	4 OD1	102 OD	4 OD	102 OD	5.50	140	11.50	292	7.18	182
H000875	500-1,000	6 ID <sup>2</sup>	152 ID	6 ID	152 ID	8.56	217	17.25	438	11.58	294
H001906	700-1,400	7 ID	178 ID	7 ID	178 ID	9.59	244	17.0	432	12.02	305
VERTICAL	STYLE										
H000878	500-1,100	6 ID	152 ID	6 ID	152 ID	8.56	217	17.25	438	7.80	198
H000886	750-1,100	7 ID	178 ID	7 ID	178 ID	8.56	217	17.25	438	7.80	198
H001220	900-1,500	8 OD	203 OD	8 ID	203 ID	9.59	244	17.0	432	4.56	115

- 1 Outer diameter
- 2 Inner diameter



### **Protection Against Rain and Debris Ingestion**

- Protects engine air intake from rain, snow, birds, and other large contaminants
- Mounts on stack or directly to air cleaner for on-road and off-road equipment
- Four styles in a wide variety of sizes
- Installs easily with one clamp. Clamp included with hood on styles B, C and D

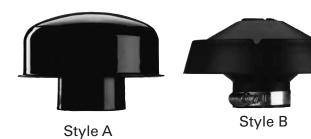






Style C



Style D




#### Inlet Hood — Style A<sup>1</sup>

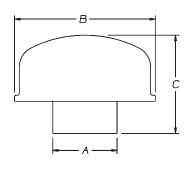

Fits 0	.D. (A)	Hood	Dia. (B)	Heig	ht (C)	Add to	Stack		Wei	ight	Part
inch	mm	inch	mm	inch	mm	inch	mm	Mat'l	lbs	kgs	Number
1.75	44	4.13	105	3.31	84	2.75	70	Metal	0.50	0.22	X002017
2.00	51	4.13	105	3.25	83	2.75	70	Metal	0.50	0.22	X002018
2.25	57	5.24	133	3.97	101	3.50	89	Metal	0.80	0.36	X002019
2.50	64	5.25	133	3.97	101	3.50	89	Metal	0.80	0.36	X001966
3.00	76	6.13	156	5.06	129	3.75	95	Metal	1.10	0.50	X002014
3.75	95	8.06	205	7.75	197	6.00	152	Metal	2.10	0.95	X001988
4.00	102	8.06	205	7.88	200	6.00	152	Metal	2.00	0.90	X002015

<sup>1 -</sup> Clamps must be ordered separately for this style.




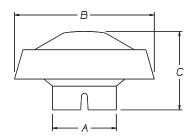

#### Inlet Hood — Style B

Fits 0.	.D. (A) mm	Hood l	Dia. (B) mm	Heig inch	ht (C) mm	Add to inch	Stack mm	Mat'l	We lbs	ight kgs	Part Number
1.75	44	6.00	152	3.37	86	2.05	52	Plastic	0.20	0.09	H002068
2.00	51	6.00	152	3.31	84	2.50	64	Plastic	0.20	0.09	H001377
2.50	64	6.00	152	3.31	84	2.50	64	Plastic	0.20	0.09	H001378
3.00	76	6.00	152	3.31	84	2.50	64	Plastic	0.20	0.09	H001379

#### Inlet Hood — Style C

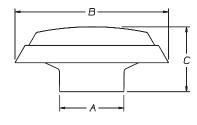


Air Inlet Hood Style C offers more models that provide added rain/water protection. While all inlet hoods offer top rain/water there are some that offer additional protection from splash on the underside of the hood.

		/									
Fits 0 inch	.D. (A) mm	Hood I inch	Dia. (B) mm	Heig inch	ht (C) mm	Add to inch	Stack mm	Mat'l	We Ibs	ight kgs	Part Number
3.00	76	11.50	292	5.88	149	3.63	92	Plastic	1.10	0.50	H001063
3.75	95	11.50	292	5.13	130	3.63	92	Plastic	0.80	0.36	H000466
		11.50	292	5.13	130	3.63	92	Plastic	1.00	0.45	H000473 <sup>2</sup>
4.00	102	11.50	292	5.06	129	3.38	86	Plastic	0.90	0.40	H000467
		11.50	292	5.06	129	3.38	86	Plastic	1.00	0.45	H000472 <sup>2</sup>
4.50	114	11.50	292	4.88	124	3.38	86	Plastic	0.80	0.36	H000468
		11.50	292	4.88	124	3.38	86	Plastic	1.00	0.45	H000471 <sup>2</sup>
5.00	127	11.50	292	4.88	124	3.31	84	Plastic	0.80	0.36	H000469
		11.50	292	4.88	124	3.31	84	Plastic	1.00	0.45	H000470 <sup>2</sup>
		16.00	407	5.75	146	3.31	104	Plastic	1.80	0.80	H000605 <sup>2</sup>
5.50	140	16.00	407	5.75	146	4.94	125	Plastic	1.80	0.80	H000604 <sup>2</sup>
6.00	152	16.00	407	5.75	146	4.94	125	Plastic	1.80	0.80	H000606 <sup>2</sup>
		13.00	330	4.06	103	2.69	68	Bright	1.50	0.68	H001756
		16.00	406	5.69	145	4.25	108	Bright	1.50	0.68	H001948 <sup>2</sup>
7.00	178	12.81	325	4.81	122	3.44	87	Bright	1.50	0.68	H001773
		13.00	330	3.88	99	2.50	64	Bright	1.50	0.68	H001742
		16.00	406	5.75	146	4.09	104	Plastic	1.80	0.80	H000607 <sup>2</sup>
		16.00	406	5.69	145	4.25	108	Bright	1.50	0.68	H001947 <sup>2</sup>
8.00	203	16.00	406	6.19	157	4.69	119	Plastic	1.80	0.80	H001053 <sup>2</sup>
		16.00	406	6.19	157	4.60	117	Bright	1.50	0.68	H001946 <sup>2</sup>
											The state of the s

<sup>2 -</sup> Hood has rain shroud on underside of hood style.

#### Inlet Hood — Style D

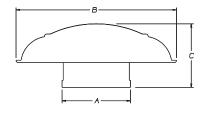

Fits 0	D. (A)	Hood I	Dia. (B)	Heig	ht (C)	Add to	Stack		We	ight	Part
inch	mm	inch	mm	inch	mm	inch	mm	Mat'l	lbs	kgs	Number
4.50	114	9.50	241	4.69	119	3.69	94	Metal	3.20	1.44	H000170
5.00	127	9.50	241	4.69	119	3.69	94	Metal	3.30	1.50	H000165
6.00	152	9.50	241	4.69	119	3.69	94	Metal	3.10	1.40	H000275
		9.50	241	4.69	119	3.69	94	Metal	3.20	1.44	H000276 <sup>2</sup>
7.03	179	17.00	432	6.75	171	5.75	146	Metal	4.60	2.08	H000339
10.00	256	15.98	406	7.42	188	5.28	134	Metal	5.0	2.27	H770082

### Mounting Bands



### W-Foot Mounting Bands Designed For Donaldson Air Cleaners


- Durable, corrosion-resistant, steel construction
- Fully engineered and tested to resist the adverse effects of vibration
- Mounting band feet are designed to ensure maximum torque pressure, continuously
- Air cleaners require minimum of two mounting bands per housing
- Gauge of steel increases as diameter of mounting band increases
- Bright stainless models available
- Bolt and nut included with mounting band



Most of our air cleaners with metal housings require two mounting bands.



Two models (H770068, H770037) have different foot band compared to others.

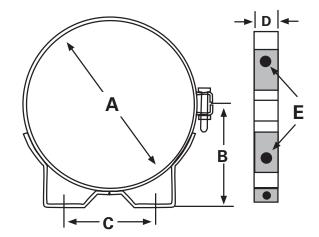

#### **Air Cleaner Mounting Bands**

inch A	mm	B inch	mm	inch	; mm	D inch	mm	inch	mm	Weig lbs	ht kg	Max. Bol lbs-ft	t Torque N•m	Part Number
4.00	102	2.56	65	2.50	64	.75	19	.31	8	0.30	0.14	1.50	2.03	P007189
5.25	133	3.19	81	3.25	83	.88	22	.34	9	0.70	0.32	1.50	2.03	P002348
6.00	152	3.56	90	3.25	83	1.00	25	.34	9	0.80	0.36	1.50	2.03	P002351
6.50	165	3.88	99	3.75	95	.88	22	.41	10	0.70	0.32	2.00	2.71	P007191
7.00	178	4.13	105	4.50	114	.88	22	.30	8	0.80	0.36	3.00	4.07	P004906
7.75	197	4.44	113	4.25	108	1.00	25	.34	9	0.90	0.41	3.50	4.75	P003245
8.00	203	4.50	114	4.25	108	1.00	25	.34	9	1.10	0.50	4.00	5.42	P004307
9.00	229	5.13	130	4.5	114	1.25	32	.45	11	1.50	0.68	4.00	5.42	P004073
10.19	259	5.75	146	5.00	127	1.25	32	.45	11	1.50	0.68	4.00	5.42	P004076
11.00	279	6.13	156	5.00	127	1.25	32	.45	11	1.70	0.77	4.00	5.42	P004079
11.81	300	6.88	175	6.00	152	1.50	38	.41	10	2.50	1.13	4.00	5.42	H000349
13.00	330	7.25	184	6.00	152	1.50	38	.41	10	2.80	1.50	4.00	5.42	P013722
		7.25	184	6.00	152	1.50	38	.41	10	2.80	1.50	4.00	5.42	P522439*
14.00	356	8.13	207	8.00	203	1.50	38	.47	12	3.70	1.68	5.00	6.78	H000350
15.00	381	8.00	203	8.00	203	1.50	38	.47	12	4.10	1.86	6.00	8.14	P016845
		8.00	203	8.00	203	1.50	38	.47	12	4.10	1.86	6.00	8.14	P524552*
16.00	406	9.13	232	10.00	254	1.50	38	.47	12	4.75	2.16	5.00	6.78	H000351
18.00	457	9.2	234	15.75	400	1.96	50	.55	14	5.25	2.38	5.00	6.78	H770037
19.29	490	10.97	279	19.29	490	1.96	50	.55	14	6.39	2.9	5.00	6.78	H770068

\*Bright Stainless Model



### **Worm-Drive Hose Clamps**

- Versatile clamps for wide size range of hose connections
- Made of strong, durable, noncorrosive stainless steel
- Inside of clamp is lined so that hose doesn't bulge through clamp holes
- Narrow band enables easy installation in confined areas




#### **Lined Hose Clamp**

Min. to Max. Sinch	Size mm	Part Number
9/16 — 13/16	14–21	P532919
11/16 — 15/16	17–24	P532920
13/16 — 1-1/16	21–27	P532921
13/16 — 1-1/2	21–38	P532923
13/16 — 1-3/4	21-44	P532924
15/16 — 1-1/4	29–32	P532922
1-9/16 — 2-1/2	40-62	P115200
2-1/16 – 3	52-76	P115201
2-13/16 - 3-3/4	71–95	P143422
3-5/16 — 4-1/4	84–108	P115202
4-5/16 — 5-1/4	109–133	P115203

### Recommended application up to 40 in•lb torque

Donaldson lined hose clamps seal silicone and other soft hoses without damage. The inner liner extends under the perforations to protect the hose and prevents extrusions through the wormgear perforations.

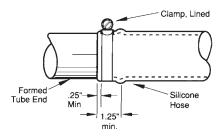

Initial torque on lined hose clamp should be 40 in·lb. If retorquing is required, limit to 20 in·lb.



#### **Constant Torque Clamp**

Min. to Max. inch	Part Number	
2-1/4 - 3-1/8	57 – 79	P532925
2-3/4 - 3-5/8	70 – 92	P532926
3-1/4 - 4-1/8	83 – 105	P532927
3-3/4 — 4-5/8	95 – 117	P532928
4-1/4 — 5-1/8	108 – 130	P532929

### Recommended application up to 90 in•lb torque

Donaldson constant torque lined clamps are the best choice for systems where clamps cannot be retightened and have difficult access. Perfect for applications requiring higher torque, large diameters, temperature extremes, or where expansions and contractions within the system are common. This clamp is a good choice for critical coolant and charge-air connections.



#### **High Torque Clamp**

Min. to Max inch	Part Number	
4-1/4 — 5-1/8	108-130	P115204
5-1/4 - 6-1/8	133-156	P115205
6-1/4 - 7-1/8	159–181	P115206
7-1/4 — 8-1/8	184–206	P115207
8-1/4 — 9-1/8	210-232	P115208
10-1/4 — 11-1/8	260-286	P115209

### Recommended application up to 150 in•lb torque

This EXTRA heavy-duty clamp ensures total protection against leakage . . . eliminates the need for double clamping.

### **T-Bolt Clamps**



Nominal I.D. <sup>1</sup>	Min. to Max inch	c. Size mm	Part Number
2.00	2.25 - 2.53	57 – 64	P148337
2.25	2.50 - 2.78	63 - 70	P148338
2.50	2.81 - 3.09	71 – 78	P148339
2.75	3.06 - 3.34	78 - 85	P148340
3.00	3.31 – 3.59	84 – 91	P148341
3.50	3.81 - 4.09	98 – 104	P148342
4.00	4.31 - 4.59	109 – 116	P148343
4.50	4.81 - 5.09	122 – 129	P148344
5.00	5.31 - 5.59	135 – 142	P148345
5.50	5.94 - 6.21	151 – 158	P148346
6.00	6.38 - 6.65	162 – 169	P148347
7.00	7.38 - 7.78	187 – 198	P148348
8.00	8.25 - 8.56	210 – 217	P148349
8.25	8.50 - 8.81	216 – 224	P629991
10.00	10.50 – 10.91	267 – 277	P148350

 Nominal I.D. dimension, shown in inches, corresponds to I.D. dimension of rubber part being clamped.

### Filter Indicators & Gauges



#### Filter Service Indicators Maximize Filter Life

#### Typical mounting options: on the air cleaner outlet tube, on the intake duct, or remote

Replacing filters based on restriction readings can reduce your maintenance costs significantly. Visual inspection of air filters is not adequate and should not dictate service life. Filters that appear very dirty may still contain a great amount of service life.

Over-servicing and excessive handling of the filter can result in serious consequences: filter damage, improper installation, intake contamination from ambient dust, and/or increased service cost, time and material. In contrast, filter service based on restriction readings can enable you to obtain the longest life possible from the filter, and the best engine protection.

# Restriction Readings, Where & When

Restriction readings are normally taken at the air cleaner on the clean side of the air filter. If the air cleaner does not have a restriction tap, readings can be taken anywhere in the system between the air cleaner and the engine. To measure restriction of a naturally aspirated



Filter service indicators are very effective when mounted *on the outlet tube of the air cleaner*, see The Informer™ above. This gives the operator constant and accurate visibility of filter life.

diesel engine, the reading is taken at full-governed RPM with no load.

# Choose Restriction Measurement Tools that Best Fit Your Applications

Donaldson offers a variety of restriction measuring devices that help you get maximum filter utilization. All measure restriction in inches of water vacuum. All are resistant to vibration, breakage, weather, corrosion, dust and dirt to assure reliable filter restriction readings.



**Continuous Reading** devices that show how much life is left in the filter are:

- The Informer<sup>™</sup>
- Service Gauge for Instrument Panel

**Go/No-Go** restriction readings on heavy-duty vehicles are:

- ServiSignal™
- Visual Restriction Indicator
- Electrical Indicator
- SafetySignal<sup>™</sup> for safety filters

**In-Field** restriction readings on lightand medium-duty vehicles are:

- In-Field Service Gauge Kit
- Water manometer

## Maximum Engine Manufacturers Recommended Restriction Limits

Maximum allowable restriction limits are set by the engine manufacturers. If your maximum limit is unknown, contact your engine manufacturer for the maximum limits. Maximum levels are measured at high idle with no load for naturally aspirated and super-charged diesel engines. Turbo-charged diesel, gasoline and carbureted engines are measured at full load with a wide open throttle.

Examples shown in Inches of Water (H<sub>2</sub>0) and kiloPascals

Engine Maker	Diesel, Naturally Aspirated	Diesel, Turbo Charged	Compressed Natural Gas
Detroit Diesel	25" / 6.2 kPa	20" / 5 kPa	20" / 5 kPa
Cummins	20" / 5 kPa	25" / 6.2 kPa	15" / 3.7 kPa
Caterpillar	30" / 7.5 kPa	30" / 7.5 kPa	15" / 3.7 kPa
Mack		E7: 20"/ 5 kPa	
		E9: 25"/ 6.2 kPa	
Navistar		30" / 7.5 kPa	
Volvo	<u> </u>	30" / 7.5 kPa	

NOTE: These figures are general guidelines. Restriction limits on specific engine models may vary. Consult your engine manufacturer for definite figures.



# The Informer™ for Graduated, Continuous Readings





The Informer, when mounted on the air cleaner or the dashboard, provides a continuous reading whether the engine is running or is shut down. Reset button is on top. Kit includes

full installation instructions and a P100089 safety filter fitting. For remote mounting, order a P105168 flange and a P105622 90° elbow.

#### The Informer<sup>™</sup>

Restriction Limit	Gauge Only	Kit (gauge & fitting)
20" H <sub>2</sub> O/5 kPa	X002278	X002103
25" H <sub>2</sub> O/6.2 kPa	X002277	X002102
30" H <sub>2</sub> O/7.5 kPa	X002275	X002101

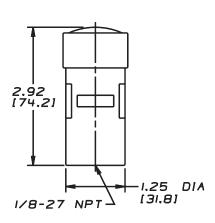

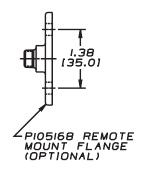

# The Mini-Informer<sup>™</sup> for Light & Medium Trucks


The Mini-Informer restriction gauge is designed to mount in the plastic air cleaners of passenger cars, light trucks, and sport utility vehicles. It's an accurate, durable, easy-to-read "go/no go" style indicator, smaller than the original Informer.

Through the clear window, a green flag shows when air filter restriction is below the service point. When the restriction reaches its limits, an orange flag imprinted with "change filter" pops up.

The Mini-Informer mounts in the air cleaner ducting in a rubber grommet.

#### The Mini-Informer™

Restriction	Gauge &	Gauge	
Limit	Grommet	Only	
25" H <sub>2</sub> O/6.2 kPa	X007276	X007335	

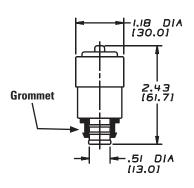

Hand tighten filter service indicators (30 – 40 in•lb maximum).

#### ServiSignal™ Mini Indicator

Small enough to fit just about anywhere (only 1.66" high), the Donaldson ServiSignal shows a highly visible, bright red flag in the full-view window when restriction limit is

reached.
Resets
manually
via top
button after
air cleaner
service.





#### Kit includes

1/8" NPT threaded brass fitting for mounting on the air cleaner. For remote mount, also order P105168 flange. Hoses not included.

#### The ServiSignal™ Mini Indicator

Restriction Limit	Gauge Only	Kit (gauge & fitting)
15" H₂O/ 3.7 kPa	X002250	X002350
20" H <sub>2</sub> 0/ 5 kPa	X002251	X002351
25" H <sub>2</sub> O/ 6.2 kPa	X002252	X002352
30" H₂O/ 7.5 kPa	X002254	X002354

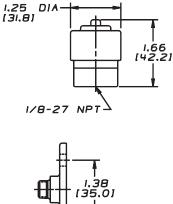

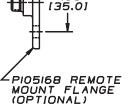

### Filter Indicators & Gauges



#### **Visual Restriction Indicator**


The Donaldson standard restriction indicator can be mounted directly on the air cleaner or remotely on the instrument panel or firewall. When restriction limit is reached and filter service is needed, easilyvisible, bright red shows through the full-view window. After the filter is serviced, reset via rubber

button on top. For remote mount, also order a flange, P105168. Hoses not included.



#### Visual Restriction Indicator

Restriction Limit	Gauge Only	Kit (gauge & fitting)
15" H₂0/ 3.7 kPa	X002215	X002315
20" H <sub>2</sub> 0/ 5 kPa	X002220	X002320
25" H <sub>2</sub> 0/ 6.2 kPa	X002225	X002325
30" H <sub>2</sub> 0/ 7.5 kPa	X002230	X002330

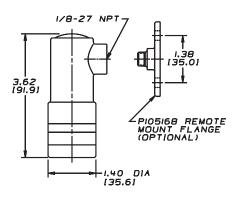

Hand tighten filter service indicators (30 - 40 in·lb maximum).

#### **Electrical Indicator** Connects to Light, Buzzer, or Computer

Our electrical indicator is designed for a variety of on- and off-highway applications within operating temperatures of -40 °F to +212 °F (-40 °C to +100 °C). When restriction level reaches the maximum


an electrical signal activates a light, a buzzer, or a computer, as you choose. The indicator automatically resets itself after the filter is serviced.



- 12-24 Volts
- Maximum load: 6 watts (light or buzzer)
- Contacts have no polarity
- Switch contacts are normally in the open position
- Quick connectors and light. buzzer, or computer must be purchased separately

#### **Electrical Indicator**

Restriction Limit	Electrical Indicator
15" H <sub>2</sub> 0/ 3.7 kPa	X770037
20" H <sub>2</sub> 0/ 5.0 kPa	X770050
25" H <sub>2</sub> 0/ 6.2 kPa	X770062
30" H <sub>2</sub> 0/ 7.5 kPa	X770075

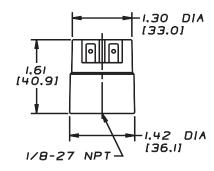

#### SafetySignal™ Wing Nut **Indicator for Safety Filter**

The Donaldson SafetySignal service indicator replaces the wing nut on the metal end cap safety filters and constantly monitors air restriction. When service is required, it locks red and can be reset after service. The SafetySignal requires no special fittings or adapters. Donaldson safety filters are designed to last through multiple primary filter change outs. The SafetySignal helps save time and money by preventing over-servicing.

#### **SafetySignal™**

#### PART NO.: X004814


For Air Cleaners: FTG 13" & 15", FHG12" & 14", FVG16" Fits Bolt: 7/16" - 20 UNF Washer included: P111551

#### PART NO.: X004815

For Air Cleaners: FTG11 Fits Bolt: 7/16" - 20 UNF Washer included: P101872

#### PART NO.: X004816

For Air Cleaners: FVG14-16", STG12-16" & All SRG models Fits Bolt: 1/2" - 13 UNC Washer included: P105740

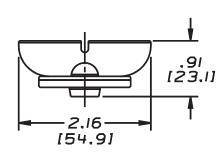



#### Service Gauge for Instrument Panel

Continuously reads restriction in inches of water vacuum when engine is in operation and installs conveniently on instrument panel or wherever operator can easily see the dial. Mounts into a 2-5/8" diameter hole. Hoses not included.




**Gauge Part No. X002730**Restriction Limit: 30" H20/ 7.5 kPa
Kit includes nuts, mounting bracket and installation instructions.



Gauge Part No. X002700

Restriction Limit: 60" H20/ 15 kPa
Kit includes restriction tap fitting (P112257),
nuts, mounting bracket and installation
instructions.

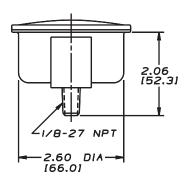

#### **In-Field Service Gauge Kit**

Equipped with three feet of vacuum hose to test the air cleaner restriction in the field. Sturdy, compact plastic case, measuring only 6" x 7.25" x 2.25", stores easily. Gauge reads in inches of water vacuum, up to 25" H<sub>2</sub>O/ 6.2 kPa. Full instructions included.

Part No. X003903



#### **Water Manometer Kit**

Part No. P134534




The Donaldson water manometer kit includes the manometer (flexible tubing), green dye, and full instructions. Manometer, range 18-0-18 in., 17-1/2 oz. mercury.




Magnets conveniently hold top and bottom ends of manometer to side of equipment or vehicle. Special shut-off valve eliminates the need to empty water after use.

#### **Restriction Tap Fittings**

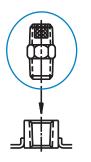

### Part No. P100089


- Male threads both ends
- 1/8"-27 thread
- 0.44" (11mm) hex nut
- Internal sintered bronze safety filter

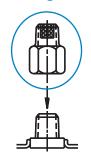

#### Part No. P122067

- Female threads on one end, male threads on opposite end
- 1/8"-27 thread
- Internal sintered bronze safety filter

#### **Restriction Indicator Fitting**

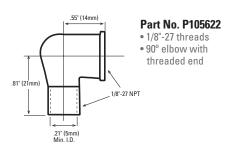

#### **Restriction Tap Sleeve**

Install this sleeve in your intake system to convert from scheduled maintenance to more economical restriction maintenance practices.



#### **Restriction Tap Sleeves**

	•
Fits Pipe O.D.	Part Number
5" / 127mm	P521639
6" / 152mm	P521641



### 90° Rubber Elbows & Reducing/Expanding Elbows




These flexible rubber adapters and elbows have smooth radii and inside surfaces to minimize flow resistance within the air intake system. These rubber products are heavy-duty.


Larger elbows (5"/125mm) are ribbed or compounded for added strength and durability. All Donaldson rubber products meet ASTM standards.

- Resist tears, punctures and vacuum collapse
- Absorb vibration
- Reduce intake noise levels under severe conditions
- Material: EPDM rubber construction
- $\bullet$  Temperature range: -40 °F (-40 °C) to +212 °F (+100 °C)
- Application tip: A minimum 1½" of metal piping should be inserted into the rubber fitting.

#### 90° Elbows

Inner C in	Dia. (A) mm	Center He	eight (B) mm	Radiu in	ıs (R) mm	Part Number
2.00	51	3.50	76	2.00	51	P105529
2.25	57	3.75	95	2.25	57	P105530
2.50	64	4.00	102	2.50	64	P105531
3.00	76	5.25	133	3.75	95	P105532
3.50	89	5.50	140	4.00	102	P114318
4.00	102	5.75	146	4.50	114	P105533
4.50	114	5.50	140	3.50	89	P113733
5.00	127	6.12	155	4.50	114	P107844
5.50	140	6.50	171	4.63	118	P105534
6.00	152	7.00	179	5.00	127	P105535
7.00	179	7.56	192	5.56	141	P105536
8.00	203	8.50	216	6.50	165	P112605
10.00	254	10.50	267	8.50	216	P114314

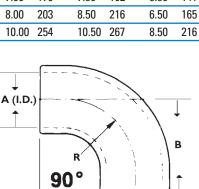

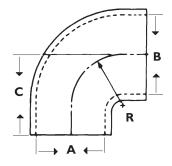




#### 90° Elbow Reducers/Expanders

Dia. (A) mm	Inner (	Dia. (B) mm	Center H in	eight (C) mm	Radiu in	ıs (R) mm	Part Number
76	3.50	89	3.50	89	2.25	57	P123462
	4.00	102	4.50	114	3.00	76	P536163
102	5.00	127	6.00	152	3.75	95	P121482
127	6.00	152	4.74	120	3.50	89	P537468
	6.00	152	6.00	152	4.25	108	P143895
	7.00	179	6.25	159	4.25	108	P159820
140	6.00	152	6.75	171	5.00	127	P117724
	7.00	179	6.25	159	4.38	111	P128990
179	6.0	152	9.0	229	4.37	111	P215307
	76 102 127 140	mm         in           76         3.50           4.00         5.00           127         6.00           6.00         7.00           140         6.00           7.00	mm         in         mm           76         3.50         89           4.00         102           102         5.00         127           127         6.00         152           6.00         152         7.00         179           140         6.00         152           7.00         179         179	mm         in         mm         in           76         3.50         89         3.50           4.00         102         4.50           102         5.00         127         6.00           127         6.00         152         4.74           6.00         152         6.00           7.00         179         6.25           140         6.00         152         6.75           7.00         179         6.25	mm         in         mm         in         mm           76         3.50         89         3.50         89           4.00         102         4.50         114           102         5.00         127         6.00         152           127         6.00         152         4.74         120           6.00         152         6.00         152           7.00         179         6.25         159           140         6.00         152         6.75         171           7.00         179         6.25         159	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	mm         in         mm         in         mm           76         3.50         89         3.50         89         2.25         57           4.00         102         4.50         114         3.00         76           102         5.00         127         6.00         152         3.75         95           127         6.00         152         4.74         120         3.50         89           6.00         152         6.00         152         4.25         108           7.00         179         6.25         159         4.25         108           140         6.00         152         6.75         171         5.00         127           7.00         179         6.25         159         4.38         111



### 45° Rubber Elbows, Reducing/Expanding Elbows and Hump Reducers

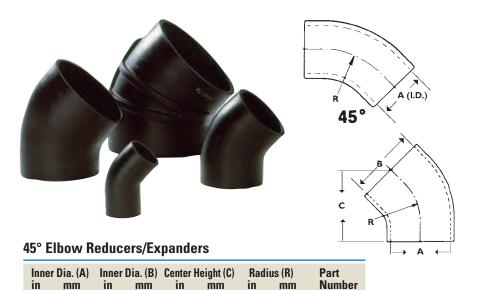

mm

124

135

P133338

P133339

4.88

5.31

#### 45° Elbows

Inner I in	Dia. (A) mm	Radii in	ıs (R) mm	Part Number
2.00	51	2.00	51	P105541
2.25	57	2.25	57	P105542
2.50	64	2.50	64	P105543
3.00	46	3.75	95	P105544
3.50	89	3.50	89	P109331
4.00	102	4.25	108	P105545
4.50	114	3.50	89	P114316
5.00	127	4.50	114	P109021
5.50	140	4.75	121	P105546
6.00	152	5.00	127	P105547
7.00	178	5.56	141	P105548
8.00	203	6.50	165	P112606
10.00	254	8.50	216	P114313



in

6.44

7.38

164

187

in

6.00

7.00

152


179

5.50

6.00

140

152

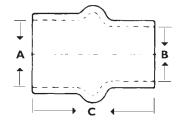

#### **Rubber Hump Reducers/Expanders**

Inner I	Dia. (A) mm	Inner I in	Dia. (B) mm	Lengt in	h (C) mm	Part Number
3.00	76	2.50	64	4.50	114	P102820
		2.75	70	3.50	89	P520883
3.50	87	3.00	76	5.00	127	P101290
		2.75	70	4.00	102	P520882
4.00	102	2.75	70	4.00	102	P520884
		3.00	76	5.25	133	P101291
		3.50	87	5.25	133	P101292
4.50	114	4.00	102	6.00	152	P540256
5.00	127	4.00	102	6.00	152	P101293
		4.50	114	6.25	159	P6040451
5.50	140	4.00	102	6.00	152	P101891
		5.00	127	6.00	152	P103516
6.00	152	5.00	127	6.00	152	P112611
		5.50	140	6.00	152	P101294
7.00	179	5.00	127	7.00	179	P136494
		5.50	140	7.00	179	P126530
		6.00	152	6.00	152	P112610
8.00	203	5.50	140	7.00	179	P129660
		6.00	152	6.00	152	P114315
		7.00	179	6.00	152	P112609
10.00	254	8.00	203	6.00	152	P112607

1 - Use clamp size for nominal 5" (127mm) I.D. each end.




### Rubber Straight Humps, Reducing/Expanders & Cobra Adapters



#### **Rubber Straight Humps**


Inner in	Dia. (A) mm	Lengt in	th (B) mm	Part Number
3.00	76	5.30	135	P105608
3.50	89	5.25	133	P114319
4.00	102	5.25	133	P105609
4.50	114	6.00	152	P114317
5.00	127	6.00	152	P105610
5.50	140	6.00	152	P105611
6.00	152	7.00	179	P105612
7.00	179	7.00	179	P105613
8.00	203	5.00	127	P112608
10.00	254	6.00	152	P111414

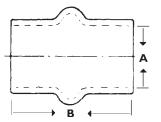

### **Rubber Reducers / Expanders**

Inner in	Dia. (A) mm	Inner C in	Dia. (B) mm	Lengt in	th (C) mm	Part Number
2.00	51	1.50	38	2.50	64	P104087
		1.75	44	2.50	64	P102948
2.25	57	2.00	51	2.50	64	P104088
2.50	64	2.00	51	2.50	64	P104089
		2.25	57	2.50	64	P104090



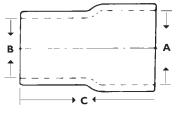




#### 90° Cobra Adapters

Inner in	Dia. (A) mm	Inner I in	Dia. (C) mm	Lengt in	h (B) mm	(D in	) mm	Part Number
2.75	70	4.00	102	6.50	165	1.81	46	P600328
3.00	76	3.00	76	5.22	133	1.91	49	P547694
4.00	102	4.00	102	6.44	164	2.69	68	P600325
		4.00	102	6.44	164	3.19	81	P600326
		5.00	127	6.44	164	3.19	81	P600327



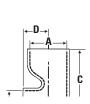



### Silicone Charge Air Connectors Isolate Intake Piping Vibration Durable and Easy To Install



Our three styles of charge air connectors are designed to ease connections in air intake system piping. They compensate for slight misalignment and isolate vibration between hose connections. The silicone elastomer material resists chemicals, steam, ozone, and coolants that are normally found in any engine operating environment.

All three charge air connectors are for installation on the pressure side with maximum operating temperatures up to 500 °F (260 °C). They are orange to be easily identifiable and to signify that they are tolerant of high temperatures. They carry a one-year warranty.



#### **Connectors/Sleeves**


Inner in	Dia. mm	Leng in	th mm	Part Number
2.00	51	36.00	914	P532948
2.25	57	36.00	914	P532949
2.50	64	36.00	914	P532950
3.00	76	36.00	914	P532951
3.38	86	3.50	89	P532952
		6.00	152	P532953
		36.00	914	P532954
3.50	89	3.50	89	P532956
		4.50	114	P532957
		36.00	914	P532958
4.00	102	36.00	914	P532959

#### **Hump Hose Connectors**

Inner	Dia.	Len	gth	Part
in	mm	in	mm	Number
2.50	66	5.50	140	P532960
2.75	70	4.25	108	P532961
3.00	76	4.38	111	P532962

#### **4-Ply Bellows**

Inner in	Inner Dia. in mm		gth mm	No. of Rings	Part Number
3.50	89	6.00	152	3	P535572
4.00	102	6.00	152	0	P532943
		6.00	152	2	P535571
		6.00	152	3	P532944
		7.50	191	3	P532945
		8.00	203	3	P535573

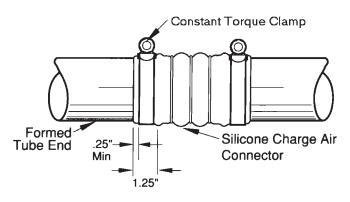

Use the illustration as a guide for installing your charge air connector. For proper installation, use Donaldson Constant Torque clamps to retain clamp load. Torque to 70-75 in • lb.



### Vacuator™ Valves Automatically Expel Dust and Water

The Vacuator Valve, standard on the majority of Donaldson air cleaners, is an important part of the functionality of the air cleaner. It is an integral part of the pre-cleaning stage on twostage air cleaners.

The dust cup, where pre-cleaned dust is collected, is normally under a slight vacuum when the engine is running. The normal engine pulsing of the vacuum causes the Vacuator Valve to open and close. This action automatically expels any collected dust and water. The Vacuator Valve also unloads when the engine is stopped.

The Donaldson Vacuator Valve, also known as VacValve, is made in a variety of sizes and shapes to fit various applications. The Donaldson part number is molded into each part for easy identification.








If your air cleaner is equipped with a Donaldson Vacuator™ Valve, make sure your routine filter service includes checking it to make sure it's in good condition and not plugged. If the Vacuator Valve is plugged, clean it.

# For the longest filter service life, replace damaged or missing Vacuator Valves immediately!

If your valve is cracked, torn, remains open, or is missing, dust particles that are normally expelled can deposit themselves onto the filter and will shorten air filter service life. Replace it!




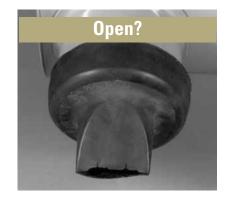







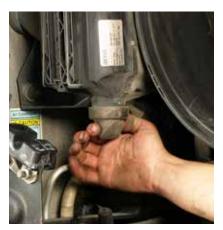





The Donaldson Vacuator™ Valve can be found on the majority of Donaldson air cleaners.

#### **Application Notes**

For proper operation, the Vacuator Valve should be located at the lowest point on the air cleaner or dust cup pointing down.

Never paint the Vacuator Valve. Solvents and chemicals will shorten the usable life.

If the Vacuator Valve is torn, shredded or turned inside out, its durometer may be too soft for the application. Choose a model with a harder durometer (higher number). Conversely, if the Vacuator Valve doesn't empty itself properly, the durometer may be too hard. Choose one with a softer durometer (lower number.)



#### **Vacuator™ Valves**

Part Number	Dian in	neter mm	Durometer	Used on Air Cleaner Styles				
P103198	3.0	76	40	FRG 10," 12," 14" and 16"; FHG 10," 12," 14" and 16";				
				FTG; FWA 5" – 16"; FWG 4" – 16"; SRG;				
				In-line Water Separators				
P105220	3.0	76	60	FRG 18"; FHG 8"; FVG160587				
P106593	3.0	76	60	FHG 6" – 8," High Pulsation Models				
P112803	3.0	76	40	FHG 6" – 8"; PSD 10," PSD 12"; SBG 14" – 16"; SDG;				
				STG 12" – 16"				
P149099	1.0	25	60	ERA; EBA; EBB; ECG				
P158914	2.0	51	50	XRB, FKB; PSD 8"; PSD 9"; FPG 6" and 8";				
				FRG 5" – 9", 11"; FHG 5", FWG; FWA; Moisture				
				Skimmers				
P522958	2.0	51	60	FPG 4" – 5"; FHG				
P525956	1.0	25	60	EPG 11," 13," 15"				
P617632	1.57	40	50	PSD 08"				
P776008	2.0	51	60	FPG 9," 10" Twist-off cover; FRG 10," 13," and 15"				

# Dust Dumpa Tube Extension For PSD, SRG, STG & SSG Air Cleaners



### **Replacement to Your Existing Dust Cup Assembly**

#### **Application**

 Donaldson SRG, SSG, STG and PowerCore® PSD Air Cleaners

#### How It Works

When installed on the dust cups on the lower assembly, the rubber connector vibrates during normal vehicle operation and gravity expels the precleaned dust.

#### **Features**


- Improves dust evacuation from the air cleaner
- Clear tube allows for visual inspection of dust collection
- Improves safety of the air cleaner inspection process by eliminating the need for ladders or elevated platforms for daily inspections
- Allows operators to perform walk around inspections
- Keeps operators and maintenance personnel away from the nuisance dust normally encountered during air cleaner servicing operations.
- Improves vehicle up-time by minimizing pre/post-shift air cleaner inspections, thus facilitating increased air cleaner service intervals.
- Reduces air cleaner inspection time
- Ships fully assembled
- Proper conversion requires drop down tube for every dust cup






If the above maintenance practice looks familiar, adding the X006561 Dust Dumpa extension to the dust cups of the air cleaner will save you maintenance time and will minimize your employees exposure to nuisance dust during service.

#### Part No. X006562

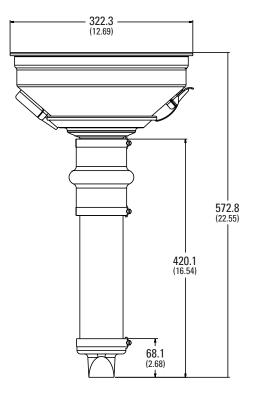

Part No. X006561

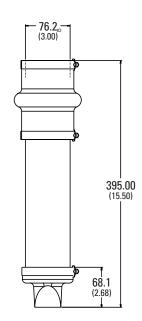



#### **Available for SRG and SSG Air Cleaners**



Three kits are required for S Series dual outlet models. For proper performance all dust cups must have the new Dust Dumpa installed.

# Dust Dumpa applied to PSD PowerCore® Air Cleaners



Dust Dumpa + PSD air cleaners extended the filter service life for a geothermal drill rig in Australia.



### **Exhaust Ejectors**



# Components For Scavenged Air Systems — Exhaust Ejectors and Check Valves

Donaldson exhaust ejectors and check valves are key components to creating a scavenged or aspirated air system. The ejector is used with Donaldson Donaspin™ or Strata™ Cap precleaners, Strata™ systems, or PowerCore® PSD air cleaners.

A scavenged air system is typically used in off-highway equipment to extend air filter life. The exhaust ejector mounts as a stack at the end of exhaust system. It is recommended that the stack be covered with a curved exhaust stack or rain cap.

The redesigned ejector line offers a shorter length tube than our original standard and expanded ID offerings. With less space to work with, the new offering may work in applications where the previous models did not fit.

#### **Exhaust Ejectors**

- Can be used with any precleaner that has scavenge tube connection.
- Adds only 4" (102 mm) to 8" (203 mm)  $\rm H_20$  (.3" to .6" Hg.) to exhaust backpressure
- Models all fit up to a muffler outlet tube outer diameter
- All models have a nominal OD outlet end for proper fit of stack caps and other accessories
- For proper structural support, muffler outlet tube length and stack engagement must be a minimum length of 1.5-2.0" / 38-51 mm
- Finish on all models is high temperature, black, semi-gloss finish

#### ----- Basic Scavenged Air System -----





Interested in Scavenging a PowerCore® Air Cleaner?

See PowerCore Section for specific components and parts.



### **Exhaust Ejectors for Scavenged or Aspirated Air System**



All exhaust ejectors are constructed of heavy-gauge, aluminized steel, and painted with a high-temperature black paint. Select the appropriate ejector by the intake airflow or exhaust flow (CFM) of your engine.

Eng Intake Low		Exhau @ 90 Low	st CFM )0° F High		t Dia.*	jectors Part Number		t Dia.*	l.D. Ejectors Part Number	Len inches	•	Scave Tube inches	•
220	365	554	919	3.02	77.0	H002612	3.16	80.3	H002762	12.00	304.8	1.25	32
315	450	793	1133	4.02	102.0	H002613	4.17	105.9	H002763	18.00	457.2	1.25	32
425	600	1070	1511	4.02	102.0	H002614	4.17	105.9	H002764	18.00	457.2	1.50	38
500	740	1259	1864	5.03	127.8	H002615	5.17	131.0	H002765	22.00	558.8	1.50	38
660	950	1662	2393	5.03	127.8	H002616	5.17	131.0	H002766	22.00	558.8	1.75	44
800	1150	2015	2896	6.04	153.4	H002617	6.19	157.0	H002767	24.00	609.6	2.00	51
950	1350	2393	3400	6.04	153.4	H002618	6.19	157.0	H002768	24.00	609.6	2.00	51
1100	1500	2770	3778	6.04	153.4	H002619	6.19	157.0	H002769	24.00	609.6	2.00	51

<sup>\*</sup> This dimension only applies to 2.5" /64mm of length – not the full length of the ejector.


#### 3 ft. / .91 m Silicone Scavenge Hose & Lined Hose Clamp for:

1.25" / 32 mm Scavenge Tube: Hose: P171376 and Lined Hose Clamp P532924 1.50" / 38 mm Scavenge Tube: Hose: P171378 and Lined Hose Clamp P115200 2.00" / 51 mm Scavenge Tube: Hose: P171381 and Lined Hose Clamp P115200

### **Ejector Check Valve Prevents Exhaust Backflow**

The exhaust ejector check valve prevents backflow of damaging exhaust gases by way of an internal hinge flap. Add an ejector check valve when configuring the intake system to expel filtered contaminant through the exhaust system.


- Mounts horizontally (see installation diagrams)
- Durable, non-corrosive metal construction
- No servicing required

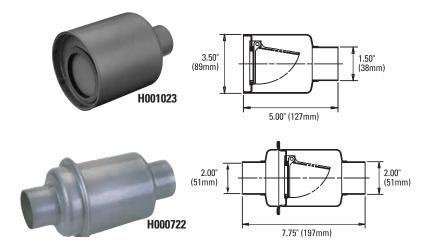


#### **Check Valve Installation**

The illustrations are side views of two-stage air cleaners, showing the position of the check valve. A 3" (76mm) inner diameter rubber reducing elbow or hump reducer is required for installation. See pages 94 - 96 for options.

#### Installation on F Series Cyclopac™

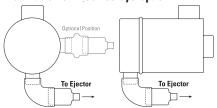

#### Installation on S Series Donaclone™

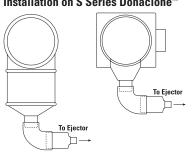




### 3-in-1 Intake Accessory Protects Against Moisture

- Primarily over-highway trucks
- For engine airflow of 700 to 1000+ cfm
- Improves intake system airflow and fuel economy by reducing restriction. Examples:
  - at 33 mph, 53 kmh = 3.5"  $H_2O$  restriction
  - at 45 52mph, 72 74 kmh = 4" H<sub>2</sub>0 restriction
  - at 60 mph, 97 kmh = 5"  $H_20$  restriction
- Lightweight, non-corrosive, and durable — no service needed
- Inlet screen prevents large debris from entering intake ducting
- Side louvers ensure continuous airflow to intake system
- Common inlet sizes fit most installations
- Eliminates water from air intake system
  - at 700 cfm airflow = 90%
  - at 800 cfm airflow = 93%
  - at 1000 cfm airflow = 93% \*

<sup>\*</sup> based on item H001660

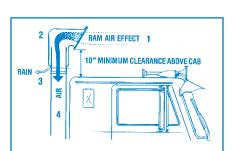


#### How Air Ram™ Works


- 1-Moisture-filled air enters Air Ram.
- 2-Air is naturally forced against rear wall. Moisture sticks to the wall, separating from the air.
- 3-Moisture collects on the Air Ram wall and drains down to and out of the drain hole.
- 4-Virtually moisture-free air passes into air cleaner.





H001200
Low profile model designed for air cleaners mounted on the side of the cab.

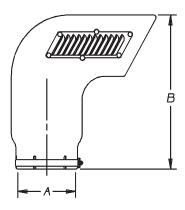

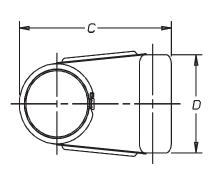

#### **Air Ram Inlet Hood**

Part Number	Inlet Diameter (A) in mm		Heig in	Height (B) in mm		h (C) mm	Widt in	th (D) mm				
MODELS WITH LOUVERS ON SIDE												
H001660	6.06	154	14.80	376	14.85	377	8.98	228				
H001654	7.06	179	15.53	394	15.63	397	9.86	250				
H001661	8.06	205	16.16	410	16.95	431	10.92	277				
MODELS W	MODELS WITHOUT LOUVERS (LOW PROFILE)											
H001200	7.06	179	6.25	159	12.03	306	13.20	335				

Note: One mounting band is included with each Air Ram

#### **Installation Note**

All Air Ram inlet hoods MUST be installed with the screen facing forward to ensure best performance. Airflow restriction will not be reduced if the Air Ramfaces sideways; but if it faces backwards, restriction does increase and adversely affects engine performance.

**196** • Engine Air Filtration



### Horizontal, In-Line Moisture Skimmer Removes Water

#### **Applications**


- Allows 600 to 1200 cfm airflow
- Horizontal mount in engine air intake ducting


#### **Features**

- Removes over 80% of water before it can reach and damage the filter
- No service needed
- Made of durable rubber
- Collected water is automatically released by Vacuator™ Valve
- Adds little or no restriction to airflow
- Common inlet sizes fit most installations



#### **Mounting Position**

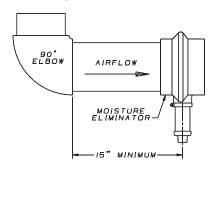

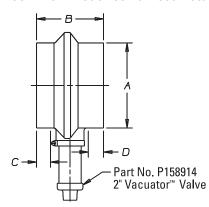

#### **Moisture Skimmer**

Part Number			Dia. (A) mm	Heig in	ht (B) mm	Dept in	th (C) mm	Width	(D)
X005822	600-1000	6.00	152	6.00	152	1.25	32	1.37	35
X005900	800-1200	7.00	178	6.00	152	1.25	32	1.37	35
X005901*	800-1200	7.00	178	6.00	152	1.25	32	1.37	35

<sup>\*</sup>Angled spout (see image on right)



### **Stack-Top Moisture Eliminator Prevents Water Problems**


- For cabover trucks, on/off road, mounted on top of an intake stack
- Over 80% water removal efficiency
- Includes clamp for installation



**Part No. X003691** Airflow Range: 600-1200 cfm I.D. 7.00" / 178mm

#### **How It Works**

- 1. Moisture-filled air enters the moisture eliminator cap.
- 2. Built-in, stationary vanes cause the air to spin.
- Moisture is forced to the outside wall, where it separates from the air and collects.
- 4. Water drains out through the drain hole.
- 5. As a result, drier air (acceptable for maximum filter life and engine performance) passes to the air cleaner.

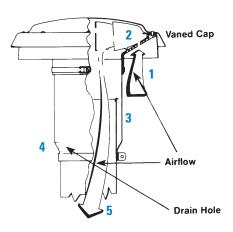


### Stack Extensions, Intake Tubing & Breathers



#### **Air Stack Extensions**

- For on-road and off-road trucks
- Helps extend filter life by elevating air inlet away from heavy dust concentrations and engine exhaust
- Installs easily and quickly with one clamp, which is included with unit
- Durable, corrosion-resistant steel construction



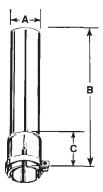

#### **Air Stack Extension**

-(A - in	0.D.)- mm	(E in	3) mm	(C in	;) mm	Part Number
3.75	95	29.00	737	1.50	38	X001744
4.50	114	30.25	768	1.50	38	X001746
5.00	127	29.00	737	1.50	38	X001747
6.00	152	31.50	800	1.50	38	H000484
7.00	178	28.62	727	1.50	38	H000483

### **Intake Tubing**

- 16 gauge aluminum, unless footnoted
- 10 ft. (3m) length

#### **Intake Tubing**

0.l in	D mm	Part Number
3.00	76	P224684
3.50	89	P2246911
4.00	102	P207367
5.00	127	P206849
5.50	140	P207368
6.00	152	P206850
7.00	178	P206851
8.00	203	P207369

1 - 14 gauge


#### **Breathers**


As sealed machinery operates, its internal air heats and expands; later, this air cools and contracts. To allow hot air out and cool air in *safely*, use a Donaldson breather filter. These handy, spin-on filters use sturdy oil-wetted filter media that resists damage from vibration.

- Designed for engines, air compressors, crankcases, transmissions, gearcases, air cylinders, air presses, hydraulic reservoirs
- Mount either vertically or horizontally
- Can be cleaned and reused

Part	P	٠	[	3	C	;	D	E	
Number	in	mm	in	mm	in	mm		in	mm
STYLE A									
S000011	2.50	64	2.00	51	2.68	68	1/4" NPT	1.00	25
S000072	2.50	64	2.97	75	2.68	68	1/2" NPT	1.12	28
S000080	2.50	64	2.32	59	2.68	68	3/4" NPT	0.68	17
S000183	3.06	78	3.50	89	3.50	89	1" NPT	1.18	30
S000099	4.06	103	4.50	114	5.12	130	2" NPT	1.68	43
STYLE B									
S000067	2.50	64	1.62	41	2.75	70	1.50		n/a



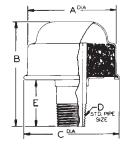

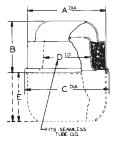






### Service Parts Listing by Air Cleaner Part Number

The parts in this section are listed by air cleaner part number, in alpha/numeric order. If you know the model number of your air cleaner (for instance, G100398), but not the style (e.g., FRG Style B, ERA, or STG), this section will help you find service parts quickly and easily.

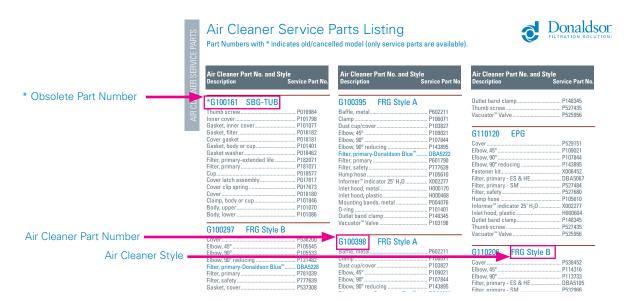

Air cleaner part numbers that have an '\*' before the number are obsolete, only their service parts listed are available. If an air cleaner replacement is required and the model is no longer available, we recommend retrofitting to a newer air cleaner model. Newer air cleaner models offer improved filtration features, and replacement filters will be less expensive over time.

NOTE: You will not find our one-piece air cleaners, like our  $DuraLite^{TM}$  disposable series, in this section because they have no service parts.

Part Numbers with \* indicates old/cancelled model (only service parts are available).



Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style
Description Service Part No.

#### \*A042511 FGA

Oil cup	P014889
Clamp	P002846

#### A052526 FWA

Ning nut P101870	
Filter, primary-UL approved P122510	
Filter, primary-extended life P182050	
Filter, primary P181050	
Dust cup, VacValve, vert P103835	
Cup P103007	
Clamp P002904	
Baffle, Rubber P102523	

#### A052527 FWA

Wing nut F	101870
Filter, primary-extended life F	182050
Dust cup, VacValve, vert F	103835
Cup F	103007
Clamp F	002904
Baffle, Rubber F	102523

#### \*A060022 FGA

Clamp,	cup	P002691
--------	-----	---------

#### A065007 FWA

Wing nut	P101870
Filter, primary-extended life	
Filter, primary-Donaldson Blue™	
Dust cup, VacValve, vert	P103839
Cup	P102805
Clamp	P002940
Baffle, Rubber	P102510

#### A065015 FWA

Wing nut	P101870
Filter, primary-extended life	P182052
Filter, primary-Donaldson Blue™	DBA5134
Dust cup, VacValve, vert	P103839
Cup	P102805
Clamp	P002940
Baffle, Rubber	P102510

#### A080022 FWA

Wing nutP	101870
Filter, primary-high vibration P	148968
Filter, primary-extended lifeP	182054
Filter, primary-Donaldson Blue™ D	BA5054
Filter, primary P	181054
Dust cup, VacValve, vert P	103840
Cup P	103113
Clamp, body or cupP	003951
Baffle, RubberP	102980

#### \*A080031 FWA

Wing nut	. P101870
Filter, primary-high vibration	. P148968
Filter, primary-extended life	. P182054
Filter, primary-Donaldson Blue™	. DBA5054
Filter, primary	. P181054
Dust cup, VacValve, vert	. P103840
Cup	. P103113
Clamp, body or cup	. P003951
Baffle, Rubber	. P102980

#### \*A092018 EBA-KPI

Stud repair kit	K004464
Nut, plasticI	
Mounting band I	P004073
Cover gasketI	P150442
Filter, primary treatedI	P129472
Filter, primary reverse flow I	P140822

#### \*A092019 EBA-KPII

Stud repair kit	X004464
Nut, plastic	P119325
Mounting band	
Cover gasket	P120597
Filter, primary w/cover gasket	P130959

#### A092037 EBA KPII

Elbow, 45°	P105547
Elbow, 90°	P105535
Filter, primary	P140822
Filter, primary-Donaldson Blue™	DBA5025
Filter, primary treated	P129472
Hump hose	P105612
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000275
Inlet hood, plastic	H000606
Mounting bands, metal	P004073
Nut, plastic	P119325
Outlet band clamp	P148347
Retaining ring	P129469
Vacuator™ Valve	P149099

#### \*A100013 FGA

Side rod	P016731
Screen filter	P101390
Inner oil cup	P101396

#### A100017 FWA

Wing bolt	P018464
Gasket, body or cup	P101401
Filter, primary-extended life	P182045
Filter, primary-Donaldson Blue™	DBA5204
Filter, primary	P181045
Dust cup, VacValve, vert	P103826
Cup	P103519
Clamp	P106071
Baffle, metal	P103135

#### A100019 FWA

Wing bolt	P018464
Gasket, body or cup	P101401
Filter, primary-extended life	P182045
Filter, primary-Donaldson Blue™	<b>DBA5204</b>
Filter, primary	P181045
Dust cup, VacValve, vert	P103826
Cup	P103519
Clamp	P106071
Baffle, metal	P103135

#### \*A110007 EBA-CYL

Stud repair kit	X004464
Nut, plastic	P119325
Mounting band	P004079
Cover gasket	P124141
Filter, primary-extended life	P182017
Filter, primary	P181146
Filter, primary	P181017

#### A110052 ERA

Bolt	P119463
Cover	P544744
Elbow, 45°	P105546
Elbow, 90°	
Elbow, 90° reducing	P128990
Filter, primary-Donaldson Blue™	DBA5148
Filter, primary - SM	
Gasket, cover	
Hump hose	P105611
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000275
Inlet hood, plastic	. H000606
Mounting band, black, metal	P004079
Nut, plastic	P119325
Outlet band clamp	P148346
Retaining ring	
Vacuator™ Valve	P149099

#### A112018 EBA KPI

Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary	P151097
Filter, primary-Donaldson Blue™	DBA5024
Filter, primary treated	P129396
Gasket, cover	
Hump hose	P105613
Informer™ indicator 25" H₂O	
Inlet hood, metal	H000339
Inlet hood, plastic	H000607
Mounting band, metal	P004079
Nut, plastic	P119325
Outlet band clamp	
Retaining ring	P129469
Vacuator™ Valve	

#### FILTER DESCRIPTIONS:



Part Numbers with \* indicates old/cancelled model (only service parts are available).

Air Cleaner Part No. and Style
Description Service Part No.

Air Cleaner Part No. and Style
Description Service Part No.

Air Cleaner Part No. and Style Description Service Part No.

### A112078 EBA KPII

Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary	P151097
Filter, primary-Donaldson Blue™	DBA5024
Filter, primary treated	P129396
Gasket, cover	P155211
Hump hose	P105613
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000339
Inlet hood, plastic	H000607
Mounting bands, metal	P004079
Nut, plastic	P119325
Outlet band clamp	
Retaining ring	P129469
Vacuator™ Valve	P149099

#### A120003 FWA

Wing bolt	P018464
Gasket, body or cup	P017804
Filter, primary-UL approved	P122525
Filter, primary-extended life	P182035
Filter, primary	P181035
Dust cup, VacValve, vert	P103828
Cup	P101239
Clamp	P100808
Baffle	P101238

#### A120036 FWA

Wing bolt	P017804
Filter, primary-UL approvedFilter, primary-extended lifeFilter, primary	P182035
Dust cup, VacValve, vert	P103828
Clamp Baffle	

#### \*A127200 FGA

Side rod	P016731
Screen filter	P016735
Oil cup	P016729
Inner oil cup	P016727
Clip band	P101467

#### \*A130045 EBA-CYL

Stud repair kit	X004464
Nut, plastic	P119325
Mounting band	P013722
Cover gasket	P117800
Filter, primary-extended life	P182007
Filter, primary-Donaldson Blue™	DBA5007
Filter, primary treated	P122708
Filter primary	P181007

#### \*A130060 EBA-CYL

Stud repair kitX004464	
Nut, plastic P119325	
Mounting band P013722	
Cover gasketP117800	
Filter, primary-extended life P182016	
Filter, primary-Donaldson Blue™ DBA5016	
Filter, primary P181016	

#### \*A130087 EBA-CYL

Stud repair kit	X004464
Nut, plastic	P119325
Mounting band	P013722
Cover gasket	P117800
Filter, primary-extended life	P182016
Filter, primary-Donaldson Blue™	DBA5016
Filter, primary	P181016

#### A130115 ERA

Bolt	
Cover	P542475
Filter, primary - SM	P544950
Filter, primary-Donaldson Blue™	DBA5149
Gasket, cover	P155264
Mounting band, black	P013722
Nut, plastic	P119325
Retaining ring	P129469
Vacuator™ Valve	P149099

#### A132001 EBA KPII

Elbow, 45°	
Filter, primary	
Filter, primary-Donaldson Blue™	
Gasket, cover	P155264
Hump hose	P112608
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H001053
Mounting bands, metal	P013722
Nut, plastic	P119325
Outlet band clamp	
Retaining ring	P129469
Vacuator <sup>™</sup> Valve	P149099

#### \*A132004 EBA-KPI

Stud repair kit	X004464
Nut, plastic	P119325
Mounting band	P013722
Cover gasket	P120604
Filter, primary w/cover gasket	P142100

#### \*A132020 EBA-KPII

Stud repair kit	X004464
Nut, plastic	P119325
Mounting band, bright	P522439
Inlet hood, bright	H001773
Cover gasket	P155264
Filter, primary w/cover gasket	P521598

#### \*A140002 FWA

Wing bolt	P018464
Gasket, body or cup	P017335
Filter, primary-UL approved	P122529
Filter, primary-extended life	P182000
Filter, primary	P181000
Dust cup, VacValve, vert	P103829
Cup	P101242
Clamp	P100866
Baffle	P101241

#### \*A140003 FWA

Wing bolt	P018464
Gasket, body or cup	P017335
Filter, primary-UL approved	P122529
Filter, primary-extended life	P182000
Filter, primary	P181000
Dust cup, VacValve, vert	P103829
Cup	P101242
Clamp	P100866
Baffle	P101241

#### \*A140033 FWA

Wing bolt P018464	
Gasket, body or cup P017335	
Filter, primary-UL approved P122529	
Filter, primary-extended life P182000	
Filter, primary P181000	
Dust cup, VacValve, vert P103829	
Cup P101242	
Clamp P100866	
Baffle P101241	

#### \*A140036 FWA

Wing bolt	P018464
Gasket, body or cup	P017335
Filter, primary-UL approved	P122529
Filter, primary-extended life	P182000
Filter, primary	P181000
Dust cup, VacValve, vert	P103829
Cup	P101242
Clamp	P100866
Baffle	P101241

#### \*A144800 FGA

Side rod P016731
Screen filter P016688
Oil cup
Inner oil cup
Clip band

#### \*A144900 FGA

Side rod	P016731
Screen filter	P016688
Oil cup	P016696
Inner oil cup	P016694
Clip band	P101469

#### FILTER DESCRIPTIONS:

Part Numbers with \* indicates old/cancelled model (only service parts are available).



Air Cleaner Part No. and Style Description Service Part No.

#### \*A145200 FGA

Side rod	P016731
Screen filter	P016688
Oil cup	P016696
Inner oil cup	P016694
Clip band	P101469

#### \*A150039 EBA-CYL

Stud repair kit	X004464
Nut, plastic	P119325
Mounting band	P016845
Cover gasket	P116891
Filter, primary-extended life	P182008
Filter, primary	P181008
Filter, primary-Donaldson Blue™	DBA5008

#### \*A150128 EBA-CYL

Stud repair kit	X004464
Nut, plastic	P119325
Mounting band	P016845
Cover gasket	P116891
Filter, primary-extended life	P182009
Filter, primary	P181009

#### A150138 **ERA**

Bolt	P544238 P105548 P105536 DBA5150 P544301 P535559 P105613 X002277 H000339 H000607 P016845 P119325 P148348
Retaining ring	P129469
Vacuator™ Valve	P149099

#### A150141 **ERA**

Air Cleaner Part No. and Style Description Service Part No.

#### \*A150174 EBA-CYL

Stud repair kit	X004464
Nut, plastic	P119325
Mounting band, bright	P524552
Inlet hood, bright	P524540
Cover gasket	P116891
Filter, primary-extended life	P182009
Filter, primary	P181009

#### A160001 **FWA**

Wing bolt	P018464
Gasket, body or cup	P017336
Filter, primary-extended life	P182001
Filter, primary	P181001
Dust cup, VacValve, vert	P103831
Cup	P101245
Clamp, cup	P100798
Baffle	P101244

#### \*A160013 FWA

Wing bolt	P018464
Gasket, body or cup	P017336
Filter, primary-extended life	P182001
Filter, primary	P181001
Dust cup, VacValve, vert	P103831
Cup	P101245
Clamp, cup	P100798
Baffle	P101244

#### \*A160173 EBA-CYL

Stud repair kit	X004464
Nut, plastic	P119325
Mounting band	
Cover gasket	P123790
Filter, primary-extended life	P182011
Filter, primary	P181011

#### \*A161500 FGA

Side rod	P016731
Screen filter	P016883
Oil cup	P016884
Inner oil cup	P016885
Gasket, body or cup	P017336
Clip band	

#### \*A161600 FGA

Side rod F	2016731
Screen filter F	2016883
Oil cup F	P016884
Inner oil cup F	P016885
Gasket, body or cup F	P017336
Clip bandF	P101471

Air Cleaner Part No. and Style Description Service Part No.

#### B045008 **FKB**

Cover	P606497
Filter, primary	P604457
Filter, safety	P603729
Vacuator™ Valve	P158914
Elbow, 45°	P105541
Elbow, 90°	P105529
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, plastic	H001377
Outlet band clamp	P148337

#### B055006 **FKB**

Cover	P609219
Filter, primary	P609218
Filter, safety	P602427
Vacuator™ Valve	P158914
Elbow, 45°	P105543
Elbow, 90°	P105531
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, plastic	H001378
Outlet band clamp	P148339

#### **FKB** B065045

Cover	P608592
Elbow, 45°	P105544
Elbow, 90°	P105532
Elbow, 90° reducing	P123462
Filter, primary	P609221
Filter, safety	P608599
Hump hose	P105608
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, plastic	H001379
Outlet band clamp	P148341
Vacuator™ Valve	P158914

#### B080080 **XRB**

Cover	P605731
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	P121482
Filter, primary (non metal)	P611190
Filter, safety	P611189
Hump hose	P105609
Informer <sup>™</sup> indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H000467
Outlet band clamp	P148343
Vacuator <sup>™</sup> Valve	P158914

#### \*B100001 FWB

Filter, primary		P	101	038	3
-----------------	--	---	-----	-----	---

#### \*B100002 FWB

Filter, primary	 P	11	0	1(	)3	38	8
i iitoi, piiiiiui y			U		,,	,	١,

FILTER DESCRIPTIONS:

SM=Scheduled Maintenance Donaldson Blue™ = High Efficiency, Extended Service



Part Numbers with \* indicates old/cancelled model (only service parts are available).

Air Cleaner Part No. and Style
Description Service Part No.

Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style Description Service Part No.

#### \*B100028 STB

Pre-cleaner assembly	H001001
Mounting band	P004076
Hood, pre-cleaner	H000657
Filter, safety	P124837
Filter, primary	P127075
Clamp, pre-cleaner body	P007161
Body, Strata Pre-Cleaner	H001006
Air Cleaner Assembly, Strata	B100029

#### B100127 XRB

Cover	P609942
Elbow, 45°	P114316
Elbow, 90°	P113733
Filter, primary (metal liner)	P611539
Filter, safety	
Hump hose	P114317
Informer <sup>™</sup> indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000165
Inlet hood, plastic	H000469
Outlet band clamp	P148344
Vacuator <sup>™</sup> Valve	P158914

#### \*B120105 EBB-STYB

Filter, primary-extended life	P182021
Filter, primary	P181021

#### \*B120129 STB

Pre-cleaner assembly	H001000
Hood, pre-cleaner	H000659
Filter, safety	P119371
Filter, primary-extended life	P182044
Filter, primary	P181044
Clamp, pre-cleaner body	P004073
Body, Strata Pre-Cleaner	H001007
Air Cleaner Assembly, Strata	B120131

#### B120271 EBB

Elbow, 45° F	2100021
•	
Elbow, 90° F	P107844
Elbow, 90° reducing F	P143895
Filter, primary	P182028
Filter, primary-Donaldson Blue™ [	DBA5028
Filter, primary - SM F	P181028
Hump hose	P105610
Informer <sup>™</sup> indicator 25" H <sub>2</sub> O	K002277
Inlet hood, plastic I	H000604
Mounting bands, metal I	1000349
Outlet band clamp F	P148345

#### B120470 XRB

Cover	P608117
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Filter, primary (metal liner)	P608116
Filter, safety	P608391
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000275
Inlet hood, plastic	H000606
Outlet band clamp	P148345
Vacuator™ Valve	P158914

#### \*B140019 STB

Pre-cleaner assembly	H001002
Hood, pre-cleaner	H000674
Filter, safety	P119370
Filter, primary-extended life	P182041
Filter, primary	P181041
Clamp, pre-cleaner body	P127009
Body, Strata Pre-Cleaner	H001008
Air Cleaner Assembly, Strata	B140020

#### B140044 EBB

Elbow, 45°Elbow, 90°	
Filter, primary	
Filter, primary-Donaldson Blue™	DBA5015
Filter, primary - SM	P181015
Hump hose	P105612
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000339
Inlet hood, plastic	H000607
Mounting bands, metal	H000350
Outlet band clamp	P148347

#### \*B140149 EBB-STYB

Filter,	primary-extended life	P182029
Filter,	primary	P181030

#### \*B140150 EBB-STYB

Filter,	primary-extended life	P182029
Filter,	primary	P181030

#### B160049 EBB

Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary	P182099
Filter, primary-Donaldson Blue™	DBA5099
Filter, primary - SM	P181099
Hump hose	P105613
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, plastic	H001053
Mounting bands, metal	H000351
Outlet band clamp	P148348

#### B160071 STB

Clamp, pre-cleaner body Elbow, 45°	
Elbow, 90°	
Filter, primary-Donaldson Blue™	DBA5039
Filter, primary - ES	P182039
Filter, primary - SM	P181039
Filter, safety	P114931
Gasket washer	P105740
Hump hose	P105613
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Outlet band clamp	P148348
Pre-cleaner assembly	H000672
Pre-cleaner body	H001009

# D080020, D080026 PSD Elbow, 45° P109331 Elbow, 90° P114318 Filter, primary P608533 Filter, safety P600975 Hump hose P114319 Informer™ indicator 25" H₂0 X002277 Letch P776032

#### D080056 PSD

Cover	P615530
Elbow, 45°	P109331
Elbow, 90°	P114318
Filter, primary	P617631
Filter, safety	P615493
Hump hose	P114319
Informer™ indicator 25" H <sub>2</sub> O	X002277
Latch	P776033
Outlet band clamp	P148342
U-clip (4 clips)	P784517
Vacuator™ Valve	P617632

### \*D090019, D090020 PSD

Cover
Elbow, 45° P105545
Elbow, 90° P105533
Elbow, 90° reducing P121482
Filter, primary P608665
Filter, safety
Hump hose P105609
Informer <sup>™</sup> indicator 25" H <sub>2</sub> 0 X002277
Latch
Outlet band clamp P148343
U-clip (4 clips)P784517
Vacuator <sup>™</sup> Valve P158914

#### \*D090021, D090022 PSD

Cover	P609552
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	P121482
Filter, primary	P608675
Filter, safety	P606121
Hump hose	
Informer™ indicator 25" H <sub>2</sub> O	X002277
Latch	P777366
Outlet band clamp	P148343
U-clip (4 clips)	P784517
Vacuator™ Valve	P158914





Air Cleaner Part No. and Style Description S Service Part No.

D090055, D090073	PSD
Cover	P785651
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	P121482
Filter, primary	
Filter, safety	P606121
Hump hose	P105609
Informer™ indicator 25" H <sub>2</sub> O	
Latch	
Outlet band clamp	P148343
U-clip (4 clips)	P784417
Vacuator™ Valve	P112803

D090101 PSD	
Cover	P786989
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	P121482
Filter, primary	P608675
Filter, safety	P606121
Hump hose	P105609
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Latch	P777366
Outlet band clamp	P148343
U-clip (4 clips)	P784517
Vacuator <sup>™</sup> Valve	P112803

D090120 PSD	
Cover	
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	P121482
Filter, primary	P608665
Filter, safety	P606121
Hump hose	P105609
Informer™ indicator 25" H <sub>2</sub> 0	
Latch	P777366
Outlet band clamp	P148343
U-clip (4 clips)	
Vacuator™ Valve	

D090121 PSD	
Cover	
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	
Filter, primary	P608675
Filter, safety	P606121
Hump hose	P105609
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Latch	P777366
Outlet band clamp	P148343
U-clip (4 clips)	P784517
Vacuator™ Valve	P112803

Air Cleaner Part No. and St	tyle
Description	Service Part No

D100029, D100030	PSD
Cover	P784279
Cover, with watertight seal	P619481
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Filter, primary	P608666
Filter, safety	P601560
Hump hose	P105610
Informer <sup>™</sup> indicator 25" H <sub>2</sub> O	X002277
Latch	P777366
Outlet band clamp	P148345
U-clip (4 clips)	
Vacuator™ Valve	P112803

D100031, D100032	PSD
Cover	P784298
Cover, with watertight seal	P619482
Elbow, 45°	P105547
Elbow, 90°	P105535
Filter, primary	P608676
Filter, safety	P601560
Hump hose	P105612
Informer™ indicator 25" H <sub>2</sub> O	
Latch	P777366
Outlet band clamp	P148347
U-clip (4 clips)	P784517
Vacuator™ Valve	P112803

D100068 PSD	
Cover Cover, with watertight seal Elbow, 45°	. P619482
Elbow, 90°Filter, primary	. P105535 . P608676
Filter, safety Hump hoseInformer $^{\mathbb{T}}$ indicator 25 $^{\mathbb{T}}$ $H_2O$	. P105612
Latch  Outlet band clamp  U-clip (4 clips)	. P148347
Vacuator™ Valve	

Air Cleaner Part No.	and Style
Description	Service Part No.

D120035, D120036	PSD
Cover	P608171
Elbow, 45°	P105547
Elbow, 90°	P105535
Filter, primary	P608667
Filter, safety	P607557
Hump hose	P105612
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Latch	P777366
Outlet band clamp	P148347
U-clip (4 clips)	P784517
Vacuator™ Valve	P112803

D120037, D120038	PSD
Cover	P608180
Elbow, 45°	P105547
Elbow, 90°	P105535
Filter, primary	P608677
Filter, safety	
Hump hose	P105612
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Latch	P777366
Outlet band clamp	P148347
U-clip (4 clips)	
Vacuator™ Valve	P112803

D140078, D140079	
Cover, with watertight seal	P623026 3
Elbow, 45°	P105548
Elbow, 90°	P105536
Elbow, 90° reducing	P215307
Filter, primary	P6219843
Filter, safety	P621983 3
Hump hose	P105613
Informer™ indicator 25" H₂O	X002277
Latch	P6229453
Outlet band clamp	P148348
U-clip (9 clips)	P6227453
Vacuator™ Valve	P1128033
Gasket	P623192

G042503	FWG	
Thumb screw	/	P017858
Gasket wash	er	P102784
Filter, primary	-UL approved	P123065
Filter, primary	-high vibration	1P148970
Filter, primary	·	P102745
Cup		P102755
Clamp		P002846

G042529	FWG	
Thumb screw	P01	7858
	r P10:	
Cup	P10	2755
Clamp	P00	2846
Baffle, Rubbe	r P10:	2754
Baffle, Rubbe	rP10	2754

#### FILTER DESCRIPTIONS:



Part Numbers with \* indicates old/cancelled model (only service parts are available).

Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style Description Service Part No.

# G042544 FPG Cover P533685 Filter, primary P822686 Filter, safety P535396 Informer™ indicator 25" H₂0 X002277 Inlet hood, plastic H002068 Latch P538928 Mounting bands, metal H008442 Mounting Bands, plastic P777151 Outlet band clamp P115200 Vacuator™ Valve P522958 G042545 FPG Cover P533685 Filter, primary P822686 Filter, safety P535396 Informer™ indicator 25" H₂0 X002277

Cover Filter, primary Filter, safety Filter, safety Filter, safety Filter hood, plastic Filter hood, plastic Filter hood, plastic Filter hood, metal Filter hood, plastic Filter hood, metal Filter hood,	P822686 P535396 (002277 H002068 P538928 H008442 P777151 P115200

*G042547 FPG	
Vacuator™ Valve	P522958
Filter, safety	P535396
Filter, primary	P831520
Latch	P538928
Inlet hood (optional)	H002068
Caucan	DE3/1303

*G042549	FPG	
Vacuator <sup>™</sup> Valv	e	P522958
Filter, safety		P535396
Filter, primary		P831520
Latch		P538928
Inlet hood (opti	onal)	H002068
Cover		P534392

G052510 FWG	
Wing nut	P101870
Filter, primary-UL appro	oved P122510
Filter, primary-extended	d life P182050
Filter, primary	P181050
Dust cup, VacValve, ho	rz P103838
Cup	P103007
Clamp	P002904
Baffle, Rubber	P102523

G052512 F\	VG
Filter, primary-UL a	pproved P122510
Filter, primary-exte	nded life P182050
Filter, primary	P181050
Dust cup, VacValve	e, horz P103838
Cup	P103007
Clamp	P002904
Baffle, Rubber	P102523

*G052558 FHG-STYA	
Wing nut	P101870
Vacuator™ Valve	P158914
Filter, safety	P120307
Filter, primary-high vibration	P148967
Filter, primary-extended life	P182072
Filter, primary	P181072
Cover/cup	P120729
Clamp	P002904

~6052559 FHG-51YA	
Wing nut	. P101870
Filter, safety	. P120307
Filter, primary-high vibration	. P148967
Filter, primary-extended life	. P182072
Filter, primary	. P181072
Cover/cup	. P120316
Clamp	. P002904

*G052560 FHG-STYA	
Wing nut P1	01870
Vacuator™ Valve P1	58914
Filter, safetyP1	20307
Filter, primary-high vibrationP1	48967
Filter, primary-extended lifeP1	82072
Filter, primaryP1	81072
Cover/cupP1	20729
ClampP0	02904

*GU52561 FHG-STYA	
Wing nut	. P101870
Filter, safety	. P120307
Filter, primary-high vibration	. P148967
Filter, primary-extended life	. P182072
Filter, primary	. P181072
Cover/cup	. P120316
Clamp	. P002904

*G052617	FHG-STYA	
Vacuator <sup>™</sup> Val	/e	P522958
Filter, primary.		P148967
Cover/cup		P120729
Clamp		P002904

G052685	FRG Style A	
Clamp Cover Elbow, 45° Elbow, 90°	P002904 P120279 P105543 P105531 P600043	
Filter, safety Informer™ indic Inlet hood, plas Mounting band Mounting band Outlet band cla	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	

G052686 FRG Style	Α
Clamp	P002904
Cover	P120279
Elbow, 45°	P105543
Elbow, 90°	P105531
Filter, primary	P600043
Filter, safety (optional)	
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, plastic	
Mounting band	P002348
Mounting bands, metal	
Outlet band clamp	
Vacuator™ Valve	P158914

P533761
P105541
P105529
P821575
P822858
X002277
H001377
P538928
H008443
P777730
P148337
P522958

G057513 FPG	
Cover	
	P105541 P105529
	P821575
	P822858 5" H <sub>2</sub> O X002277
	H001377
	P538928 al H008443
Mounting Bands, plas	stic P777730
	P148337 P522958

Part Numbers with \* indicates old/cancelled model (only service parts are available).



Air Cleaner Part No. and Style
Description Service Part No.

Air Cleaner Part No. and Style
Description Service Part No.

Air Cleaner Part No. and Style
Description Service Part No.

# G057514 FPG

Cover	P533761
Elbow, 45°	P105541
Elbow, 90°	P105529
Filter, primary	P821575
Filter, safety	P822858
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H001377
Latch	P538928
Mounting bands, metal	H008443
Mounting Bands, plastic	P777730
Outlet band clamp	P148337
Vacuator™ Valve	P522958

# \*G057516 FPG

Vacuator <sup>™</sup> Valve	P522958
Filter, safety	P822858
Filter, primary	P831424
Latch	P538928
Inlet hood (optional)	H001377
Cover	P533801

# \*G057517 FPG

Vacuator™ Valve	P522958
Filter, safety	P822858
Filter, primary	P821424
Latch	P538928
Inlet hood (optional)	H001377
Cover	P533801

#### \*G060003 SDG-PER

Gasket kit	X002997
Filter, primary	P118342
Cover latch assembly	P017617
Cover clip spring	P017673
Clamp, cup	

# G065008 FWG

Wing nut	
Filter, primary-UL approved	
Filter, primary-extended life	P182052
Filter, primary-Donaldson Blue™	DBA5134
Filter, primary	P181052
Dust cup, VacValve, horz	P103836
Cup	P102805
Clamp	P002940
Baffle, Rubber	P102510

# G065012 FWG

Wing nut P101870	
Filter, primary-UL approved P122514	
Filter, primary-extended life P182052	
Filter, primary-Donaldson Blue™ DBA5134	
Filter, primary P181052	
Dust cup, VacValve, horzP103836	
Cup P102805	
Clamp P002940	
Baffle, Rubber	

# \*G065104 FHG-STYA

Wing nut	P101870
Filter, safety	P119539
Filter, primary-high vibration	P148586
Filter, primary-extended life	P182062
Filter, primary	
Cup	P102805
Clamp	P002940
Baffle, Rubber	P102510

# \*G065113 FHG-STYA

Wing nut	P101870
Filter, safety	P119539
Filter, primary-high vibration	P148586
Filter, primary-extended life	P182062
Filter, primary	P181062
Cup	P102805
Clamp	P002940
Baffle, Rubber	P102510
Durino, Habbor	1 102010

# \*G065212 FHG-STYA

Wing nut Vacuator™ Valve	
Filter, safety	
Filter, primary-high vibration	P148586
Filter, primary-extended life	P182062
Filter, primary	P181062
Dust cup, VacValve, vert	P103839
Dust cup, VacValve, horz	P103836
Clamp	P002940
Baffle, Rubber	P102510

# G065256 FHG-STYA

Wing nut	P101870
Vacuator™ Valve	P106593
Filter, safety	P119539
Filter, primary	P148586
Dust cup, VacValve, vert	
Dust cup, VacValve, horz	P103836
Clamp	P002940
Baffle, Rubber	P102510

# \*G065261 FHG-STYB

Wing nut	P101870
Vacuator™ Valve	
Filter, safety	
Filter, primary	P148586
Cover	P114972

# G065266 FWG

Wing nut	
Filter, primary	P148966
Dust cup, VacValve, horz	
Cup	P102805
Clamp	P002940
Baffle, Rubber	P102510

# \*G065359 FHG-STYB

Wing nut	P101870
Vacuator™ Valve	P112803
Filter, safety	P119539
Filter, primary-high vibration	P148586
Filter, primary-extended life	P182062
Filter, primary	P181062
Cover	

# \*G065360 FHG-STYB

Wing nut	P101870
Vacuator™ Valve	P112803
Filter, safety	P119539
Filter, primary-high vibration	P148586
Filter, primary-extended life	P182062
Filter, primary	P181062

# G065411 FPG

Cover	DE20/122	
Elbow, 45°		
Elbow, 90°	P105531	
Filter, primary	P822768	
Filter, safety	P822769	
Informer™ indicator 25" H <sub>2</sub> O	X002277	
Inlet hood, plastic	H001378	
Latch	P538928	
Mounting bands, metal	H008441	or
	H008444	
Mounting Bands, plastic	P778810	
Outlet band clamp	P148339	
Vacuator™ Valve		

# G065424 FPG

Cover	P539422	
Elbow, 45°	P105543	
Elbow, 90°	P105531	
Filter, primary	P822768	
Filter, safety	P822769	
Informer™ indicator 25" H <sub>2</sub> O	X002277	
Inlet hood, plastic	H001378	
Latch	P538928	
Mounting bands, metal	H008441	or
	H008444	
Mounting Bands, plastic	P778810	
Outlet band clamp	P148339	
Vacuator™ Valve	P158914	

# \*G065426 FPG

Vacuator <sup>™</sup> Valve	P158914
Filter, safety	P822769
Filter, primary	P532410
Latch	P538928
Inlet hood (optional)	H001378
Cover	P532699

# \*G065427 FPG

Vacuator™ Valve	P158914
Filter, safety	P822869
Filter, primary	P532410
Latch	P538928
Inlet hood (optional)	H001378
Cover	P532699

# FILTER DESCRIPTIONS:

SM=Scheduled Maintenance Donaldson Blue™ = High Efficiency, Extended Service



Part Numbers with \* indicates old/cancelled model (only service parts are available).

Air Cleaner Part No. and Style Description Service Part No.

Air Cleaner Part No. and Style Description Service Part No.

#### Air Cleaner Part No. and Style Description Service Part No.

Mounting bands, metal ...... H002070 Mounting Bands, plastic......P777731

Outlet band clamp...... P148341 Vacuator™ Valve ...... P158914

G065432 FPG	
Cover	P539422
Elbow, 45°	P105543
Elbow, 90°	P105531
Filter, primary	P822768
Filter, safety	P822769
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H001378
Latch	P538928
Mounting bands, metal	H008441 or
	H008444
Mounting Bands, plastic	
Outlet band clamp	P148339
Vacuator™ Valve	

G070017 FPG	
Cover	
Elbow, 45°	
Elbow, 90° reducing	. P123462
Filter, primary-Donaldson Blue™	
Filter, primary Filter, safety	. P827653 . P829332
Hump hose	
Informer™ indicator 25" H <sub>2</sub> O	
Inlet hood, plastic	
Latch	
Mounting bands, metal Mounting Bands, plastic	
Outlet band clamp	. P148341
Vacuator <sup>™</sup> Valve	. P158914

*G080009 SBG-PER	
Vacuator™ Valve	P112803
Gasket, filter	P018406
Cover gasket	P100643
Gasket, body or cup	P018293
Gasket kit	X002996
Filter, primary-UL approved	P122521
Filter, primary-extended life	P182068
Filter, primary	
Dust cup, VacValve, vert	P105010
Dust cup, VacValve, horz	P103740
Cup	P018298
Cover latch assembly	

Cover clip spring ...... P017673 Clamp, body or cup......P003951

#### G065433 **FPG**

Cover	. P539422
Elbow, 45°	. P105543
Elbow, 90°	. P105531
Filter, primary	. P822768
Filter, safety	. P822769
Informer <sup>™</sup> indicator 25" H <sub>2</sub> O	. X002277
Inlet hood, plastic	H001378
Latch	. P538928
Mounting bands, metal	. H008441 or
	H008444
Mounting Bands, plastic	
Outlet band clamp	
Vacuator™ Valve	. P158914

G070018 FPG	
Cover	P536202
Elbow, 45°	P105544
Elbow, 90°	P105532
Elbow, 90° reducing	P123462
Filter, primary-Donaldson Blue™	DBA5225
Filter, primary	P827653
Filter, safety	P829332
Hump hose	P105608
Informer™ indicator 25" H <sub>2</sub> 0	
Inlet hood, plastic	H001379
Latch	P538928
Mounting bands, metal	H002070
Mounting Bands, plastic	
Outlet band clamp	P148341
Vacuator™ Valve	P158914

*G080010	SBG-TUB	
Gasket, filter		P018406
Cover gasket		P100643
Gasket, body o	r cup	P018293
Filter, primary-		
Filter, primary-	extended life	P182068
Filter, primary.		
Cup		P018298

Cover latch assembly ...... P017617

Cover clip spring ...... P017673 Clamp, body or cup ...... P003951

#### G065541 FRG Style A

Clamp	P002940
Cover	
Elbow, 45°	P105544
Elbow, 90°	P105532
Elbow, 90° reducing	P123462
Filter, primary	P549271
Filter, safety	P549277
Hump hose	P105608
Informer™ indicator 25" H <sub>2</sub> O	
Inlet hood, plastic	H001379
Mounting band	
Mounting bands, metal	P007191
Outlet band clamp	P148341
Vacuator™ Valve	

	alve
G070019	FPG
Cover	

0070010 110	
Cover	
Elbow, 45°	P105544
Elbow, 90°	P105532
Elbow, 90° reducing	P123462
Filter, primary-Donaldson Blue™	DBA5225
Filter, primary	P827653
Filter, safety	P829332
Hump hose	P105608
Informer <sup>™</sup> indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H001379
Latch	
Mounting bands, metal	H002070
Mounting Bands, plastic	P777731
Outlet band clamp	P148341
Vacuator™ Valve	P158914

G080023 FWG	
Wing nut	P101870
Filter, primary-high vibration	P148968
Filter, primary-extended life	P182054
Filter, primary-Donaldson Blue™	
Filter, primary	P181054
Dust cup, VacValve, horz	P103837
Cup	P103113
Clamp, body or cup	P003951
Baffle, Rubber	P102980

#### FRG Style A G065551

Clamp	P002940
Cover	P522133
Elbow, 45°	P105544
Elbow, 90°	P105532
Elbow, 90° reducing	P123462
Filter, primary	P549271
Filter, safety (optional)	P549277
Hump hose	P105608
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, plastic	H001379
Mounting band	P007191
Mounting bands, metal	P007191
Outlet band clamp	P148341
Vacuator™ Valvo	P15891/

#### G070020 **FPG**

# G080026 **FWG**

Wing nut	P101870
Filter, primary-high vibration	P148968
Filter, primary-extended life	P182054
Filter, primary-Donaldson Blue™	DBA5054
Filter, primary	P181054
Dust cup, VacValve, horz	P103837
Cup	P103113
Clamp, body or cup	P003951
Baffle, Rubber	P102980

*	$\sim$ $\sim$	On	14	7	ГШ	G-9	CT1	/D

Wing nut	P101870
Vacuator™ Valve	P105220
Filter, safety	P112212
Filter, primary-high vibration	P148973
Filter, primary-extended life	P182059
Filter, primary-Donaldson Blue™	<b>DBA5059</b>
Filter, primary	P181059
Cover	P119711

Part Numbers with \* indicates old/cancelled model (only service parts are available).



Air Cleaner Part No. and Style Description Service Part No.

# \*G080195 FHG-STYA

Wing nut	P101870
Filter, safety	P119410
Filter, primary-high vibration	P148973
Filter, primary-extended life	P182059
Filter, primary-Donaldson Blue™	DBA5059
Filter, primary	P181059
Cup	P103113
Clamp	P003951
Baffle, Rubber	P102980

# \*G080200 FHG-STYA

Wing nut	P101870
Filter, safety	P119410
Filter, primary-high vibration	P148973
Filter, primary-extended life	P182059
Filter, primary-Donaldson Blue™	DBA5059
Filter, primary	P181059
Cup	P103113
Clamp	P003951
Baffle, Rubber	P102980

#### G080372 **FHG-STYB**

Wing nut P101870	
Vacuator™ Valve P106593	
Filter, safety	
Filter, primary P148573	
Cover	

# \*G080490 FHG-STYB

Wing nut P101870
Vacuator™ Valve P112803
Filter, safety
Filter, primary-high vibration P148973
Filter, primary-extended life P182059
Filter, primary-Donaldson Blue™ DBA5059
Filter, primary P181059
Cover

# \*G080491 FHG-STYB

Wing nut	P101870
Vacuator™ Valve	P112803
Filter, safety	P119410
Filter, primary-high vibration	P148973
Filter, primary-extended life	P182059
Filter, primary-Donaldson Blue™	DBA5059
Filter, primary	P181059
Cover	P119711

#### G080582 FRG Style A

Clamp	P003951
Cover	P600321
Elbow, 45°	P109331
Elbow, 90°	P114318
Filter, primary-Donaldson Blue™	<b>DBA5223</b>
Filter, primary	P601437
Filter, safety	P601476
Hump hose	P114319
Informer™ indicator 25" H <sub>2</sub> O	X002277

#### Air Cleaner Part No. and Style Description Service Part No.

Inlet hood, plastic	H000466
Mounting band	
Mounting bands, metal	
Outlet band clamp	P148342
Vacuator™ Valve	P158914

#### FRG Style A G080585

· · · · · · · · · · · · · · · · ·	
Cover	P600321
Elbow, 45°	P109331
Elbow, 90°	P114318
Filter, primary-Donaldson Blue™.	DBA5223
Filter, primary	P601437
Filter, safety (optional)	P601476
Hump hose	P114319
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H000466
Mounting band	P004307
Mounting bands, metal	
Outlet band clamp	
Vacuator™ Valve	P158914

#### G082525 **FPG**

Cover	P534048
Elbow, 45°	P109331
Elbow, 90°	P114318
Filter, primary-Donaldson Blue™	DBA5227
Filter, primary	P828889
Filter, safety	P829333
Hump hose	P114319
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H000466
Latch	P538928
Mounting bands, metal	H002023
Mounting Bands, plastic	P777732
Outlet band clamp	P148342
Vacuator™ Valve	P158914

#### G082526 **FPG**

Cover	P109331
Filter, primary-Donaldson Blue™	
Filter, primary	
Filter, safety	P829333
Hump hose	P114319
Informer™ indicator 25" H <sub>2</sub> O	
Inlet hood, plastic	H000466
Latch	
Mounting bands, metal	H002023
Mounting Bands, plastic	P777732
Outlet band clamp	P148342
Vacuator™ Valve	P158914

#### **FPG** G082527

Cover	P534048
Elbow, 45°	P109331
Elbow, 90°	P114318
Filter, primary-Donaldson Blue™	
Filter, primary	P828889
Filter, safety	P829333
Hump hose	P114319
Informer $^{\text{\tiny M}}$ indicator 25 $^{\text{\tiny H}}$ H $_2$ O	X002277

#### Air Cleaner Part No. and Style Description Service Part No.

Inlet hood, plastic	H000466
Latch	P538928
Mounting bands, metal	H002023
Mounting Bands, plastic	P777732
Outlet band clamp	P148342
Vacuator™ Valve	P158914

#### G082528 **FPG**

Clamp	. P102025
Cover	. P534048
Elbow, 45°	. P109331
Elbow, 90°	. P114318
Filter, primary-Donaldson Blue™	. DBA5227
Filter, primary	. P828889
Filter, safety	. P829333
Hump hose	. P114319
Informer™ indicator 25" H <sub>2</sub> 0	. X002277
Inlet hood, plastic	. H000466
Latch	. P538928
Mounting bands, metal	. H002023
Mounting Bands, plastic	. P777732
Outlet band clamp	. P148342
Vacuator™ Valve	. P158914

# \*G090022 FHG-STYA

Wing nut	P101870
Filter, safety	P119778
Filter, primary-extended life	
Filter, primary-Donaldson Blue™	<b>DBA5234</b>
Filter, primary	P181063
Cover/cup	P112667
Clamp	P102025
Baffle	P105050

# \*G090024 FHG-STYA

Wing nut	P101870
Filter, safety	P119778
Filter, primary-extended life	P182063
Filter, primary-Donaldson Blue™	DBA5234
Filter, primary	P181063
Cover/cup	P112667
Clamp	P102025
Raffle	P105050

# \*G090182 FHG-STYB

Wing nut	P101870
Filter, safety	P119778
Filter, primary-extended life	P182063
Filter, primary-Donaldson Blue™	<b>DBA5234</b>
Filter, primary	P181063
Cover	P115466

# \*G090183 FHG-STYB

Wing nut	P101870
Filter, safety	P119778
Filter, primary-extended life	P182063
Filter, primary-Donaldson Blue™	<b>DBA5234</b>
Filter, primary	P181063
Cover	P115466

# FILTER DESCRIPTIONS:

SM=Scheduled Maintenance Donaldson Blue™ = High Efficiency, Extended Service



Part Numbers with \* indicates old/cancelled model (only service parts are available).

Air Cleaner Part No. and Style Description Service Part No.

Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style Description Service Part No.

# G090219 **FPG** DZONESA

Occase FDO	
Vacuator™ Valve	H776008
Outlet band clamp	
Mounting Bands, plastic	
Inlet hood, plastic	H000468
Inlet hood, metal	
Informer™ indicator 25" H <sub>2</sub> O	X002277
Hump hose	P105609
Filter, safety	P780523
Filter, primary	P780522
Filter, primary-Donaldson Blue™.	DBA5226
Elbow, 90° reducing	P121482
Elbow, 90°	P105533
Elbow, 45°	P105545
Cover	

G090225 FPG	
Cover	P780524
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	
Filter, primary-Donaldson Blue™	DBA5226
Filter, primary	P780522
Filter, safety	P780523
Hump hose	
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000170
Inlet hood, plastic	
Mounting Bands, plastic	
Outlet band clamp	
Vacuator <sup>™</sup> Valve	H776008

G090245 FRG Style A	
Clamp	P102025
Cover	
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	P121482
Filter, primary-Donaldson Blue™	DBA5224
Filter, primary	
Filter, safety	P601286
Hump hose	P105609
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000170
Inlet hood, plastic	
Mounting band	
Mounting bands, metal	
Outlet band clamp	P148343
Vacuator™ Valve	P158914

G090250 FRG Style A	
Cover	
Elbow, 45°	
Elbow, 90°	P105533
Elbow, 90° reducing	
Filter, primary-Donaldson Blue™	DBA5224
Filter, primary	P601280
Filter, safety (optional)	
Hump hose	
Informer <sup>™</sup> indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000170
Inlet hood, plastic	H000468
Mounting band	P004073
Mounting bands, metal	P004073
Outlet band clamp	P148343
Vacuator™ Valve	

*G092004	ECG-KPII	
Stud repair kit.		X004464
Nut, plastic		P119325
Mounting band		P004073
Filter, primary t	reated	P148044

G092401	ECG Latch Service Cove	,
Elbow, 45°	P105547	
Elbow, 90°	P105535	
Filter, primary	attached cover P150693	
Filter, primary	no cover P150692	
Filter, primary	no cover, treated P148044	
Hump hose	P105612	
Informer <sup>™</sup> ind	cator 25" H <sub>2</sub> O X002277	
Inlet hood, me	tal H000275	
Inlet hood, pla	stic H000606	
	ds, metal P004073	
	amp P148347	
Spring latch r	eplacement kit X006201	

*G092501	ECG-KPI	
Filter, primary Filter, primary	ment kit -extended life treated	P15069
Filter, primary		P15069
Filter, primary		P15069
G100003		P15069

0100000 1110	
Wing bolt	P018464
Gasket, body or cup	P101401
Filter, primary-extended life	
Filter, primary-Donaldson Blue™	DBA5204
Filter, primary	P181045
Dust cup, VacValve, horz	P103827
Cup	P103519
Clamp	P106071
Baffle, metal	P103135

G100004	FWG	
Wing bolt		P018464
Gasket, body	or cup	P101401
Filter, primary	-extended life	P182045
Filter, primary	r-Donaldson Blue™	DBA5204
Filter, primary	·	P181045
Dust cup, Vac	Valve, horz	P103827
Cup		P103519
Clamp		P106071
Baffle, metal.		P103135

*G1	00028	FHG-STYA

Nut	P111852
Gasket, body or cup	P101401
Filter, safety	P119375
Filter, primary-extended life	P182064
Filter, primary-Donaldson Blue™	
Filter, primary	P181064
Cup	P103519
Clamp	P106071
Baffle, metal	P103135

# \*G100029 FHG-STYA

Nut	P111852
Gasket, body or cup	P101401
Filter, safety	P119375
Filter, primary-extended life	
Filter, primary-Donaldson Blue™	DBA5233
Filter, primary	P181064
Cup	P103519
Clamp	P106071
Baffle, metal	P103135

# \*G100035 FHG-STYA

Vacuator™ Valve	P103198
Nut	P111852
Gasket, body or cup	P101401
Filter, safety	
Filter, primary-extended life	
Filter, primary-Donaldson Blue™	
Filter, primary	
Dust cup, VacValve, vert	
Dust cup, VacValve, horz	
Clamp	
Baffle, metal	

# \*G100036 FHG-STYA

Vacuator™ Valve P103	198
NutP111	852
Gasket, body or cup P101	401
Filter, safetyP119	375
Filter, primary-extended life P182	.064
Filter, primary-Donaldson Blue™ DBA	5233
Filter, primary P181	064
Dust cup, VacValve, vert P103	826
Dust cup, VacValve, horz P103	827
Clamp P106	071
Baffle, metalP103	135

# \*G100160 SBG-PER

Vacuator™ Valve	P112803
Thumb screw	P016984
Inner cover	P011798
Gasket, inner cover	P101077
Gasket, filter	P018182
Cover gasket	
Gasket, body or cup	P101401
Gasket washer	P018462
Gasket kit	X002995
Filter, primary-extended life	P182071
Filter, primary	P181071
Dust cup, VacValve, vert	P105011
Dust cup, VacValve, horz	P103742
Cup	P018577
Cover latch assembly	P017617
Cover clip spring	P017673
Cover	P018180
Clamp, body or cup	P101846
Body, upper	P101070

Part Numbers with \* indicates old/cancelled model (only service parts are available).



Air Cleaner Part No. and Style Description Service Part No.

# \*G100161 SBG-TUB

Thumb screw	. P016984
Inner cover	. P101798
Gasket, inner cover	. P101077
Gasket, filter	. P018182
Cover gasket	. P018181
Gasket, body or cup	. P101401
Gasket washer	. P018462
Filter, primary-extended life	. P182071
Filter, primary	. P181071
Cup	. P018577
Cover latch assembly	
Cover clip spring	. P017673
Cover	
Clamp, body or cup	. P101846
Body, upper	
Body, lower	. P101086

# G100297 FRG Style B

Cover	P538200
Elbow, 45°	P105545
Elbow, 90°	P105533
Elbow, 90° reducing	P121482
Filter, primary-Donaldson Blue™	DBA5228
Filter, primary	P781039
Filter, safety	P777639
Gasket, cover	P537308
Hump hose	P105609
Informer <sup>™</sup> indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H000467
Latch	
Mounting band	P004076
Mounting bands, metal	
Outlet band clamp	P148343
Vacuator™ Valve	P776008

# G100317 FPG

P780578
P105545
P105533
P121482
DBA5228
P781039
P777639
P105609
X002277
H000170
H000468
P780594
P148343
H776008

# G100319 FPG

P780578 P105545 P105533 P121482
DBA5228
P781039
P777639
P105609
X002277
H000170
H000468
P780594
P148343
H776008

Air Cleaner Part No. and Style
Description Service Part No.

# G100395 FRG Style A

Baffle, metal	P602211
Clamp	P106071
Dust cup/cover	P103827
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Filter, primary-Donaldson Blue™	DBA5222
Filter, primary	P601790
Filter, safety	P777639
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000170
Inlet hood, plastic	H000468
Mounting bands, metal	P004076
0-ring	P101401
Outlet band clamp	P148345
Vacuator™ Valve	P103198

# G100398 FRG Style A

a rootoo Tria otylo /	
Baffle, metal	P602211
Clamp	P106071
Dust cup/cover	P103827
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Filter, primary-Donaldson Blue™	DBA5222
Filter, primary	
Filter, safety (optional)	P777639
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000170
Inlet hood, plastic	
Mounting band	P004076
Mounting bands, metal	
0-ring	P101401
Outlet band clamp	
Vacuator™ Valve	P103198

# \*G110103 FTG

Wing nut	P126054
Wing nut	P126049
Vacuator™ Valve	P103198
SafetySignal indicator	X004815
Cover gasket	P127329
Filter, safety	P124046
Filter, primary-extended life	P182070
Filter, primary-Donaldson Blue™	DBA5126
Filter, primary	P181070
Cover	P127331
Clip	P154710

# G110119 EPG

Cover	P529151
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Fastener kit	X006452
Filter, primary-Donaldson Blue™	DBA5067
Filter, primary - SM	P527484
Filter, safety	P527680
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, plastic	H000604

Air Cleaner Part No. and Style
Description Service Part No.

Outlet band clamp	P148345
Thumb screw	P527435
Vacuator™ Valve	P525956

# G110120 EPG

Cover	P529151
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	
Fastener kit	X006452
Filter, primary-Donaldson Blue™	DBA5067
Filter, primary - SM	P527484
Filter, safety	P527680
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, plastic	H000604
Outlet band clamp	P148345
Thumb screw	P527435
Vacuator™ Valve	P525956

# G110206 FRG Style B

Cover	P538452
Elbow, 45°	P114316
Elbow, 90°	P113733
Filter, primary-Donaldson Blue™	DBA5105
Filter, primary - SM	P532966
Filter, safety	P533781
Gasket, cover	P526676
Hump hose	P114317
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000165
Inlet hood, plastic	
Latch	P536439
Mounting band	P004079
Mounting bands, metal	P004079
Outlet band clamp	P148344
Vacuator™ Valve	P158914

# G110214 FRG Style B

Cover	
Elbow, 45°	P114316
Elbow, 90°	P113733
Filter, primary-Donaldson Blue™	DBA5230
Filter, primary	P536457
Filter, safety	P536492
Gasket, cover	
Hump hose	P114317
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	
Inlet hood, plastic	H000468
Latch	
Mounting band	
Mounting bands, metal	P004079
Outlet band clamp	
Vacuator™ Valve	P158914

# \*G112000 ECG-KPII

Stud repair kit	X004464
Nut, plastic	
Mounting band	P004079
Cover gasket	P117477
Filter primary treated	P148043



Part Numbers with \* indicates old/cancelled model (only service parts are available).

Air Cleaner Part No. and Style
Description Service Part No.

Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style Description Service Part No.

# G112001 ECG Bolt Service Cover

Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary, no cover, treated	P148043
Gasket, cover	P155211
Hump hose	P105613
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000339
Inlet hood, plastic	H000607
Kit	X006201
Mounting bands, metal	P004079
Nut, plastic	P119325
Outlet band clamp	
Retaining ring	P129469

# \*G112401 ECG-KPI

Latch replacement kit	X006201
Filter, primary-extended life	P150695
Filter, primary treated	P148043
Filter, primary	P150694
Cover	

# G112404 ECG Latch Service Cover

Cover	P150862
Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary, attached cover	P153551
Filter, primary, attached	
cover- Donaldson Blue™	DBA5053
Filter, primary, no cover, treated	P154575
Gasket, cover	P536493
Hump hose	P105613
Informer™ indicator 25" H <sub>2</sub> O	
Inlet hood, metal	H000339
Inlet hood, plastic	H000607
Mounting bands, metal	P004079
Outlet band clamp	P148348
Spring latch replacement kit	X006201

# G112417 ECG Latch Service Cover

Cover	P105548 P105536
Filter, primary, attached	
cover-Donaldson Blue™	DBA5047
Filter, primary, no cover	P150694
Filter, primary-Donaldson Blue™	
Gasket, cover	P536493
Hump hose	P105613
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Mounting bands, metal	P004079
Outlet band clamp	
Spring latch replacement kit	X006201

# G112501 ECG Latch Service Cover

Elbow, 45°	P105536 P150694
attached cover	DBA5047
Filter, primary-Donaldson Blue™	DBA5029
Filter, primary treated	P148043
Gasket, cover	P536493
Hump hose	P105613
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000339
Inlet hood, plastic	
Mounting bands, metal	P004079
Outlet band clamp	P148348
Spring latch replacement kit	

# G112504 ECG Latch Service Cover

Elbow, 45° Elbow, 90°	
Filter, primary, attached	. 1 100000
blackcover	. P537791
Filter, primary, attached cover	. P153551
Filter, primary-Donaldson Blue <sup>™</sup>	
attached cover	. DBA5053
Filter, primary, no cover, treated	. P154575
Gasket, cover	. P536493
Hump hose	. P105613
Informer <sup>™</sup> indicator 25" H <sub>2</sub> 0	. X002277
Inlet hood, metal	. H000339
Inlet hood, plastic	. H000607
Mounting bands, metal	. P004079
Outlet band clamp	. P148348
Spring latch replacement kit	

# \*G120012 FHG-STYA

Baffle, metal	P106329
Clamp	P100808
Cup	P106589
Filter, primary	P181034
Filter, primary-extended life	P182034
Filter, primary-Donaldson Blue™	<b>DBA5034</b>
Filter, safety	P119374
Gasket, body or cup	P017804
Nut	P111852

# \*G120014 FHG-STYA

Baffle, metal	P106329
Clamp	P100808
Cup	P106589
Filter, primary	P181034
Filter, primary-extended life	P182034
Filter, primary-Donaldson Blue™	DBA5034
Filter, safety	P119374
Gasket, body or cup	P017804
Nut	P111852

# \*G120036 FHG-STYA

Baffle, metal.       P106329         Clamp       P121067         Dust cup, VacValve, horz       P109296         Dust cup, VacValve, vert       P103828         Filter, primary       P181034         Filter, primary-extended life       P182034         Filter, primary-Donaldson Blue™       DBA5034         Filter, safety       P119374         Gasket, body or cup       P017804
Gasket, body or cup         P017804           Nut         P111852           Vacuator™ Valve         P103198

# \*G120037 FHG-STYA

Baffle, metalClamp	
Dust cup, VacValve, horz	
Dust cup, VacValve, vert	P103828
Filter, primary	P181034
Filter, primary-extended life	P182034
Filter, primary-Donaldson Blue™	DBA5034
Filter, safety	P119374
Gasket, body or cup	P017804
Nut	P111852
Vacuator™ Valve	P103198

# G120059 FWG

Baffle, metal	P106329
Clamp	P100808
Cup	P106589
Dust cup, VacValve, horz	P109296
Filter, primary	P181035
Filter, primary-extended life	P182035
Filter, primary-UL approved	P122525
Gasket, body or cup	P017804
Wing bolt	P018464

# G120063 FWG

Baffle, metal	P106329
Clamp	P100808
Cup	P106589
Dust cup, VacValve, horz	P109296
Filter, primary	P181035
Filter, primary-extended life	P182035
Filter, primary-UL approved	P122525
Gasket, body or cup	P017804
Wing bolt	P018464

# \*G120075 STG-PER

Cover gasket	P017365
Dust cup, quick release	
Filter, primary	P181044
Filter, primary-extended life	P182044
Filter, safety	P119371
Gasket kit	X003537
Gasket washer	P105740
Gasket, body or cup	P017804
Inlet shroud	P102881
Mounting band	H000349
SafetySignal indicator	X004816
Wing nut	P109062

#### FILTER DESCRIPTIONS:

Part Numbers with \* indicates old/cancelled model (only service parts are available).



Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style
Description Service Part No.

Air Cleaner Part No. and Style
Description Service Part No.

# \*G120250 SBG-PER

Clamp	P100808
Cover	P017897
Cover clip spring	P017673
Cover gasket	P017365
Cover latch assembly	P017617
Cup	P100807
Dust cup, quick release	
Dust cup, VacValve, horz	P103744
Dust cup, VacValve, vert	P105015
Filter, primary	P181033
Filter, primary-extended life	P182033
Gasket kit	X002994
Gasket washer	P018462
Gasket, body or cup	P017804
Gasket, filter	P018033
Gasket, inner cover	P100894
Inner cup	P101669
Thumb screw	P016984
Vacuator™ Valve	P112803

# \*G120251 SBG-TUB

Clamp	P100808
Cover	P017897
Cover clip spring	P017673
Cover gasket	P017365
Cover latch assembly	
Cup	P100807
Filter, primary	P181033
Filter, primary-extended life	P182033
Gasket washer	P018642
Gasket, body or cup	P017804
Gasket, filter	P018033
Gasket, inner cover	P100894
Inner cup	P101669
Thumb screw	P016984

# G120332 STG-TUB

# G120415 FRG Style A

Baffle, metal	P106329
Clamp	P121067
Dust cup/cover	P109296
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Filter, primary-Donaldson Blue™	DBA5231
Filter, primary	P601767
Filter, safety	P601774
Hump hose	P105610
Informer <sup>™</sup> indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	
Inlet hood, plastic	H000469
Mounting band	H000349
Mounting bands, metal	H000349
0-ring	P017804
Outlet band clamp	P148345
Vacuator™ Valve	P103198

# G120417 FRG Style A

P106329
P121067
P109296
P109021
P107844
P143895
DBA5231
P601767
P601774
P105610
X002277
H000165
H000469
H000349
H000349
P017804
P148345
P103198

# \*G130043 FTG

Clip	P154710
Cover	P127368
Cover gasket	P127377
Filter, primary	P181082
Filter, primary-extended life	P182082
Filter, primary-Donaldson Blue™	DBA5127
Filter, safety	P138722
SafetySignal indicator	X004814
Vacuator <sup>™</sup> Valve	P103198
Wing nut	P126049
Wing nut	P126054

# G130079 EPG

Cover	P533916
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Fastener kit	X006452
Filter, primary - SM	P533930
Filter, primary-Donaldson Blue™	<b>DBA5109</b>
Filter, safety	P533890
Hump hose	
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	
Inlet hood, plastic	H000606
Outlet band clamp	
Thumb screw	P527435
Vacuator™ Valve	P525956

# G130089 EPG

Cover	P533916
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Fastener kit	X006452
Filter, primary - SM	P533930
Filter, primary-Donaldson Blue™	DBA5109
Filter, safety	P533890
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000275
Inlet hood, plastic	H000606
Outlet band clamp	P148345
Thumb screw	P527435
Vacuator™ Valve	P525956

# G130097 FRG Style B

Cover	P538259
Elbow, 45°	P109021
Elbow, 90°	P107844
Elbow, 90° reducing	P143895
Filter, primary-Donaldson Blue™	<b>DBA5221</b>
Filter, primary	P537876
Filter, safety	P537877
Gasket, cover	P537699
Hump hose	P105610
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000165
Inlet hood, plastic	
Latch	
Mounting band	P013722
Mounting bands, metal	P013722
Outlet band clamp	P148345
Vacuator™ Valve	

# G130107 FRG Style B

P538259
P109021
P107844
P143895
<b>DBA5220</b>
P532503
P532504
P537699
P105610
X002277
H000165
H000469
P776033
P013722
P013722
P148345
P776008



Part Numbers with \* indicates old/cancelled model (only service parts are available).

Air Cleaner Part No. and Style Description Service Part No.

Air Cleaner Part No. and Style Description Service Part No.

Air Cleaner Part No. and Style Description Service Part No.

# G132000 **ECG Bolt Service Cover**

Elbow, 45°	. P105548
Elbow, 90°	. P105536
Filter, primary, no cover	. P142100
Filter, primary-Donaldson Blue™	. DBA5027
Gasket, cover	. P120604
Hump hose	. P105613
Informer™ indicator 25" H <sub>2</sub> 0	. X002277
Inlet hood, metal	. H000339
Inlet hood, plastic	
Mounting bands, metal	. P013722
Nut, plastic	. P119325
Outlet band clamp	. P148348
Retaining ring	. P129469

# \*G140022 FHG-STYA

Nut	P111852
Gasket, body or cup	P017335
Filter, safety	P119373
Filter, primary-extended life	P182046
Filter, primary	P181046
Cup/baffle	P118784
Clamp	P100866

# \*G140023 FHG-STYA

Nut	P111852
Gasket, body or cup	P017335
Filter, safety	P119373
Filter, primary-extended life	
Filter, primary	P181046
Cup/baffle	P118784
Clamp	P100866

# \*G140054 FHG-STYA

Vacuator™ Valve	P103198
Nut	P111852
Gasket, body or cup	P017335
Filter, safety	P119373
Filter, primary-extended life	P182046
Filter, primary	P181046
Dust cup, VacValve, vert	P103829
Dust cup, VacValve, horz	P109297
Clamp	P100866
Baffle, metal	P106771

# \*G140055 FHG-STYA

Vacuator™ Valve	P103198
Nut	P111852
Gasket, body or cup	P017335
Filter, safety	P119373
Filter, primary-extended life	P182046
Filter, primary-Donaldson Blue™	<b>DBA5046</b>
Filter, primary	P181046
Dust cup, VacValve, vert	P103829
Dust cup, VacValve, horz	P109297
Clamp	P100866
Baffle, metal	P106771

#### G140076 **STG-PER**

Body, lower	P102256
Clamp, cup	
Cover latch assembly	
Dust cup	
Elbow, 45°	
Elbow, 90°	
Filter, primary	
Filter, primary-Donaldson Blue™	
Filter, primary - SM	P181041
Filter, safety	P119370
Gasket kit	X003538
Gasket washer	P105740
Gasket, body or cup	P017335
Gasket, cover	
Hump hose	
Informer™ indicator 25" H <sub>2</sub> O	
Inlet shroud	
Mounting band	
Mounting bands, metal	
Outlet band clamp	
SafetySignal indicator	X004816
Spring clip & pin	
Wing nut	

#### G140083 **FWG**

	_
Wing bolt	. P018464
Gasket, body or cup	. P017335
Filter, primary-UL approved	. P122529
Filter, primary-extended life	. P182000
Filter, primary	. P181000
Cup	. P106773
Clamp	. P100866
Baffle, metal	. P106771

#### G140195 **FVG**

Elbow, 45°	P105547
Elbow, 90°	
Filter, primary	P182043
Filter, primary - ES & HE	DBA5043
Filter, primary - SM	
Filter, safety	
Gasket washer	P105740
Hump hose	P105612
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	
Inlet hood, plastic	H000607
Mounting band	H000350
Mounting bands, metal	
Outlet band clamp	
Pin	
Retainer	
SafetySignal indicator	
Vacuator™ Valve	P103198
Wing nut	P116175

# \*G140260 SBG-PER

Vacuator™ Valve	P112803
Thumb screw	P016984
Inner cup	P101670
Gasket, inner cover	P100859
Gasket, filter	P018029
Cover gasket	P016972
Gasket, body or cup	P017335
Gasket washer	P018462
Gasket kit	X002993
Filter, primary-extended life	P182037
Filter, primary	P181037
Dust cup, VacValve, vert	P105016
Dust cup, VacValve, horz	P103746
Dust cup, quick release	P107376
Cup	P100860
Cover latch assembly	
Cover clip spring	P017673
Clamp, body	P100861
Clamp	P100866

# \*G140261 SBG-TUB

Thumb screw	P016984
Inner cup	P101670
Gasket, inner cover	P100859
Gasket, filter	
Cover gasket	P016972
Gasket, body or cup	
Gasket washer	P018642
Filter, primary-extended life	P182037
Filter, primary	P181037
Cup	
Cover latch assembly	P017617
Cover clip spring	P017673
Clamp, body	
Clamp	
Body, lower	

# \*G140270 SBG-PER

Vacuator™ Valve	P112803
Thumb screw	P016984
Inner cup	P101670
Gasket, inner cover	
Gasket, filter	P018029
Cover gasket	P016972
Gasket, body or cup	
Gasket washer	
Gasket kit	X002993
Filter, primary-extended life	P182032
Filter, primary	P181032
Dust cup, VacValve, vert	P105016
Dust cup, VacValve, horz	P103746
Dust cup, quick release	P107376
Cup	P100860
Cover latch assembly	
Cover clip spring	P017673
Clamp, body	
Clamp	
Body, lower	P100934

#### FILTER DESCRIPTIONS:

Part Numbers with \* indicates old/cancelled model (only service parts are available).



Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style
Description Service Part No.

Air Cleaner Part No. and Style
Description Service Part No.

# G140445 STG-TUB

Body, lower	P017617
Filter, primary - SM	
Filter, primary-Donaldson Blue™	<b>DBA5041</b>
Filter, primary	P182041
Filter, safety	P119370
Gasket kit	
Gasket washer	P105740
Gasket, body or cup	P017335
Gasket, cover	P016972
Mounting band	H000350
SafetySignal indicator	X004816
Spring clip & pin	X005555
Wing nut	P109062

# G140523 FRG Style A

•	
Baffle, metal	
Clamp	. P100866
Dust cup/cover	. P109297
Filter, primary-Donaldson Blue™	. DBA5220
Filter, primary	
Filter, safety	. P532504
Mounting band	. H000350
0-ring	. P017335
Vacuator <sup>TM</sup> Valve	
Elbow, 45°	. P105547
Elbow, 90°	. P105535
Hump hose	
Informer™ indicator 25" H <sub>2</sub> O	. X002277
Inlet hood, metal	. H000275
Inlet hood, plastic	. H000606
Mounting bands, metal	. H000350
Outlet band clamp	. P148347

# G140526 FRG Style A

Baffle, metal Clamp Dust cup/cover	. P100866
Elbow, 45°	
Elbow, 90°	
Filter, primary-Donaldson Blue™	. DBA5220
Filter, primary	. P532503
Filter, safety (optional)	. P532504
Hump hose	. P105612
Informer™ indicator 25" H <sub>2</sub> 0	. X002277
Inlet hood, metal	. H000275
Inlet hood, plastic	. H000606
Mounting band	. H000350
Mounting bands, metal	
0-ring	. P017335
Outlet band clamp	. P148347
Vacuator™ Valve	

# G150048 EPG

Cover	P523096
Elbow, 45°	P105548
Elbow, 90°	
Fastener kit	X006452
Filter, primary-Donaldson Blue™	DBA5069
Filter, primary - SM	P527682
Filter, safety	P527683
Hump hose	P105613
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	
Inlet hood, plastic	H000607
Outlet band clamp	
Thumb screw	P527435
Vacuator™ Valve	P525956

# G150049 EPG

Cover	P523096
Elbow, 45°	P105548
Elbow, 90°	P105536
Fastener kit	X006452
Filter, primary - SM	P527682
Filter, primary-Donaldson Blue™.	
Filter, safety	P527683
Thumb screw	P527435
Hump hose	P105613
Informer <sup>™</sup> indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000339
Inlet hood, plastic	H000607
Outlet band clamp	P148348
Vacuator™ Valve	P525956

# \*G150039 FTG

UIIP	P154/10
Cover	P128293
Filter, primary-Donaldson Blue™	DBA5128
Filter, primary	P127308
Filter, safety	P127309
SafetySignal indicator	X004814
Vacuator™ Valve	P103198
Wing nut	P126049
Wing nut	P126054

# G150092 FRG Style B

Cover	P777920
Elbow, 45°	P105547
Elbow, 90°	P105535
Filter, primary-Donaldson Blue™	DBA5116
Filter, primary	P777868
Filter, safety	P777869
Hump hose	
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, metal	H000339
Inlet hood, plastic	H000607
Latch	P776033
Mounting band	P016845
Mounting bands, metal	P016845
Outlet band clamp	P148347
Vacuator™ Valve	

# \*G160035 SBG-TUB

Thumb screw	
Inner cup	P101666
Gasket, inner cover	
Gasket, filter	P017368
Cover gasket	
Gasket, body or cup	P017336
Gasket washer	P018642
Filter, primary-extended life	P182036
Filter, primary	P181036
Cup	P100794
Cover latch assembly	
Cover clip spring	P017673
Cover	P017831
Clamp, cup	P100789
Clamp, body	
Body, lower	

# G160048 FHG-STYA

Nut	P111852
Gasket, body or cup	P017336
Filter, safety	P119372
Filter, primary-extended life	P182002
Filter, primary-Donaldson Blue™	<b>DBA5002</b>
Filter, primary	P181002
Clamp, cup	P100789
Baffle, metal	P106637

# \*G160049 FHG-STYA

Vacuator™ Valve	P103198
Nut	P111852
Gasket, body or cup	P017336
Filter, safety	P119372
Filter, primary-extended life	P182002
Filter, primary-Donaldson Blue™	<b>DBA5002</b>
Filter, primary treated	P122708
Filter, primary	P181002
Cover/cup	P206952
Clamp, cup	P100789
Baffle, metal	P106637

# \*G160057 FHG-STYA

Nut	P111852
Gasket, body or cup	P017336
Filter, safety	P119372
Filter, primary-extended life	P182002
Filter, primary-Donaldson Blue™.	DBA5002
Filter, primary treated	P122708
Filter, primary	P181002
Cup	P106639
Clamp, cup	P100789
Baffle, metal	P106637

#### FILTER DESCRIPTIONS:

SM=Scheduled Maintenance Donaldson Blue™ = High Efficiency, Extended Service



Part Numbers with \* indicates old/cancelled model (only service parts are available).

Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style Description Service Part No.

# G160077 STG-PER

Body, lower	P115023
Clamp, body	P100780
Clamp, cup	
Cover	
Cover latch assembly	P017617
Dust cup	
Dust cup, quick release	
Dust cup, VacValve, horz	
Dust cup, VacValve, vert	
Elbow, 45°	
Elbow, 90°	
Filter, primary	
Filter, primary-Donaldson Blue™	
Filter, primary - SM	
Filter, safety	
Gasket kit	
Gasket washer	
Gasket, body or cup	P017336
Gasket, cover	P017367
Hump hose	
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet shroud	
Mounting band	H000351
Mounting bands, metal	
Outlet band clamp	
SafetySignal indicator	
Spring clip & pin	
Wing nut	
vviiig iiut	F 103002

# \*G160078 FHG-STYA

Vacuator <sup>™</sup> Valve P103198 Nut P111852
Gasket, body or cupP017336
Filter, safetyP119372
Filter, primary-extended life P182002
Filter, primary-Donaldson Blue <sup>™</sup> DBA5002
Filter, primary treated P122708
Filter, primary P181002
Cup P106639
Cover/cupP206952
Clamp, cup P100789
Baffle, metal P106637

# G160104 FWG

Thumb screw	P016984
Gasket, body or cup	P017336
Gasket washer	P018472
Filter, primary-extended life	P182001
Filter, primary	P181001
Dust cup, VacValve, horz	P106952
Cup	P106639
Clamp, cup	P100789
Baffle, metal	P106637

# \*G160107 FWG

Thumb screw	P016984
Gasket, body or cup	P017336
Gasket washer	P018472
Filter, primary-extended life	P182001
Filter, primary	P181001
Dust cup, VacValve, horz	P106952
Cup	P106639
Clamp, cup	P100789
Raffla motal	P106637

# \*G160158 STG-TUB

P109062
P109062
X004816
H000351
P017367
P017336
P105740
X003539
P114931
P182039
P181039
P104973
P103530
P107377
P109153
P101057
H000607

# \*G160254 FHG-STYA

Vacuator™ Valve	P113803
Nut	P111852
Gasket, body or cup	P017336
Filter, primary-extended life	P182002
Filter, primary-Donaldson Blue™	DBA5002
Filter, primary-Donaldson Blue™	P122708

# \*G160331 SBG-TUB

Thumb screw	P016984
Inner cup	P101666
Gasket, inner cover	P100777
Gasket, filter	P017368
Gasket, body or cup	
Gasket washer	P018642
Filter, primary-extended life	P182031
Filter, primary	P181031
Cup	
	P017617
Cover clip spring	P017673
Cover	P017831
Clamp, cup	P100789
Clamp, body	
Body, lower	

# \*G160340 SBG-PER

Vacuator™ Valve	P112803
Thumb screw	P016984
Inner cup	P101666
Gasket, inner cover	P100777
Gasket, filter	P017368
Cover gasket	P017367
Gasket, body or cup	P017336
Gasket washer	P018462
Gasket kit	X002992
Filter, primary-extended life	P182031
Filter, primary	P181031
Dust cup, VacValve, vert	
Dust cup, VacValve, horz	P103530
Dust cup, quick release	P107377
Cup	P100794
Cover latch assembly	
Cover clip spring	P017673
Cover	P017831
Clamp, cup	P100789
Clamp, body	

# \*G160359 SBG-PER

Vacuator™ Valve	P112803
Thumb screw	P016984
Inner cup	P101666
Gasket, inner cover	P100777
Gasket, filter	P017368
Cover gasket	P017367
Gasket, body or cup	
Gasket washer	P018462
Gasket kit	X002992
Filter, primary-extended life	P182036
Filter, primary	P181036
Dust cup, VacValve, vert	P104973
Dust cup, VacValve, horz	P103530
Dust cup, quick release	P107377
Cup	P100794
Cover clip spring	P017673
Cover	P017831
Clamp, cup	P100789
Clamp, body	P100780
Body, lower	P115023

# G160376 FVG

Elbow, 45°	P105548
Elbow, 90°	P105536
Filter, primary-Donaldson Blue™	<b>DBA5136</b>
Filter, primary	P124867
Filter, safety	P124866
Gasket washer	
Hump hose	P105613
Informer <sup>™</sup> indicator 25" H <sub>2</sub> 0	X002277
Inlet hood, metal	H000339
Inlet hood, plastic	H000607
Mounting band	H000351
Mounting bands, metal	H000351
Outlet band clamp	P148348
Pin	P109107
Retainer	P105738
SafetySignal indicator	X004816
Vacuator <sup>™</sup> Valve	P103198
Wing nut	P116175

# \*G160443 STG-PER

Cover gasket	P017367
Dust cup, quick release	
Dust cup, VacValve, horz	P103530
Dust cup, VacValve, vert	P104973
Filter, primary	P181039
Filter, primary-extended life	P182039
Filter, primary-Donaldson Blue™	DBA5039
Filter, safety	P114931
Gasket kit	X003539
Gasket washer	P105740
Gasket, body or cup	
Inlet shroud	P101759
Mounting band	H000351
SafetySignal indicator	
Wing nut	P109062

Part Numbers with \* indicates old/cancelled model (only service parts are available).



Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style
Description Service Part No.

Air Cleaner Part No. and Style
Description Service Part No.

# G160445 STG-TUB

P109153
P017617
P100794
P107377
P103530
P104973
P181039
<b>DBA5039</b>
P182039
P114931
X003539
P017336
P017367
H000351
X005555

# G160587 FVG

Elbow, 45°	P105536
Filter, primary-Donaldson Blue™	
Filter, primary - SM	P181049
Filter, safety	P116446
Gasket washer	
Hump hose	P105613
Informer™ indicator 25" H <sub>2</sub> O	
Inlet hood, metal	H000339
Inlet hood, plastic	H000607
Mounting band	
Mounting bands, metal	H000351
Outlet band clamp	P148348
Pin	
Retainer	P105738
Vacuator <sup>™</sup> Valve	P105220
Wing nut	P116175

# \*G160588 STG-TUB

Air Inlet Hood	. H000607
Body, lower	. P115022
Cover	. P109153
Cover gasket	. P017367
Dust cup, quick release	. P107377
Dust cup, VacValve, horz	. P103530
Dust cup, VacValve, vert	. P104973
Filter, primary-extended life	. P182039
Filter, safety	
Gasket kit	. X003539
Gasket washer	. P105740
Gasket, body or cup	. P017336
Mounting band	. H000351
SafetySignal indicator	. X004816
Wing nut	

# G160679 FRG Style A

Clamp P1007	
Dust cup/coverP1069	952
Elbow, 45° P1055	548
Elbow, 90° P1055	536
Filter, primary-Donaldson Blue™ DBA5	229
Filter, primary P549!	523
Filter, safetyP5495	530
Hump hose P1056	
Informer <sup>™</sup> indicator 25" H <sub>2</sub> 0 X0022	277
Inlet hood, metal H0003	339
Inlet hood, plastic H0000	607
Mounting band H0003	351
Mounting bands, metal H0003	351
0-ring P0173	336
Outlet band clamp P1483	
Vacuator™ Valve P103′	198

# G161006 STG-PER

Clamp, body	P100780
Clamp, cup	P100789
Dust cup	P100794
Dust cup, quick release	P107377
Dust cup, VacValve, horz	P103530
Dust cup, VacValve, vert	P104973
Elbow, 45°	P112606
Elbow, 90°	P112605
Filter, primary	
Filter, primary-Donaldson Blue™	
Filter, primary - SM	
Filter, safety	
Gasket kit	
Gasket washer	
Gasket, body or cup	P017336
Gasket, cover	P017367
Hump hose	P112608
Informer™ indicator 25" H <sub>2</sub> O	
inlet shroud	
Mounting band	
Mounting bands, metal	
Outlet band clamp	
SafetySignal indicator	
Wing nut	
3	

# G161020 STG-TUB

# G180031 FRG Style B

Cover	P783185
Elbow, 45°	P112606
Elbow, 90°	P112605
Filter, primary-Donaldson Blue™	DBA5156
Filter, primary	P781098
Filter, safety	
Hump hose	P112608
Informer™ indicator 25" H <sub>2</sub> O	X002277
Inlet hood, plastic	H001053
Mounting band	H770037
Mounting bands, metal	H770037
Outlet band clamp	P148349
Vacuator™ Valve	

# G200008 SRG

Body, lower	P117785
Clamp	P100808
Clip	
Dust cup, quick release	P107375
Elbow, 45°	
Elbow, 90°	
Filter, primary	P182038
Filter, primary-Donaldson Blue™	DBA5038
Filter, primary - SM	
Filter, safety	
Gasket washer	
Gasket, body	
Gasket, body	
Gasket, body or cup	
Gasket, QR cup	
Hump hose	
Informer™ indicator 25" H <sub>2</sub> 0	X002277
Outlet band clamp	
Rain shroud, front	P119876
Rain shroud, left side	
Rain shroud, right side	P119874
SafetySignal indicator	
Vacuator <sup>™</sup> Valve	
Wing nut	
9	

# G200013 SRG

P117785
P100808
P105738
P107375
P114313
P114314
P182040
DBA5040
P181040
P117781
P105740
P117791
P115098
P017804
P112789
P111414
X002277
P148350
P119876
P119875
P119874
X004816
P103198
P116175

# FILTER DESCRIPTIONS:

SM=Scheduled Maintenance Donaldson Blue™ = High Efficiency, Extended Service

Part Numbers with \* indicates old/cancelled model (only service parts are available).

Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style Description Service Part No.

# \*G200016 SRG

	P100808
	2105738
z dot dup, quion i didudo illilililili	2107375
Dust cup, VacValve, vert F	P105015
Filter, primary F	P181040
Filter, primary-extended life F	P182040
Filter, safety F	P117781
	P117791
Gasket kitX	(003725
Gasket washer F	2105740
Gasket, body F	P115098
Gasket, body or cup F	P017804
Nut F	P115063
Rain shield, front F	P119876
	P119874
Rain shield, right side F	P119875
SafetySignal indicatorX	(004816
Vacuator™ Valve P	103198
Wing nut F	P116175

# G200086, G200087 SSG

# G200088 (longer upper unit) SSG

Body gasket strips (two, short)	P603504
Body gasket strips (two, long)	P117791
Cover	P603716
Cover chain	P017281
Chain connector	
Dust cup	
Dust cup gasket	
Dust cup clamp	
Vacuator Valve	
Filter, primary - RadialSeal	
Filter, primary-Donaldson Blue™	
Filter, safety - RadialSeal	P609518
Lower body assembly	P603505
Rain shroud, right side	P610776
Rain shroud, front	P119876
Rain shroud, left side	P610777
Elbow, 45°	
Elbow, 90°	P114314
Hump hose	
Informer™ indicator 25" H <sub>2</sub> O	
Outlet band clamp	
•	

#### 

#### G290000 SRG

U230000 311U	
Body, lower	P115110
Clamp	P100808
Clip	P105738
Dust cup, quick release	
Elbow, 45°	P112606
Elbow, 90°	P112605
Filter, primary	
Filter, primary-Donaldson Blue™	<b>DBA5038</b>
Filter, primary - SM	P181038
Filter, safety	
Gasket washer	P105740
Gasket, body	P115096
Gasket, body	P115098
Gasket, body or cup	P017804
Gasket, QR cup	P112789
Hump hose	P112608
Informer™ indicator 25" H <sub>2</sub> O	X002277
Outlet band clamp	P148349
Rain shroud, front	P119877
Rain shroud, left side	P119875
Rain shroud, right side	P119874
SafetySignal indicator	X004816
Vacuator™ Valve	
Wing nut	P116175

# \*G290001 SRG

Wing nut P116175
Vacuator™ Valve P103198
SafetySignal indicatorX004816
Rain shield, right side P119875
Rain shield, left side P119874
Rain shield, front P119877
Gasket, body or cup P017804
Gasket, body P115098
Gasket, body P115096
Gasket washer P105740
Gasket kitX003726
Filter, safety P115070
Filter, primary-extended life P182038
Filter, primaryP181038
Dust cup, VacValve, vert P105015
Dust cup, quick release P107375
Clip
Clamp P100808
Body, upper P115107

# \*G290010 SRG

Wing nut	P116175
Vacuator™ Valve	P103198
SafetySignal indicator	X004816
Rain shield, right side	P119875
Rain shield, left side	P119874
Rain shield, front	P119877
Gasket, body or cup	P017804
Gasket, body	
Gasket, body	P115096
Gasket washer	P105740
Gasket kit	X003726
Filter, safety	P115070
Filter, primary-extended life	P182038
Filter, primary	P181038
Dust cup, VacValve, vert	P105015
Dust cup, quick release	P107375
Clip	P105738
Clamp	P100808
Body, upper	P115107

# G290012 SRG

Clamp P	100808
Clip P	105738
Dust cup, quick release P	107375
Elbow, 45° P	114313
Elbow, 90° P	114314
Filter, primary P	
Filter, primary-Donaldson Blue™ D	BA5040
Filter, primary - SM P	181040
Filter, safety P	117781
Gasket washer P	105740
Gasket, bodyP	115096
Gasket, body P	
Gasket, body or cupP	017804
Gasket, QR cupP	
Hump hoseP	
Informer™ indicator 25" H <sub>2</sub> O X	002277
Outlet band clampP	148350
Rain shroud, front P	119877
Rain shroud, left sideP	119875
Rain shroud, right side P	119874
SafetySignal indicatorX	004816
Vacuator™ Valve P	
Wing nutP	116175



Part Numbers with \* indicates old/cancelled model (only service parts are available).

Air Cleaner Part No. and Style Description Service Part No. Air Cleaner Part No. and Style
Description Service Part No.

Air Cleaner Part No. and Style
Description Service Part No.

# G290023 SRG

Clamp	P100808
Clip	P105738
Dust cup, quick release	
Elbow, 45°	P112606
Elbow, 90°	P112605
Filter, primary	
Filter, primary-Donaldson Blue™.	
Filter, primary - SM	
Filter, safety	
Gasket washer	
Gasket, body	
Gasket, body	
Gasket, body or cup	
Gasket, QR cup	
Hump hose	
Informer™ indicator 25" H <sub>2</sub> O	
Outlet band clamp	
Rain shroud, front	
Rain shroud, left side	
Rain shroud, right side	
SafetySignal indicator	
Vacuator™ Valve	
Wing nut	
VVIIIQ IIUL	1 1101/3

# G290052, G290053 SSG

0_0000_/ 0_0000	
Body gasket strips (two, long)	P115096
Body gasket strips (two, short)	P115098
Cover	P603716
Cover chain	P017281
Chain connector	P017283
Dust cup (3 on unit)	P158089
Dust cup gasket (3 on unit)	P017804
Dust cup clamp (3 on unit	P100808
Vacuator Valve (3 on unit)	P103198
Filter, primary - RadialSeal	P608306
Filter, primary-Donaldson Blue™.	DBA5152
Filter, safety - RadialSeal	P608305
Lower body assembly	P118552
Rain shroud, right side	P119874
Rain shroud, front	P119877
Rain shroud, left side	P119875
Informer <sup>™</sup> indicator 25" H <sub>2</sub> 0	X002277

# G290055 (longer upper body) SSG

Body gasket strips (two, long)	P603504 P017283 P603716 P017281 P158089 P100808 P017804 P103198 P114313 P114314 P609519 DBA5153 P609518 P111414 X002277 P609508 P148350
Outlet band clamp	P148350
Rain shroud, front Rain shroud, left side Rain shroud, right side	P610777

# G290057 SSG

Body gasket strips (two, long)	P115098 P017283 P603716 P017281 P158089 P108088 P017804 P103198 P112606 P112605 P608306 DBA5152 P608305 P112608 X002277 P115110 P148349 P119877
	P119877
Rain shroud, right side F	P119874

# X007953 PowerCore® Kit-Ford

Filter, primary - RadialSeal ...... P606122

FILTER DESCRIPTIONS:





Donaldson provides this technical reference as a collection for those who want to gain a better understanding of air filtration for engines.

Good filtration needs to be an integral part of the system to ensure the long life and proper operation of the vehicle and engine components. Today diesel engines are very sophisticated with many precision systems working together. These systems require optimum filtration to ensure their performance.

# **Section**

Air Restriction & Affects of	
Elbows and Entrance Diameters	220
Terms & Definitions	222
Filtration and Separation	
Mechanisms	
Filter Media used in Air Filtration	224
Filter Efficiency	227
Filter Cleaning	228
Safety / Secondary Filter	229
nstallation Guidelines for STB	
Strata™ System	230
Frequently Asked Questions	231
Off-road Case Study —	
PowerCore® Air Cleaner	234
Technical Paper — PowerCore®	
Filtration Technology	236
Technical Paper — Spiracle™	
Crankcase Filtration	241
Application Design Worksheets —	0.4-
Engine Air	247
Application Design Worksheet —	240
Crankcase Filtration	248

# Technical Reference Air Restriction & Affects of Elbows and Entrance Dia.



# What is Airflow Restriction?

The resistance to the flow of air through the air cleaner system; typically measured in inches of  $H_2O$  or kPa.

Restriction across the air cleaner is the difference in static pressure between the atmosphere and the outlet side of the system being measured. *Analogy: trying to pull liquid through a straw that is kinked versus one that is not. Obviously, the greater the kink, the harder it is to move liquid through.* 

Air in an intake pipe acts much the same way. Any time the direction of the air is changed, there is a resulting pressure that increases the restriction of the system. While we can't totally avoid direction changes, they should be minimized.

# Include Entire Airflow System When Calculating Initial Airflow Restriction

Any intake system design should incorporate the best protection at the lowest initial restriction possible. Because each intake component contributes to the total restriction of the system, it is recommended that the position of the air cleaner be as close to the engine as possible. It is also important to minimize the elbows, bends and long runs of duct work.

Changing the direction of the intake air movement causes restriction, which causes the engine to work harder. While this is something we

# **Conversions:**

1" H<sub>2</sub>O = 0.0361 psi = 0.249 kPa 1 cfm = 0.0283 M³/minute 1" = 25.4 mm 1 lb-ft = 1.35 N•m


like to avoid, the reality is that it cannot be avoided totally . . . but just how much is too much, and what can be done about it?

# The Affect of Elbows & Entrance Diameters on Air Cleaner System Restriction

Generally, the smoother the direction change, such as radiused tubes versus mitered bends, the lower the restriction. A 30° bend (figure 1) adds the least amount of restriction, while the 90° bend (figure 7) adds significantly more.

Remember that even straight pipe causes restriction and pipe with a cut-off blunt end will add much more than one with a flared inlet end. The slight flare makes a major difference in air turbulence, and consequently, in restriction.

Not only bends, but *length* of pipe is also a factor. For further details on the amount of restriction added to the system by piping and bends, see the next page.

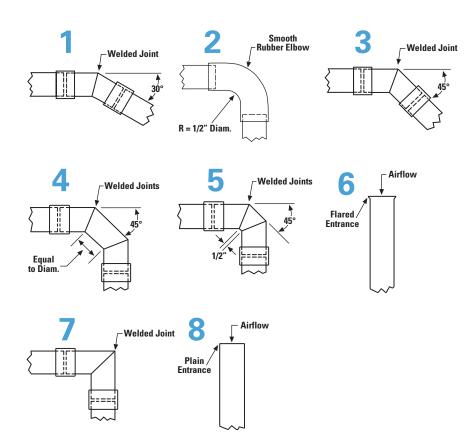




# The Goal: Minimize the number of bends AND use bends that cause the least amount of restriction

Graphs A, B, C, D and E show the amount of restriction of different piping diameters, with various types of bends (illustrations 1-8 as shown on opposite page), at various airflow levels. You will notice that the smoother the direction change, such as radiused tubes versus mitered bends, the lower the restriction. A  $30^\circ$  bend (shown in illustration 1) adds the least amount of restriction, while the  $90^\circ$  bend (shown in illustration 7) adds significantly more.

You may think it odd that straight pipe (shown in illustration 8) causes the highest amount of restriction. This is because of the blunt end. Compare the restriction curve to illustration 6, which shows a flared end. The slight flare makes a major difference in air turbulence, and consequently, in restriction.


Length of pipe is also a factor, as shown in graph E. Find the line that represents your pipe diameter at the airflow level you're running to give you a restriction figure for each foot of pipe length; then multiply by the length (in feet) of your plumbing and you have the amount of restriction added by that length of pipe. (See example below graph E.)

These curves should allow you to do a quick calculation on the plumbing you are planning for your system. Add this figure to the restriction of your air cleaner (and pre-cleaner when used) to know if your system is too restrictive for the engine. Many engine manufacturers specify restriction limits for new, "clean" engine air intake systems.

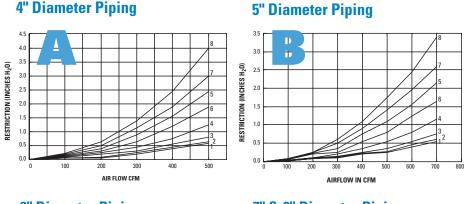

# 

# **Straight Piping of Various Diameters**

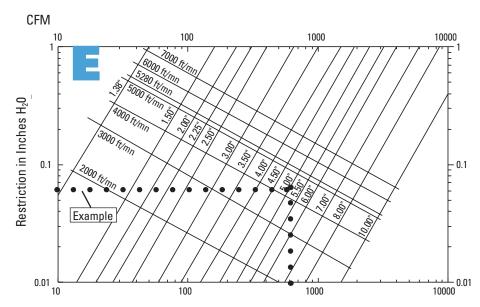

#### Example (Assuming a 600 cfm system with 5" piping)

- 1. At 600 cfm on horizontal axis, draw a line up to the 5" diameter line.
- 2. Draw a line from that intersection point over to the vertical axis to find the restriction point, in this case  $.06\ H_2O$ .
- 3. Calculate:  $.06 \times 10$  feet of piping = .6"  $H_2$ 0. This means that the 10 feet of 5" diameter piping add .6"  $H_2$ 0 of restriction to the engine air intake system.

# Technical Reference Terms & Definitions



# Air Filter/ Air Cleaner

Device which removes particles suspended in the airflow as it is drawn into the engine.

# **Airflow Requirements**

Air is critical to the operation of an engine. The amount of air required by the engine depends on the type of engine, if it has a turbocharger, and the engine horsepower (kilowatt) rating. The engine airflow requirement or specification is set by the engine manufacturer. Airflow requirements from the engine manufacturer should be requested for any changes or upgrades made to the air system.

#### **Axial Seal**

The axial seal sealing method requires a force between the air filter and air cleaner that provides enough compression on the gasket between the parts to create the seal.

#### **CFM**

CFM means cubic feet per minute. This is the unit of air flow measurement. An engine requires a flow of air for combustion.

# **Differential Pressure**

Difference in static pressure measured immediately upstream and downstream of the unit under test.

# **Dust Capacity**

Dust capacity is the amount of contaminant that will be collected on a filter before a specified restriction level (set by the engine manufacturer) is reached.

#### **Dust Concentration**

Dust concentration expresses the mass of dust in a specified volume of air. Typical ambient conditions are around 0.1 milligrams per cubic meter. Off-road conditions are around 100 milligrams per cubic meter.

#### Filter Media

Filter media is the material in the filter that removes the contaminant. Filter media in primary filters is made from cellulose and various combinations and blends of fibers combined with resins to keep the fibers together.

# **Manometer**

A manometer is a device that can be used in-field for testing of a filter's initial restriction and confirming its remaining filter life. A manometer, or clock-type gauge, can be a more accurate method of restriction measurement.

# **Overall Efficiency**

Overall efficiency is the percentage of dust that the air cleaner with a filter removes from intake air. Donaldson air cleaners, with a Donaldson air filter, have a 99.99+% overall efficiency.

# **Primary Filter**

The primary filter is the filter in the air cleaner that removes around 99.9+% of the air's dust. The air flows through the primary filter first.

# RadialSeal<sup>™</sup> Technology

RadialSeal refers to filter sealing technology that uses the urethane end cap and the cleaner's outlet tube to create the seal. This has become the preferred method of sealing over older axial seal designs.

# **Rated Air Flow**

Flow rate specified by the user or manufacturer; to be the maximum airflow required by the engine.

#### Restriction

Restriction represents the resistance to the flow of air through the air cleaner system. The static pressure is measured immediately downstream of the unit under test.

Typical units are inches of water (" $H_2O$ ) or kilopascal (kPa). Air cleaners with clean filters should have restrictions between 6-10" $H_2O$  or 0,5 and 4 kPa

1  $H_20 = 9,80665 Pa (Pascal)$ 1000 PA = 1 kPa (kilopascal) 100 Pa = 1 mbar (milibar) 10 Pa = 1 daPa (decapascal)

# **Restriction Tap**

This is the point on an air cleaner where a port exists to add a filter service indicator. Air filter service indicators measure air restriction and trip or engage depending on the airflow pressure on the inlet side of the housing.



# **Single-Stage Air Cleaner**

A single-stage air cleaner is a dust removing system for intake air with a filter and no pre-cleaner.



# Safety (Secondary) Filter

The safety (or secondary) filter is an optional filter that protects the engine during servicing of the primary filter and in case of a leak in the primary filter.

# **Multi-Stage Air Cleaner**

Air cleaner consisting of two or more stages, the first usually being a pre-cleaner followed by one or more filters. If two filters are employed, the first is called the primary filter and the second one is called the safety or secondary filter.



# **Pre-cleaner**

Device usually employing inertial or centrifugal means to remove a portion of contaminant prior to reaching the filter.



# **Test Air Flow**

Measure of quantity of air drawn through the air cleaner outlet per unit time. The flow rate shall be expressed in cubic meters per minute or cubic feet per minute (CFM).


# The Science of Air Filtration

# **Filtration & Separation Mechanisms**

Filtration and separation mechanisms are integrated into the design tools used by Donaldson personnel in the development cycle of new products.


# **Filtration Mechanisms**


# **Primary**

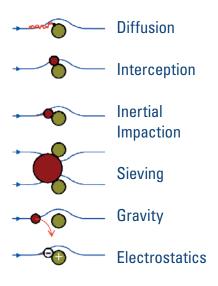

# **Separation Mechanisms**

# **Primary**

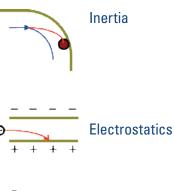

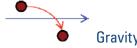

# Technical Reference Filter Media used in Air Filtration




#### Filter Media


Filtration media represents the central point of any filter design. Mastering this science is a key focus at Donaldson. While our users may not need to share this same level of understanding, some basics are always helpful. With the media representations below we hope to educate our customers on some of the more commonly used media types in this ever changing industry.

Today's engines are built to more stringent specifications and finer tolerances. Engine components require cleaner air to achieve better combustion and lower emissions. Your air intake system filter media and service practices can make the difference between engine power and engine problems.

# **Cellulose (traditional media)**

Primary dry filter media is a cellulose base material and used in the majority of our air filter applications. It is used primarily in two types of engine intake systems — single- or two-stage. Applications include offroad, on-highway trucks, buses, and underground mines.

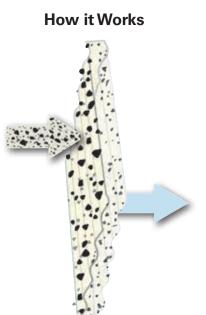

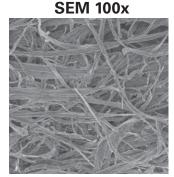




Media Image


# Ultra-Web® Nanofiber Technology

Ultra-Web® filter media is composed of a cellulose or a cellulose/synthetic substrate with nanofibers applied to one side. This media provides a durable filtration solution in the high temperature and humid environments experienced by diesel, turbine, hybrid, and other powered engines.

Ultra-Web offers a higher initial efficiency vs. standard cellulose, has very high efficiency throughout a filter's life, and provides excellent engine protection from sub-micron particulate (e.g. exhaust soot).



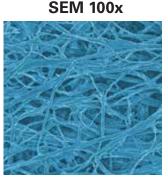

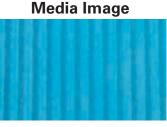


**SEM 600x** 



# **Vibration Resistant Media**

Vibration resistant filter media is a cellulose base material that offers maximum filtration protection and withstands high pulsation/vibration situations that would normally destroy other filter medias.


Applications include, but are not limited to, one, two and three cylinder engines and piston compressors.

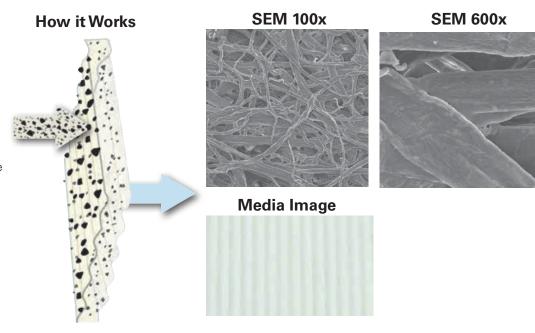

# Flame Retardant, UL-approved Media

Flame retardant/UL-approved filter media is a cellulose base material specially treated for use on vehicles operating in industrial applications where sparks or flames from backfiring through the intake system create a fire hazard.

Grain elevators and warehouses are good examples of UL-approved filter media applications.

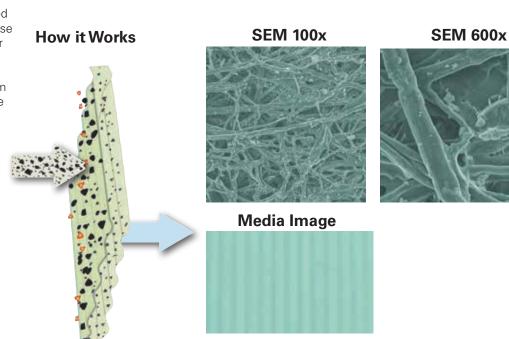


# **Technical Reference** Filter Media used in Air Filtration




# **Safety Filter Media**

Pleated safety filter media is designed for heavy duty air cleaner systems with high velocity airflow and is used in safety filters — both singleand two-stage air cleaner systems. The safety filter protects the intake system while servicing the primary filter and in the event the primary filter is damaged.

The same media may be used for ventilation panel filters to remove dust, chaff and pollen from air entering vehicle cabs in construction, agricultural, industrial and mining applications.

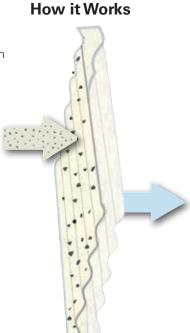




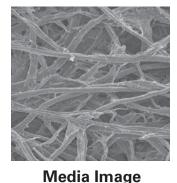




**SEM 600x** 

Non-pleated safety filter media has a synthetic base. It is primarily used in light to medium duty intake system two-stage air cleaners, e.g., Donaldson F Series or Cyclopac<sup>™</sup> type air cleaners.

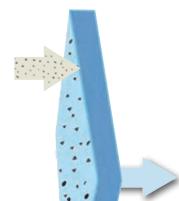

**How it Works** 

**SEM 100x** 

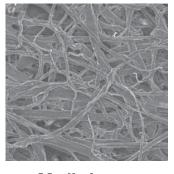

**Media Image** 



**226** • Engine Air Filtration



# Filter Efficiency: Donaldson air filters in Donaldson air cleaner housings have a 99.9+% minimum overall efficiency.

Questions often arise about the micron ratings and test procedures on air cleaners and replacement air filters. Typically, air cleaners and air filters are not assigned a "micron rating." Micron rating is a term used in liquid filtration. Air filters are evaluated for life and efficiency using an industry-wide standard (ISO 5011). The following should clarify the questions surrounding this issue.

Filter life is measured in total grams fed or in hours of lab life and is determined by testing at a standard test dust concentration of 1 g/m3 (0.028 g/ft3) for single stage air cleaners or 2 g/ m3 (0.056 g/ft3) for multistage units at either a constant or variable airflow. The end of the life testing is determined using the restriction method. When the predetermined restriction service point is reached, the test is stopped and the filter is weighed. The amount of test dust held by the filter is considered the capacity or life of the filter. The life of an air cleaner requires some additional consideration. Many air cleaners have inertial separators included in the housing. These inertial separators remove up to 98% of the dust that is fed during one of these tests. Therefore, the inertial separator efficiency must also be evaluated.

Filter efficiency is calculated by determining the increase in weight of an absolute filter (an absolute filter captures any dust that passes the test filter) located downstream of the test filter versus the weight of the total dust fed.

Table 1 details the particle size distribution of the standard test dust used for life and efficiency evaluations (ref. ISO 12103-1).

Table 2 lists common contaminants found in field environments, as well as their particle size ranges. Although field conditions vary from one location to the next and from time to time, this test allows for a standard means of comparison and a laboratory method of evaluating air cleaner life and efficiency.

# Table 1 — Particle Size Distribution by Weight %


Fine test dust is used for testing primary dry air cleaners that are most often used in on-road and automotive applications, and coarse dust is used for multi-stage air cleaners that typically use inertial separators and operate in very dusty applications.

Particle Size	Wei	Weight %*	
Range (in microns)	Fine (on-road)	Coarse (off-road)	
0 - 5 μ	39 %	12 %	
5 - 10 μ	18 %	12 %	
10 - 20 μ	16 %	14 %	
20 - 40 μ	18 %	23 %	
40 - 80 μ	9 %	30 %	
80 - 200 μ	0%	9 %	
* Percentage of weight can vary by ±2-3 % in each particle			



range

**Table 2 — Common Contaminants and Micron Sizes** 

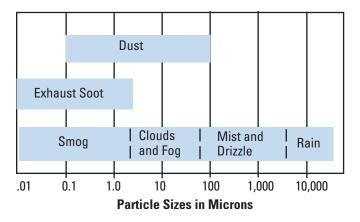

Reference: FMC TSB 04-03

# Technical Reference Filter Cleaning



# **Filter Cleaning:**

Donaldson recommends servicing air filters by monitoring the airflow restriction levels in the intake system.

Some vehicle owners and maintenance supervisors, concerned with lowering their operating costs, will clean and reuse their heavy-duty air filters. Before you decide whether cleaning or washing of air filters is appropriate for your vehicle or fleet, please consider these factors:

- Heavy-duty air filtration manufacturers do not recommend any type of cleaning process be used on their products. Donaldson, like other heavy duty air filter manufacturers, does not warrant the air filter once it has been cleaned.
- Filter dirt holding capacity is reduced 20 40% with each cleaning.
- Rather than cleaning or reusing filters, consider upgrading to an extended service filter (i.e., Donaldson Blue™ air filters) and service the filter by restriction.
- There is a risk of dirt reaching the clean side
   of the filter while cleaning, plus possible filter
   damage from high pressure water or compressed
   air, making cleaning or washing a gamble. Be sure
   to add the potential cost or risk of filter damage to
   the cost of cleaning when determining the value
   of a filter cleaning process.



- Damaged filters should not be cleaned or reused. If a filter is damaged in service, investigate the source of damage and make corrections to avoid future damage.
- Reusing a cleaned heavy-duty filter increases the likelihood of improper air cleaner servicing because of the shortened service life. Each time the air intake system is serviced, it is exposed to the chance of contamination.
- Never attempt to clean a safety filter. Replace it after three primary filter change outs.

Reference: FMC Technical Service Bulletin 89-4R2.



# What is the Purpose of a Safety Filter?



Safety filter . . . Secondary element . . . Inner filter . . . Spare filter? These filters go by many names . . .

At Donaldson we prefer to call it a "safety" filter A safety filter backs up the primary (main) filter and protects the engine while the primary filter is out of the housing during servicing. The engine should never be run with only a safety filter in place.

The safety is NOT a spare filter! Its purpose is to protect the engine if something goes wrong with the primary (main) filter. Until then, it quietly does its job.

Compared to a primary filter, the safety filter is more open for lower restriction and is less efficient. A safety filter does not increase the overall operating efficiency of an air cleaner.

A safety filter is there to protect the engine against hidden damage to a primary filter — damage from cleaning, mis-installation, a "will-fit" that doesn't quite fit, or the installation of the wrong size filter. A safety filter is never to be used as a "spare" filter.



# Switching from a Scheduled Maintenance Air Filter to an Extended Service Filter?

Interested in switching your scheduled maintenance air filter to Donaldson Blue™ extended service air filter?

- Use only Donaldson Blue<sup>™</sup> Air Filters
- Maintain accurate records of current competitive cellulose media change intervals
- Keep accurate track of miles driven with Donaldson Blue<sup>™</sup> air filters and maintenance records
- Provide filter for inspection
- Rely on your filter service indicator to tell you when to change out your primary filter.
- Standard Donaldson warranty terms and conditions apply



# Technical Reference Installation Guidelines for STB Strata™ System



# **Installation Guidelines for STB Strata System**

# Positioning the Strata™ Pre-Cleaner

- It is usually best to have the precleaner positioned above the hood of the vehicle so that cleaner air (above the dust cloud) can be drawn into the unit.
- The pre-cleaner section should be below the exhaust stack. Be careful NOT to mount the Strata™ precleaning section in such a way that it draws in exhaust gases from the exhaust stack.

If the pre-cleaner cannot be positioned according to the above guidelines, consider adding an extension to put the intake point at a higher level.

- The extension should be added above the Strata tube section, below the inlet hood.
- Do NOT mount the Strata precleaner on top of the extension as its weight would make the arrangement top heavy and unstable.

# **Scavenge Hose**

The scavenge line between the air cleaner and the exhaust ejector should be kept as short and as straight as possible. The ideal scavenge hose length for a Strata system is under five feet and should never be longer than 10 feet.

Minimize bends and be sure that the hose is supported properly. (Unsupported lengths of hose should not exceed five feet.) Bend radii of the hose should not be less than 15 inches. Minimize the number of 90° bends — preferably two or fewer.

Donaldson recommends three-ply silicone hose for the scavenge line. All Donaldson hose is supplied in 3-foot lengths (do not use flexible metal nor rigid tubing).

STB	Scavenge	Hose	Hose
Model	Outlet OD	Part No	ID
B160071	2.0"	P171381	2.0"

# Connecting Scavenge Hose to Pre-cleaner

A check valve is built into the Strata Pre-cleaner. Connect the scavenge hose directly to the outlet tube with a clamp. A Donaldson lined hose clamp is recommended (see Intake Accessories section).

# **Connecting Hose to Ejector**

When connecting the scavenge hose to the exhaust ejector, leave 2" (52 mm) between the end of the hose and the body of the ejector.


# **Exhaust Ejectors**

See the accessories section for details on our exhaust ejector product offering.

Do not add or create any additional back pressure downstream (e.g., at the exhaust outlet) of the Strata precleaner. Doing so may cause exhaust back flow to the pre-cleaner.

Examples of what NOT to do: mount a spark arrestor on top of the ejector, or operate with a stuck or frozen rain cap on the exhaust ejector.

# **How the Strata™ System Works**

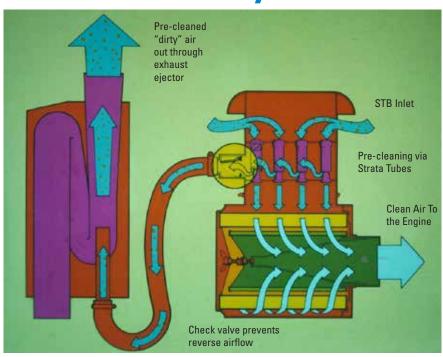

Note: Scavenge Hose, Exhaust Ejectors, Clamps Sold Separately



# Technical Reference Frequently Asked Questions

# Q: Why am I experiencing short air filter life?

A: The amount of dirt an air filter can hold before servicing depends on many variables. The environment must be considered (severe dust, soot, and moisture) as it is crucial to know how much contaminant reaches the filter. This depends on the severity of the environment and whether the air cleaner is a one- or two-stage design. Another factor is the size of the air cleaner and filter relative to the airflow requirement. How long a filter lasts is largely a function of the Original Equipment Manufacturer's intake design. Reference FMC TSB 89-3R3 and 06-2 for further details.

# Q: What is the micron rating of my air filter?

A: Typically, air cleaners and air filters are not assigned a "micron rating." Micron rating is a term used in liquid filtration. Air filters are evaluated for efficiency using an industry-wide standard ISO 5011. Efficiency is the percentage of contaminant that a filter removes from the intake air relative to its capacity.

Reference FMC TSB 04-3 for further details.

# Q: What do inches or millimeters of H<sub>2</sub>O have to do with an air cleaner?

A: In an intake filtration system the resistance to airflow is called restriction. Restriction is typically measured in units called inches or millimeters of H2O vacuum, and is defined as the difference in static pressure between the atmosphere and the outlet side of the system being measured. The higher the restriction the harder an engine has to work to obtain clean air for combustion. Engine manufacturers specify a restriction level at which the air filter should be serviced. Reference FMC TSB 89-3R3 for further details.

# Q: Why do some air filters require U.L. approval?

A: Some engine air filters utilize flame retardant filter media to meet UL safety requirements. The U.L. rating covers fire safety and backfire resistance aspects of industrial trucks with internal-combustion engines, such as tractors, platform-lift trucks, fork-lift trucks, and other specialized vehicles for industrial use. These requirements do not cover other possible safety aspects of such equipment. Additional information can be found in UL 558 specification.

# Q: Can you judge air filter service life by visual inspection?


A: Visual inspection is not a recommended method for determining an air filter's service condition. Measuring intake system restriction is the most reliable determination of filter life. Service by restriction allows the filter to remain in service until the maximum allowable restriction limit for the application is reached. Various restriction indicating devices are available for this purpose.

Reference FMC TSB 89-3R3 for further details.

# Q: Can I replace my axial seal filter with the new RadialSeal™ design?

A: Axial seal and RadialSeal air filters are designed to seal differently. "Radial" sealing design filters cannot be fitted into a housing design for axial sealing replacement filters without the use of a conversion kit.

Reference FMC TSB 97-3R2 for further details.

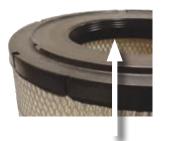

RadialSeal<sup>™</sup> Technology

RadialSeal filters slip easily on and off the outlet tube during installation and service. This design eliminated the separate gaskets used with metal endcap filters.



**Axial Seal** 

Axial seal style filter has a metal endcap with an attached gasket. This design requires housing cover pressure on a gasket to create the critical seal.

# Q: Can heavy duty air filters be cleaned or reused?

A: Most heavy duty air filter manufacturers do not recommend any type of cleaning process to be used on their products. Furthermore, they do not warrant their product once it has been cleaned.

Donaldson does not recommend cleaning filters. Cleaning a filter in any way, will void the filter warranty. Reference FMC TSB 89-4R2 for further details.

# Technical Reference Frequently Asked Questions



# Q: Will more frequent servicing of my air cleaner extend my engines life?

A: Just the opposite, over-servicing will cause increased service cost, time and material and dust contamination of the engine due to:

- 1. Filter damage, due to excessive handling,
- 2. Improper installation of filter,
- 3. Increased initial inefficiencies.

  Reference FMC TSB 89-3R3 for further details.

# Q: What is a scavenged intake system?

A: Some intake system pre-cleaners are inertial separating devices that require a scavenge flow of air to function properly. The scavenge flow is required to expel the inertially separated dust particles from the pre-cleaner assembly. Scavenge flow is typically provided by a vacuum from an exhaust ejector that may be designed in as a function of the exhaust system muffler or as an add-on exhaust ejector stack.

Scavenged systems are typically specified on severe-duty applications to increase airflow and extend primary filter life.

# Q: What's the best type of pre-cleaner for a given application?

A: Intake system pre-cleaners are typically inertial separating devices intended to work in conjunction with the air cleaner to clean intake air prior to the final filtration stage provided by the filter. Separating some of the contamination from the intake air prior to reaching the filter provides an increase in filter service life. The type of pre-cleaner recommended for an application typically will depend on the severity of the environment. To maximize filter service life, choose the pre-cleaner design that provides the best efficiency within space and weight limits of the application.

# Q: When should I service an air filter?

A: The filter in any air cleaner should be serviced when the maximum allowable restriction, established by the engine manufacturer, has been reached. The filter should not be serviced on the basis of visual observation because this will generally lead to over-servicing.

Over-servicing will cause increased service cost, both time and material, and may cause dust contamination of the engine due to:

- 1. Filter damage from excessive handling,
- 2. Increased chance of improper installation of filter.
- 3. Increased initial inefficiencies.

#### **Achieving Maximum Air Filter Efficiency**

The efficiency of an air filter increases as it is used. As soon as the air filter is put into operation, it begins to remove harmful dust particles. As these particles accumulate throughout the filter media, the microscopic openings in the media become obstructed. This on-going reduction in the size of the openings helps the filter stop increasingly finer dust particles, thus resulting in a more efficient filter. As the filter continues to plug with contamination, the restriction to air flow will increase. Most engine manufacturers establish a maximum degree of vacuum in the air induction system that the engine can tolerate and still operate efficiently.

#### **Measuring Restriction in Air Cleaners**

As a dry air cleaner filter becomes loaded with dust, the vacuum on the "engine side" of the air cleaner (at the air cleaner outlet) increases. This vacuum is generally measured as restriction in " $\rm H_2O$  or Kpa.

The engine manufacturer often places a maximum allowable limit on the amount of restriction the engine can withstand without loss of performance before the filter must be serviced.

Mechanical gauges, warning devices, indicators, and water manometers are available to inform the operator when the air cleaner restriction reaches this recommendation limit. These gauges and devices are generally reliable, but the water manometer is the most accurate and dependable.

To use the manometer, hold vertically and fill both legs approximately half full with water. One of the upper ends is connected to the restriction tap on the outlet side of the air cleaner by means of a flexible hose. The other end is left open to atmosphere. With the manometer held vertically and the engine drawing maximum air, the difference in the height of the water columns in the two legs measured in inches — is the air cleaner restriction.



A restriction indicator's "lock-up" restriction level is

generally marked on the indicator itself. A quick method to check a visual indicator is to remove it, wipe the base clean, then suck on the indicator with your mouth. If the indicator locks up, it is operational, if not, replace indicator. A more accurate method is to check the calibration against a water manometer.



# Technical Reference Frequently Asked Questions

# Q: Why Service?

A: Proper air cleaner servicing will result in maximum engine protection against the ravages of dust. Proper servicing can also save you time and money by increasing filter life and efficiency.

Two of the most common servicing problems are:

1) Over-servicing — new filters increase in efficiency as dust builds up on the media. DON'T BE FOOLED by filter appearance, it should look dirty. By using proper filter restriction measurement tools you will use the full life of the filter at maximum efficiency.

2) Improper servicing — your engine is highly vulnerable to abrasive dust contaminants during the servicing process. The most common cause of engine damage is due to careless servicing procedures. By following the steps shown in this catalog, you can avoid unnecessary dust contamination to the engine.

# Q: Why Would a Heavy-Duty Diesel Engine Air Filter Collapse

A: Most reputable filter manufacturers design their air filters to operate well beyond the recommended engine intake restriction service points. In fact, there is usually a safety factor of at least 2 – 3 times over the stated service point. However, there are circumstances when filter collapse can take place. When an engine is operating with a collapsed filter, there is a good chance that unfiltered air is getting to it, which could result in costly repairs. Most of the time poor maintenance is the cause, but there are some operating conditions to consider as well.

Collapse of a heavy-duty air filter is defined as a permanent deformation of the unit after airflow is removed. This occurs when the pressure drop across the filter exceeds the design limit of the device. Because of the safety factors built-in when the filter is engineered, this is an unusual event and is normally preventable.

A common cause of filter collapse is not paying attention to the service point recommended by the engine manufacturer. Diesel engines typically have an intake filter service point of 20-30"  $\rm H_2O$  (5-7.5 kPa), depending on the manufacturer. As stated above, exceeding this by an incremental amount won't cause the filter to collapse, as they are designed to withstand



a much higher level of restriction. However, because filters tend to load very quickly after a certain point, not servicing them soon after the maximum allowable restriction is reached (as recommended by the engine manufacturer) can end up causing a very high level of pressure drop across the filter, and may result in a collapse condition. The best way to avoid this is to install and monitor a restriction measuring device (gauge, pop-up indicator or dash light), and replace the filter when it indicates the service point has been reached.

Another possibility of filter collapse is sub-standard filter construction or remanufacture. Generally, obtaining air filters from a reputable manufacturer will avoid this issue. Quality heavy-duty air filters are made with materials that can withstand high levels of pressure drop and resist collapse, while sub-standard filters may not. It is also important to inspect all filters before installation. Dented liners or end caps may result in a loss of structural integrity and filter collapse.

Damage may be present but not very visible. If the filter shows any sign of damage, don't use it. This is especially critical when using cleaned filters. Couple the possibility of damaged filters with weakened media (if it were washed or cleaned with too high of a pressure) and the filter may have a much lower resistance to collapse. Operating conditions should be considered as well. For example, high levels of soot (generally from diesel engine exhaust) can plug an air filter rapidly, which may shorten the life of a filter dramatically. If a restriction indicating device isn't monitored closely, an extremely high pressure drop across the filter could occur, which could cause it to collapse. If high levels of soot are experienced, the cause of the ingestion should be investigated and, if possible, corrected. These include (but are not limited to) proximity of the intake to the exhaust; exhaust leaks near the air intake; vehicles operating or idling in close quarters; and operating in certain areas where exhaust concentrations are high.

Extremely high levels of water ingestion can be a concern, too. Although most filters can take a certain amount of moisture with no problems, large amounts of water can weaken and plug the filter media long enough to cause collapse. However, this is an unusual situation because most vehicles that are likely to be used in these types of conditions have a water separation device installed. One possibile cause of excessive water ingestion not often accounted for is the introduction of high levels of moisture during the washing of the vehicle. The best practice is to ensure the engine is not operating during washing and water is not sprayed directly into the engine air intake.

In summary, following the engine manufacturer's service recommendations, using quality undamaged products and using a restriction indicating device are the best practices to prevent air filter collapse. If a filter collapse occurs, it is important to ascertain whether lack of maintenance caused the problem or if the vehicle is used in conditions that dramatically shorten filter life, and then take corrective action to keep it from happening again.

# Technical Reference Off-road PowerCore® Case Study — Australia





**Off-Road Case Study** 

# **PowerCore® Air Cleaner**

Despite heavy concentrations of dust and soot, the Donaldson PowerCore® Air Cleaner helped keep a dozer in the field when it was most needed.



As respected members of the Country Fire Association (CFA) Frank Keath of Keaths Excavations along with sons Colin, Andrew and Graham and the company's service mechanic Andrew, were at the forefront of beating back bush fires that recently threatened properties around Eildon and neighbouring Marysville. At the height of the bushfires, Keaths Excavations deployed each of their units including three Hitachi Excavators, two Fiat Dozers, a Caterpillar Grader, a Cat Excavator and two smaller Backhoes to help build firebreaks and retainers.

Frank recalls that the conditions at the height of the fires in the Marysville area were "the most extreme conditions I have ever faced" with the air full of engine-arresting dust and soot.

"The soot was like thick layers of Talcum powder," he says.

Despite these conditions, Frank praises the recently fitted Donaldson D100031 PowerCore® Air Cleaner as helping keep his equipment in the field when it was needed the most

Given that it can take less than half a cup of dust to destroy an engine, having an efficient air filtration system is a necessity in hot and dusty conditions. In such conditions, the engine's ability to breathe and provide optimal performance can be compromised.

In Frank's experience with the PowerCore unit, he found that the PowerCore filter lasted substantially longer than other units with which he has had experience.

"The PowerCore achieved 150 hours in the field. That may seem quite small but due to the extreme nature of the conditions and the sheer amount of smoke, dust and soot in the air, the PowerCore unit far outlasted traditional filters which struggled to provide 50 hours worth of life," says Frank.



The D100031 PowerCore air cleaner.







The PowerCore unit was fitted to a Fiat FD14E Dozer after consultation with Hitachi Aftermarket Parts Specialist George Calyk and Donaldson Austrailian Territory Manager, Tony Cooper.

Keaths Excavations fitted the unit themselves at their newly opened service workshop at Yarck. The unit was mounted vertically in the Dozer's engine housing. The Keaths Excavations team chose to install an aluminum reflector plate between the engine and the PowerCore unit to protect the unit from any radiant heat from the engine. Servicing the PowerCore unit is straightforward as the four retaining clips on top of the unit remain accessible and away from heat allowing for easy removal of the PowerCore filter.

PowerCore filters feature a patented technology that provides maximum filter efficiency with contaminant holding capacity greater than that of traditional cellulose filters. PowerCore filters are also available with Donaldson's patented nanofiber Ultra-Web® technology which provides even greater performance and protection. The performance abilities of the filter media are augmented by the design of the PowerCore unit itself which features a unique, built-in, pre-cleaning section that removes up to 98.9% of heavy contaminant before it hits the filter. This makes the PowerCore unit the perfect solution for high dust environments or environments where fine contaminant can pose a risk to engine performance.



PSD PowerCore air cleaner line was designed with the idea that most newer machinery has less available space under the engine cowling or hood than older equipment. By combining compact sizing with multiple options for mounting the unit horizontally or vertically, the PSD product offering becomes a perfect retrofit solution for



equipment that needs to be in peak performance over extended periods.

In Frank Keath's opinion, the PowerCore unit more than did its job and he remains impressed with the performance of the unit as the clean up in the Marysville area continues. When not fighting fires, you'll find Frank, Colin, Graham, and the two Andrews of Keaths Excavations, a Hitachi Dealership, at their service centre on the Maroondah Highway, Yarck, Victoria. Keaths Excavations specialize in providing earthmoving, landscaping, construction and excavation equipment and associated services including off road vehicle maintenance for a wide range of heavy-duty equipment. The team can be contacted on (03) 5773 4242.



PowerCore aftermarket filters are quick to replace making service a breeze.



**Donaldson Company, Inc.** PO Box 1299 Minneapolis, MN 55440-1299

www.donaldsonfilters.com www.donaldson.com

United States Canada Mexico Latin America

Caribbean Brazil Europe South Africa South Fast Asia **Greater China** Japan Australia India

Brochure No. F113027 (02/10) © 2010 Donaldson Company, Inc. All rights reserved. Printed in the U.S.A. Donaldson Company, Inc. reserves the right to change or discontinue any model or specification at any time and without notice

# Technical Reference Technical Paper — PowerCore® Filtration Technology



# Methods for Diesel Engine Air Intake and Filtration System Size Reductions

Dan Adamek, Director-Engine Air Filtration Development September, 2008



# TECHNICAL BULLETIN

#### **Current Situation**

Innovative vehicle designs and increased environmental awareness call for new engineering solutions for on-road and off-road vehicle components. Diesel engine air intake suppliers are facing increasing challenges as vehicle manufacturers demand higher performance in a smaller volume while minimizing life-cycle costs. This paper will discuss the market drivers behind these changes, air filtration solutions that have worked in the past, and a new filter technology that promises to better meet these increasing challenges.

Many factors are affecting the changing demands on diesel engine air intake systems. One of the most prominent changes in the market is the various emissions standards being adopted around the world (Fig. 1).

These new requirements not only increase the space consumed by advanced emission components, but also impact other vehicle parameters. For example, current and future diesel engine designs are placing more emphasis on lower restrictions in the air intake system, as higher restrictions can increase the emission levels being measured in the engine exhaust.<sup>1</sup>

These air intake system pressure losses have long been considered during vehicle and component design to minimize the performance and fuel efficiency penalty that these restrictions incur. Although fuel efficiency changes due to diesel engine intake restriction changes appear small on a percentage basis (<1%ii), the annual additional fuel usage with a sub-optimal air filter can easily exceed the original purchase price of the filter. With continued increases in fuel costs, efforts to squeeze additional fuel economy out of vehicles have resulted in additional time and expenses being allotted to lowering these intake losses. These fuel savings also translate into reduced CO, emissions. In addition to benefiting our environment, CO, reductions will result in additional financial benefits in regions where taxation is based on vehicles emissions.

Many manufacturers are placing more emphasis on safety, and improved visibility for the vehicle operator is one part of those efforts. This has resulted, in some cases, in the lowering of engine compartment hoods in order to improve the operators' sightlines. The effect of lowering the vehicles' engine compartment hoods has been an additional reduction in space for components such as the air intake systems.

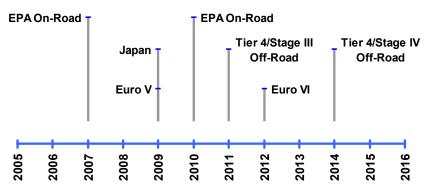


Figure 1. Diesel Engine Emission Regulation Target Dates



# Technical Paper — PowerCore® Filtration Technology

In the search to improve the value provided by vehicle components, air intake system life cycle costs continue to be examined. This can often take the form of either increasing the air filter's life at equal cost, or reducing the air filter cost at equivalent life. In some cases, customers are looking for ways to reconfigure the air intake system layout to reduce cost. In on-highway trucks for example, behind the cab air intake systems have been typical for some regions because of the under hood space constraints. Size reductions in the system can allow for alternate configuration such as a frontal intake system. This can shorten the ductwork thereby reducing costs and also utilize the engine compartment to mitigate noise transmission through the inlet.

These market drivers are challenging air intake system providers to deliver products that simultaneously improve multiple system properties that have historically been engineering trade-offs.

# **Engineering Approach**

Design of diesel engine air intake systems requires the integration of many technologies and the balancing of many factors. Figure 2 is a simple graphic illustrating how the primary value measurements of a system can be affected by design changes in other system properties.

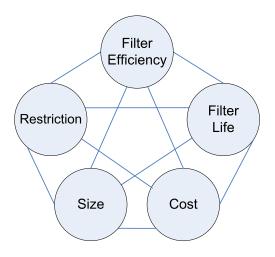


Figure 2. Air Filter Primary Design Tradeoff Relationships

At a given technology level, each property can be improved through compromises in another property. For example, size can be reduced by reducing filter efficiency, reducing filter life, or increasing filter pressure loss. Advancements in technology are required

to achieve simultaneous improvement in multiple parameters. These technology advancements can take several forms, from simply improving via design and materials expertise, to the utilization of advanced tools such as computation fluid dynamics (CFD), to the development of breakthrough configurations (Fig. 3).

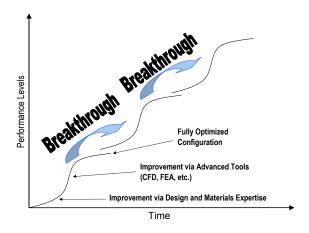


Figure 3. Typical performance advancement means and rates

Other system requirements need to be addressed during the design process as well, and can include items such as noise attenuation, elevated temperature operation, chemical resistance, durability under vibration and shock, and many others.

The ability of a supplier to satisfy these diverse air intake system requirements is perhaps most determined by the design and performance of the air filter. The air filter removes contaminant from the air in order to protect the engine from damaging wear. Engine wear rates have been calculated to decrease by a factor of 10 when high efficiency air filters are used in place of standard efficiency filters.<sup>iii</sup>

High efficiency levels have been achieved through the optimization of the fibrous structure of the filter media. The use of nanofibers on the media surface (Fig. 4) has allowed the thickness and density of the media to be reduced thereby decreasing the pressure losses through the media and the amount of material used. These nanofibers also show very high initial efficiency compared to standard cellulose media which only achieves its targeted efficiency level after it has built up a sufficient dust cake on its surface.

# Technical Reference Technical Paper — PowerCore® Filtration Technology



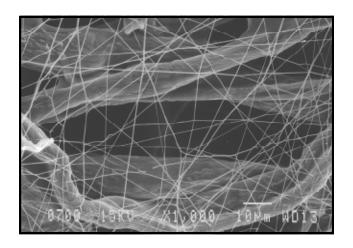


Figure 4. Scanning Electron Microscope photograph of Donaldson's Ultra-Web® nanofiber filter technology

The build-up of contaminant on the filter media causes pressure losses to increase over time, until it reaches a magnitude which is determined to be the maximum allowable by the engine. This filter life is desired to be as long as possible to minimize the cost of filter replacement. The ability of an air filter to load slowly, that is have low pressure loss for an extended period of time, is also important because the longer an engine operates at low restriction, the lower the average fuel consumption that can be achieved.

# **Product Solutions**

Cylindrical filters have been the technology of choice in the past. The radial seal version of this type of filter was an advancement that occurred in the 1980's that enabled the transition from metal air cleaner housings to polymeric housings, thereby greatly reducing product costs and improving product quality.



Figure 5. Conventional filters (axial and radial seal).

A breakthrough alternative to cylindrical filters for diesel engine air intake systems was introduced in the 1990's. Donaldson's PowerCore filter demonstrates an axial flow arrangement that allows the airflow to pass straight through the filter without the 90° change in direction that is required for cylindrical filter configurations. This simplified airflow path decreases the potential pressure losses within the air intake system.

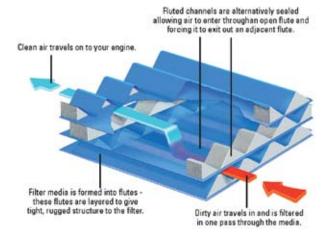


Figure 6. Schematic representation of airflow through axial flow PowerCore air filter



Figure 7. Example of an axial flow PowerCore intake system.



While axial flow style air filters have proven their value to vehicle manufactures, very recent advances in this style of filter have achieved even higher levels of performance. PowerCore G2 is an advanced, next generation axial flow filter that has optimized the internal configuration of the filter such that every geometric feature within the filter has been reconfigured to reduce pressure losses and increase filter life (Fig. 8).

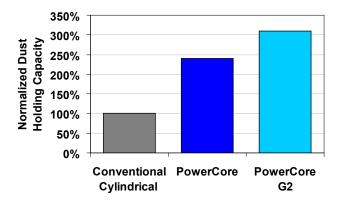


Figure 8. Normalized ISO fine dust capacity for equal sized air filters. Performance may vary with geometry and operating conditions.

One challenge in air filter design and particularly in axial style filters is the effort to minimize the media area that is unutilized or underutilized due to masking. PowerCore G2 reduces media masking when compared to previous axial flow air filters. Because increases in effective media area decrease the velocity though media, it has the dual effect of decreasing the pressure loss across the media and reducing the loading per unit area. Therefore, the increase in life is higher (Fig. 9) than the increase in effective media area.

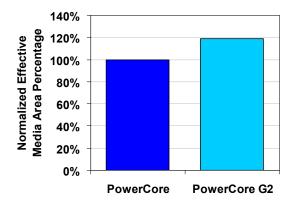


Figure 9. Normalized effective media area as a percentage of total air filter media area. Performance may vary with geometry and operating conditions.

Additionally, PowerCore G2 has been designed to allow for increased total media area to be packaged into a filter through a unique media forming process. This can lead to increased filter life when combined with the correct filter channel configurations. (Fig. 10)

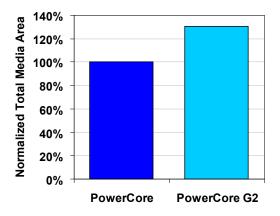


Figure 10. Normalized total media area for equal size air filters. Performance may vary with geometry and operating conditions.

Channel pressure losses can be lowered through increasing the air filter's channel size. This also decreases the amount of media, however, so the application requirements need to be factored into the choice of channel size.

Increases in channel space can also be obtained by utilizing thin filter media. Nanofiber laminates allow for thinner media because particulate efficiency increases as media fiber size decreases.

The effect of these changes and others on filtration performance has been theoretically modeled using fluid mechanics and advanced filtration theory. The use of advanced modeling tools has allowed optimal configurations to be determined by comparison of the performance of millions of unique axial flow filter configurations. Prototypes of these selected configurations have been tested and validated against the theoretical model. Figure 11 shows an example of the restriction increase versus dust loading of an advanced axial flow filter and a previously available axial flow filter.

# **Technical Reference**

# Technical Paper — PowerCore® Filtration Technology



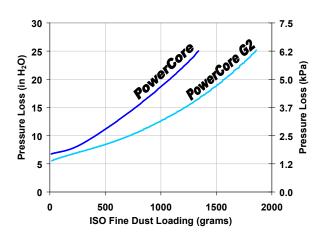


Figure 11. Example ISO Fine Dust Loading for Equal Size Element at Constant Flow rate. Performance may vary with geometry and operating conditions.

While this example illustrates achieving improved life for a constant volume, it would be a straightforward matter to provide an air filter with equal life, but smaller volume utilizing these technology advancements. Another benefit that can be seen in Figure 11 is that PowerCore G2 can provide a lower pressure loss throughout the loading period. This lower weighted average pressure loss translates into potential increased fuel efficiency and a more desirable condition for emission performance. However, in applications where initial pressure loss is less of a concern, even greater air filter life than shown in Figure 11 may be obtained with PowerCore G2.

PowerCore G2 has been developed as a family of air filtration solutions. By varying the parameters described above, greater performance can be achieved and therefore greater value can be provided to diesel engine and vehicle manufacturers. This technology breakthrough has allowed for simultaneous improvement in multiple system properties such as restriction, size, and life, and provides a variety of configuration choices in order to best match performance to customer needs.

# Conclusion

Continued demand for further reductions in air intake system size and restriction has resulted in innovative solutions such as PowerCore G2. For given filter life and efficiency targets, the PowerCore G2 configurations can result in a 30% reduction in size from previous axial flow filters and a 60% reduction in size from cylindrical filters (Figures 12 and 13). Additionally, improvements in restriction and air filter life are now possible with PowerCore G2.

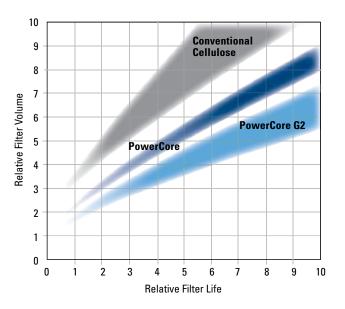


Figure 12. Relative air filter volume versus life. Performance may vary with geometry and operating conditions.



Figure 13. Photographic comparison of equivalent performance air filters of varying technology level.

#### **REFERENCES**

- i Jaaskelainen, Hannu, "Emission Effect of Engine Faults and Service", www.dieselnet.com/tech/emi\_fault.html.
- ii Deierlein, Bob, "Managing Fuel Consumption", Fleet Equipment, Dec. 2001.
- iii Barris, Marty A., "Total Filtration™: The Influence of Filter Selection on Engine Wear, Emissions, and Performance", SAE 952557, SAE Fuels and Lubricants Meeting & Exposition, October 16-19, 1995.






### Author:

Veli Kalayci Spiracle™ Systems Team Leader

# FIGURE 1 EMISSIONS CONTRIBUTIONS TAILPIPE & CRANKCASE

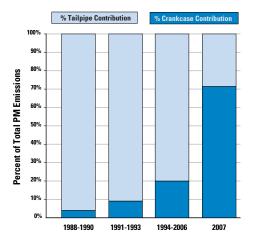

Crankcase emissions levels in diesel engines have remained relatively low compared to tailpipe emissions until 2006. On newer engines, as emissions from tailpipes reduce, crankcase emissions become a greater share of total allowable particulate matter (PM) emissions.

**Technical Article** 

# Spiracle<sup>™</sup> Crankcase Filtration Technology

For more than 30 years, a focus on environmental air improvement has led original equipment manufacturers (OEMs) to require their manufacturing business partners to design filtration systems that reduce the amount of crankcase blow-by aerosols vented into the atmosphere from diesel engines. This push to reduce diesel emissions and other particulate matter (PM) contaminants from the atmosphere began in the 1970s with the passing of the U.S. Environmental Protection Agency (EPA) Clean Air Act, which regulated on-road diesel emissions and was later amended, in 1990, to include regulations for off-road diesel vehicles. These standards set maximum allowable levels of emissions for new diesel engines and diesel fuel that have been incrementally reducing emissions levels since 1988.

With the significant technology advancements achieved in curbing the exhaust emissions from the engine tailpipe, the relative contribution of the emissions from the crankcase blow-by aerosols started to become an increasing contributor in total engine emissions. Figure 1 shows the increasing relative contribution of crankcase emissions for on-road engines through 2007.

As these regulations evolved in the U.S. and around the world, Donaldson Company, a leading manufacturer of air and liquid filtration systems and replacement parts, led the industry in the development of crankcase filtration technologies with the Spiracle™ Crankcase Filtration Systems (CFS). The engineering advancements of Spiracle™ CFS have continually been used to help meet the EPA's stringent regulatory

requirements by providing high efficiency filtration solutions to OEMs and fleet operators around the world.



Filtration Technology by Donaldson

# Technical Reference Technical Paper — Spiracle™ Crankcase Filtration



## Crankcase Ventilation Filtration Systems

Crankcase ventilation filtration systems are designed to be either "open" or "closed" systems.

Open crankcase ventilation filtration systems (OCV) filter engine aerosols, including oil and soot, along with any bulk oil coming out of the valve cover or crankcase vent and discharges filtered air into the atmosphere.

In closed crankcase ventilation filtration systems (CCV), crankcase blow-by aerosols, including oil and soot, are filtered and the filtered crankcase flow is directed back to the intake manifold or to the turbo compressor. Using high efficiency closed crankcase filtration systems, the performance of intake filters, turbochargers, aftercoolers and exhaust system components can be maintained over extended engine usage.

#### Crankcase Emissions from Diesel Engines and Emission Control

Crankcase emissions are created during the combustion process of reciprocating engines. The primary source of crankcase emissions are combustion gases and particulate matter (PM) that escape past the piston rings and enter the crankcase. Other sources of crankcase emissions include turbocharger shaft seal leaks, valve guides and general movement of parts. These "blow-by" gases must be vented through a tube into the atmosphere to avoid pressurizing and damaging components of the engine. After mixing with oil mists in the crankcase, the gases, PM, and oil aerosols either coalesce and drop out of the vent tube onto the ground, or enter into the atmosphere as pollutants.

Crankcase emissions vary greatly depending on a number of factors. Engine rating, displacement, engine operating conditions such as load, speed and the age of the engine all influence the blow-by volumetric flow rate, mass output rate and particle size

distribution. Just as important, the crankcase emissions can vary depending on the engine design especially the tolerances, materials, turbocharger, wear factors and operating conditions can impact the amount of blow-by escaping past the piston rings.

Donaldson has developed engine blow-by characterization methods and tools as part of its standard range of capabilities for crankcase filtration technology and product development. One such piece of equipment is a mobile blow-by characterization system that Donaldson uses to measure the blow-by output of diesel engines. The test bench can quantify the gravimetric and fractional content of the blow-by mass output, volumetric flow rate, pressure and temperature at different engine operating conditions.

FIGURE 2
CRANKCASE BLOW-BY CHARACTERIZATION AT THREE
ENGINE OPERATING MODES


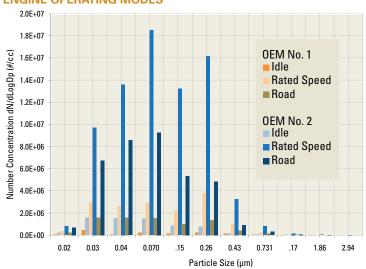


FIGURE 3
PEAK ENGINE TORQUE COMPARISON WITH AND WITHOUT
SPIRACLE™ FILTRATION SYSTEM



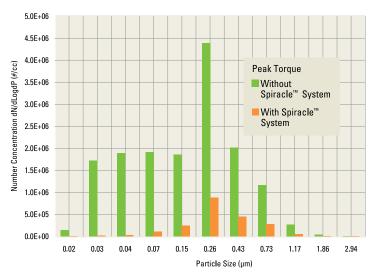

### Technical Paper — Spiracle™ Crankcase Filtration

The mobile blow-by characterization system allows Donaldson to quantitatively assess their customers' crankcase emissions under dynamic conditions (Fig. 2 and Fig. 3) from their diesel engines and tailor filtration systems to address these needs. This cutting-edge technology allows Donaldson a unique capability in the industry and provides the benefit of custom designed products to fit customer needs.

It is imperative that crankcase filtration manufacturers develop products that can handle crankcase emissions that vary significantly over the operating range and life of the engine. In addition, these systems must be designed to operate in the extreme conditions for temperature, shock, and vibration – typical of medium- and heavyduty applications.

#### Spiracle™ Filtration Technology


Donaldson has a long track record of success with its Spiracle CFS technology. In an effort to meet EPA's continued mandates and realizing the health benefits to passengers<sup>(1)</sup>, school bus fleet owners have installed a Spiracle CFS combined with a second emissions reduction technology; i.e., Diesel Oxidation Catalysts (DOC), Diesel Particulate Filters (DPF) or a Diesel Multi-stage Filters (DMF). The combination creates a retrofit solution that delivers maximum emission reduction both inside and outside the bus.

Crankcase filtration manufacturers are challenged to tailor their products

to meet a host of manufacturers' applications with differing size, efficiency, pressure loss, and life requirements while delivering high efficiency filtration and reliability.

With the introduction of Donaldson Synteq XP<sup>TM</sup>, a revolutionary, patented filter media, Donaldson engineered the Spiracle CFS creating new open and closed crankcase filtration systems solutions.

FIGURE 5
PARTICLE SIZES AND FILTRATION PRINCIPALS

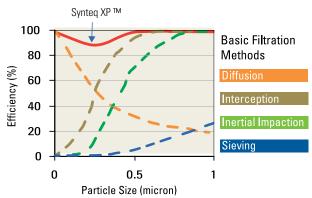

# FIGURE 4 SPIRACLE SYSTEM ON A



As part of California ARB and US EPA emissions retrofit programs, over 16,000 units have been installed on school buses and trucks across the U.S.


The precise dimensions, shapes and innovative fiber bonding of the Synteq XP media provide the ideal solution for the challenge of balancing high efficiency and low pressure drop, and increased filter life.

Larger particles, typically from 1 to 10 microns are efficiently separated by interception and inertial impaction. Submicron particles, often the most harmful for compressor blades, are efficiently separated by diffusion. Donaldson's Synteq XP media is specifically designed to combine interception, inertial impaction and diffusion, thereby offering high efficiency for all particle sizes (see Fig. 5).


After the oil mist particles are captured, they are coalesced into larger droplets and drained from the media. The drainage within the media pack is also optimized. Pressure drop across the self-draining filter is kept low and stable over time, and no engine downtime is required to drain the oil out of the media pack.

The large pore size of Synteq XP media (Fig. 6) reduces the pressure drop across the filter. Multiple layers of the media allows custom design flexibility for a wide range of filtration efficiencies and field life depending on the needs and requirements of OEMs.



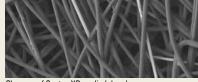

Close-up of Synteq XP media (clean)

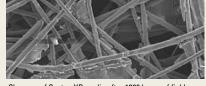

Close-up of Synteq XP media after 1200 hours of field use. The open areas that are free of contaminant offer additional filter service life.

# Technical Reference


### Technical Paper — Spiracle™ Crankcase Filtration



One of the unique features of Synteq XP filtration technology is its exceptional ability to coalesce oil and then drain.

Oil that is held in the filter will increase pressure drop and reduce efficiency, resulting in shorter filter life. In Fig. 7, there is no wet line on the Spiracle filter shown on the right after 16 hours of operation. Better drainage means less pressure drop, better efficiency and improved life.

# FIGURE 7 FILTER OIL LINE COMPARISON AFTER 16 HOURS

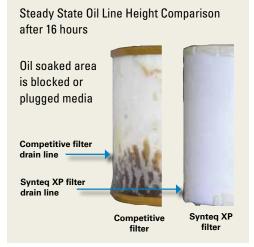


Better oil drainage means less pressure drop, improved efficiency and filter life.

Synteq XP media offers great flexibility to Donaldson engineers in customizing crankcase solutions. Spiracle CFS can be developed to any target gravimetric and fractional efficiency depending on the requirements of the customer and the diesel engine crankcase blow-by characteristics. This media technology offers the best combination of high efficiency with low pressure drop.

Synteq XP media in combination with a Spiracle housing for OCV or CCV applications allows increased engineering design flexibility (see Fig. 8) for custom fit solutions. This design flexibility translates into improved serviceability including mounting location and direction and aligning the filter service interval with other maintenance intervals to reduce downtime and maintenance costs.

# FIGURE 8 CRANKCASE FILTRATION PERFORMANCE DESIGN FLEXIBILITY WITH SYNTEQ XP MEDIA

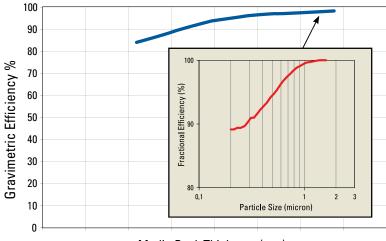

Media Pack Thickness (mm)

#### A Better Product and Technology to Control Diesel Engine Crankcase Emissions

Donaldson Spiracle CFS is a serviceable unit. Its benefits include lower cost, higher efficiency, and reliability over a wide range of engine conditions and longer filter life creating less demand on the diesel engine.

## Benefits of Spiracle CFS with Synteq XP Media include:

- ◆ Lower operating pressure drop
- Continuous oil drainage even at low pressure differentials
- Higher gravimetric and fractional efficiency including the sub-micron particle size range
- Longer filter life compared to traditional media

Donaldson Synteg XP media provides continuous drainage at low pressure differentials. Just as importantly, a Spiracle CFS provides high gravimetric efficiency at broad flow ranges in a dynamic engine operating environment where consistency is required no matter the duty cycle of the engine. The Spiracle CFS also provides high fractional efficiency on sub-micron particles. Sub-micron particles along with larger aerosol contaminants contribute to wear and damage to the air intake system components on diesel engines. Typical manifestation of such damage is wear on compressor blades and the housing of the turbocharger system, or a reduction in aftercooler efficiency which negatively impacts engine performance. This outstanding performance of the Spiracle filtration technology

over any contaminant size range including sub-micron particles, clearly sets it apart from other






### Technical Paper — Spiracle™ Crankcase Filtration

methods of filtering crankcase blow-by contaminants. The technology offers the added advantage of providing optimum filtration performance in low and high temperature extremes.

The Spiracle CFS does not have any moving parts and does not require any electric or hydraulic power to function; therefore, it does not require engine power to operate, which may otherwise cause parasitic losses and decrease fuel efficiency.

FIGURE 9
SPIRACLE SYSTEM SCHEMATIC

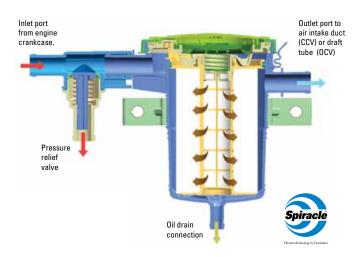


Due to its reliability over the life of the engine, Spiracle CFS is the ideal solution for controlling crankcase emissions whether in open or closed crankcase ventilation systems. As the soot and other contaminants build up on the Spiracle filters after extended engine use, typically over 1,500 hours, the end user simply replaces an

FIGURE 11

#### **SPIRACLE FILTRATION SYSTEMS ON ENGINES**

A - Outlet B - Inlet C - Oil Drain



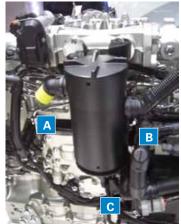



inexpensive, easily accessible filter. This can be accomplished quickly (typically under 1 minute), thus resulting in minimal downtime servicing the engine and more vehicle uptime. Periodic replacement of the filter returns the system to a known performance level each and every time.

Donaldson Spiracle Systems deliver high performance crankcase filtration over all engine operating conditions. Figure 10 and 11 show examples of Spiracle CFS on engines.

#### "Green" Benefits

At Donaldson, we protect our customers' engines by cleaning the air going into the engine, all the fluids around and throughout the engine, and the exhaust gases coming out of the engine. In turn, our filtration systems are improving the sustainability of the environments in which they are used.

Spiracle CFS offers the following green benefits:

- reduces or eliminates crankcase emissions
- improves cabin air quality (1)
- reduces engine oil consumption;
- maintains a cleaner engine compartment

#### **Conclusion**

Donaldson's diesel engine knowhow combined with its cutting edge crankcase blow-by characterization technology and Synteq XP media based Spiracle Systems offer the emissions reduction solutions that are needed by the diesel engine OEMs to meet worldwide emissions regulations.

## Technical Reference Technical Paper — Spiracle™ Crankcase Filtration



#### Reference:

(1) Three independent studies concluded Spiracle CFS improves in-cab air quality. Links to studies can be found on Donaldson Emissions Resource Center at www.donaldson.com/en/erc

#### Acronyms

OCV Open Crankcase Vent / Ventilation CCV Closed Crankcase Vent/Ventilation CFS Crankcase Filtration System

0E Original Equipment

**OEM** Original Equipment Manufacturer EPA Environmental Protection Agency

ARB Air Resources Board; California Air Resources Board

Particulate Matter

#### Internet Resources:

www.donaldson.com/en/engine/crank/

Donaldson, Spiracle, and Synteq XP are trademarks or registered trademarks of Donaldson Company, Inc.



Donaldson Company, Inc. PO Box 1299 Minneapolis, MN

www.donaldson.com

North America 866-511-7610 Mexico +52-449-910-6150

**Latin Am. & Caribbean** +52-449-910-6150 **Japan** 81-42-540-4112 Brazil +55-11-2119-1604 Europe +32-16-38-3811

South Africa +27-11-997-6000

South East Asia 65-6311-7373 Greater China 852-2405-8388 Australia 61-02-4350-2033 India +91-124-2290060

Brochure No. F113025 (03/10)

© 2010 Donaldson Company, Inc. All rights reserved. Donaldson Company, Inc. reserves the right to change or discontinue any model or specification at any time and without notice. Printed in the U.S.A.



### AIR INTAKE FOR VEHICLES/EQUIPMENT

### **APPLICATION DESIGN WORKSHEET**



For proper development/design engineering solution, we ask you to provide details about your engine, project due dates, intake system and performance (mechanical and filtration), system mounting, service, final packaging and product markings.

When completed, please forward to Donaldson.

Email: engine@donaldson.com

Fax: 952-887-3059

Customer Name:	Revision:
Project Name:	
Contact Name:	Title
Phone: Fax:	Email:
Current Donaldson Model Used: (if applied	cable) Your Part Number:
Project Details	Air Intake Requirements
Type of Machine:	Airflow: (Specify units, standard conditions if 20° C and 101.3 kPa, unless other specified.)
Units Per Year:	Maximum Rated with EGR
Key Project Dates:  Design Proposal:	Maximum Rated with out FGR
	Maximum Initial Restriction:
Prototype Delivery:  Design Freeze:	(pressure) at (flow rate)
PPAP:	Service Restriction Limit:
Start of Production:	(pressure) at (flow rate)
Engine Information	Pre-cleaner Scavange Available:
Manufacturer	Type of Maintenance: ☐ Scheduled ☐ Restriction
Model	
No of Cylinders	
Ratinghp/kw at	rpm Air Temperature:
	° C Engine Compartment
External Requirements	° C Max. Intake Air Temperature
Dust Condition:	° C Max. Air Cleaner Housing Skin Temp.
Light Medium Heavy	Intake System Mounting Requirements
Other Conditions:	Under Hood: ☐ Frame/Rail ☐ Engine ☐ Firewa
☐ High Carbon (soot) ☐ Mist ☐ Se	eed/Chaf
Other:	Outside of Engine Compartment
Does this air cleaner need to be flame ret  ☐ Yes ☐ No	Cowl Mounted Frame/Rail
	Other, please describe
Air Temperature:° C Engine Compartment	Location / Space Footprint:
C Engine Compartment  C Max. Intake Air Temperatur	·
° C Max. Temp. in close proxin	

				Additional Information
PSD/Time F	History Data Att	ached	es 🗌 No	Is a safety/secondary filter required?
Natural Free	quencies to avo	oid (engine funda	mental, track/	☐ Yes ☐ No
	-			Flame retardant required?
		_h		Yes No
vviiat is bit	, IIIC :	'	lours or fillies	Do you have any special finish requirements?
			Expected	☐ Yes ☐ No
Machine Axis	Acceleration (g) Max. G Load	) Peak Shock Loads (q)	No. of Cycles-	Accessories
			Shock	Mounting Bands ☐ Yes ☐ No
Vertical				Rain Caps / Hoods Yes No
Fore/Aft				Moisture Eliminators  Yes  No
				Filter Indicators Yes No
Side to Side				
				Packaging
ntake Plum		duation1	n Annous -	Check all that apply?
Describe an requirement	• •	ducting, clamp, o	r torque	Protective caps: $\square$ on inlet $\square$ on outlet $\square$ on port
	<del>-</del> .			☐ Other
				Final Assembly:
				☐ Bulk ☐ Individual Boxes ☐ Returnable
				Other
)			_	Markings
Dutlet Plur	noing			
	v special intake	ducting clamp of	r torque	Do you have any marking requirements?
Describe an		ducting, clamp, o	r torque	Do you have any marking requirements?
Describe an		ducting, clamp, o	r torque	Intake Assembly?
Describe an		ducting, clamp, o	r torque	Intake Assembly? ☐ Yes ☐ No Filters? ☐ Yes ☐ No
Describe an		ducting, clamp, o	r torque	Intake Assembly?
Describe an		ducting, clamp, o	r torque	Intake Assembly? ☐ Yes ☐ No Filters? ☐ Yes ☐ No
Describe an		ducting, clamp, o	r torque	Intake Assembly?
Describe an	S		r torque	Intake Assembly?  Yes No Filters? Yes No Pre-Cleaner? Yes No  Installation & Service
Describe and Pequirements	s. ue Specification	n		Intake Assembly?
Describe and requirements  Clamp Torques Restriction I	s. ue Specification	n Yes [	No	Intake Assembly?  Yes No Filters?  Yes No Pre-Cleaner? Yes No  Installation & Service Do you require installation, service or maintenance
Describe and requirements  Clamp Torques Restriction Intake Air Te	s.  ue Specification Indicator Port? emperature Ser	n Yes □	No No	Intake Assembly?
Clamp Torquestriction Intake Air Florage	ue Specification Indicator Port? Emperature Ser ow Sensor?	n Yes □ nsor? □ Yes □ □ Yes □	No No No	Intake Assembly?
Clamp Torquestriction Intake Air Tel	ue Specification Indicator Port? emperature Ser ow Sensor? Ventilation Port	n Yes nsor?	No No	Intake Assembly?
Clamp Torquestriction Intake Air Ted Mass Air Flo Crankcase Madditional	ue Specification Indicator Port? emperature Ser ow Sensor? Ventilation Port Fittings?	n Yes	No No No	Intake Assembly?
Clamp Torquestriction Intake Air Ted Mass Air Flo Crankcase Madditional	ue Specification Indicator Port? emperature Ser ow Sensor? Ventilation Port Fittings?	n Yes nsor?	No No No	Intake Assembly?
Clamp Torquestriction Intake Air Telegrankcase Madditional	ue Specification Indicator Port? emperature Ser ow Sensor? Ventilation Port Fittings?	n Yes	No No No	Intake Assembly?
Clamp Torquestriction Intake Air Flo Crankcase V	ue Specification Indicator Port? emperature Ser ow Sensor? Ventilation Port Fittings?	n Yes _ nsor?	No No No	Intake Assembly?
Clamp Torquestriction Intake Air Technicase Nadditional f yes, description Ideas of the control	ue Specification Indicator Port? emperature Ser ow Sensor? Ventilation Port Fittings? \( \simeq \) ribe (location, the	n Yes _ nsor?	No No No No	Intake Assembly?
Clamp Torquestriction Intake Air Technicase Vadditional f yes, description Intake Air Technicase Vadditional f yes, descriptional f yes, descriptional for Donald	ue Specification Indicator Port? emperature Ser ow Sensor? Ventilation Port Fittings? \( \simeq \) ribe (location, the	n Yes _ nsor?	No No No No	Intake Assembly?
Clamp Torquestriction I of the Crankcase	ue Specification Indicator Port? emperature Ser ow Sensor? Ventilation Port Fittings?  ribe (location, to	n Yes _ nsor?	No No No No	Intake Assembly?
Clamp Torquestriction Intake Air Technicase Vadditional f yes, description Intake Air Technicase Vadditional f yes and the Intake V	ue Specification Indicator Port? emperature Ser ow Sensor? Ventilation Port Fittings?  ribe (location, the son USE ONLY ived:	n Yes nsor?	No No No No	Intake Assembly?
Clamp Torquestriction I ntake Air Te Wass Air Flo Crankcase Maditional f yes, described Date Receis Busines	ue Specification Indicator Port? Emperature Ser ow Sensor? Ventilation Port Fittings? \( \text{\text{N}} \) Vibe (location, the son USE ONLY ived: \( \text{\text{\text{L}}} \) ived: \( \text{\text{L}} \) is Unit: \( \text{\text{\text{L}}} \)	n Yes _ nsor?	No No No No	Intake Assembly?
Clamp Torquestriction Intake Air Telestriction Intake Air Telestriction Intake Air Telestrictional fyes, description Intake Assigned to Busines	ue Specification Indicator Port? Emperature Ser ow Sensor? Ventilation Port Fittings? \( \text{\text{N}} \) Vibe (location, the son USE ONLY ived: \( \text{\text{\text{L}}} \) ived: \( \text{\text{L}} \) is Unit: \( \text{\text{\text{L}}} \)	n Yes nsor?	No No No No	Intake Assembly?
Clamp Torquestriction Intake Air Telestriction Intake Air Telestriction Intake Air Telestrictional fyes, description Intake Receives Additional fyes, description Intake Receives Assigned to Busines Production	ue Specification Indicator Port? Emperature Ser ow Sensor? Ventilation Port Fittings?  vibe (location, the son USE ONLY ived:	n Yes	No N	Intake Assembly?
Clamp Torque Restriction I Intake Air Te Mass Air Flo Crankcase Madditional If yes, description of the Receive Assigned to Busines Production	ue Specification Indicator Port? Emperature Ser ow Sensor? Ventilation Port Fittings? \( \text{\text{N}} \) Vibe (location, the son USE ONLY ived: \( \text{\text{\text{L}}} \) ived: \( \text{\text{L}} \) is Unit: \( \text{\text{\text{L}}} \)	n Yes nsor?	No N	Intake Assembly?



### **ENGINE CRANKCASE FILTRATION**

### **APPLICATION DESIGN WORKSHEET**



For proper development/design engineering solution, we ask you to provide details about your project, engine and crankcase parameters, performance (mechanical and filtration), system mounting, service, final packaging and product markings.

When completed, please forward to Donaldson.

Email: engine@donaldson.com

Fax: 952-887-3502

Customer Name:		Revision:			
Project Name:		'			
Contact Name:		Title			
Phone: Fax:		Email:			
Current Donaldson Model Used: (if applicable)		Your Part N	lumber:		
Project Details		Crankcase Design Page	arameters		
Type of Machine:			Filtration System Type:		
Units Per Year: Key Project Dates:		·	closed Not Sure		
Design Proposal:		Desired Filter Life: hours or miles  Minimum crankcase filtration efficiency (%)			
Prototype Delivery:		Willimum Crankcase	illuation eniciency (70)		
Design Freeze:		Maximum blow-by ga	as flow I/min		
PPAP: Start of Production:			erence between new engine and ol		
Engine Information		Blow-by gas flow rate	e at engine brake I/min		
Manufacturer		Maximum temperatu	re of blow-by gas°C		
Model					
Emissions regulations (U.S. EPA, Euro) being n		Crankcase pressure minimum:	range (kPa) maximum:		
		Pressure relief valve	required? $\square$ Yes $\square$ No		
No of Cylinders		Pressure regulation	valve required?		
Engine DisplacementI		Faring all same access			
RatingkW at		Engine oil carry-over			
Number of Turbochargers	<del></del>	Check valve on oil re	eturn line		
Oil Type/Grade		Engine Air Cleaner F	Restriction (kPa)		
Height between housing oil exit to oil pancm	1	Initial	Final		
Engine Tilt Requirements: Degree			continued on next pag		

Mounting R	equirements		Additional Information
Location / S	Space Footpr	int:	Do you have any special finish requirements?
_imitations (	(include inches	s or metric) Dia	Yes No
_ength:	Inlet _	Outlet	Accessories
			Hoses Yes No
Model of S <sub>l</sub>	pace Envelop	e Attached?	
Vibration			Filter Indicators
PSD/Time H	listory Data At	tached	No Packaging
	•	oid (engine fundame	ntal_track/ Check all that apply?
	•		
		hou	
, , , , , , , , , , , , , , , , , , ,			
Machine	Acceleration (g	ı) Peak Shock	Expected No. of Final Assembly:
Axis	Max. G Load	Loads (g)	Cycles-
Vertical			Shock Other
Vertical			
Fore/Aft			Markings
Side to Side			Do you have any marking requirements?
	'		Assembly?
			Filters? Yes No
			Installation & Service
			Do you require installation, service or maintenance
			recommendations from Donaldson?  Yes No
			recommendations from Donaldson: res No
dditional C	omments on	Requirements?	
or Donald	son USE ONL	v	
Date Recei	ved:		<u> </u>
			Other
Assigned t			
Busines	ss Unit:		Account Manager:
		Donaldson Company, Inc.	
Dor	naldson.	PO Box 1299 Minneapolis, MN 55440-12	© 2012 Donaldson Company, Inc. All rights reserved. Printed in the U.S.A.  Donaldson Company, Inc. reserves the right to change or discontinue any model
FILTRATI	on solutions	Engine Air Filtration	or specification at any time and without notice.






# Engine Air Consumption & HP Rating Guide

### **Engine Air Consumption & HP Rating Guide**



The data on engines in this section is to be used as a reference only. If you are selecting a new air cleaner for an engine, Donaldson recommends that you acquire this information from the

engine manufacturer. If this information is not available, we calculate the airflow based on instructions shown in the first section of this catalog.

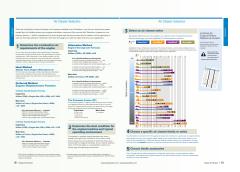

# DO NOT use this guide or data for the selection of retrofit emissions devices.

Allis Chalmers Kohler Renault Case Kubota Same Caterpillar Lister Teledyne **Continental Motors** Lombardini Volkswagon Cummins Mack Volvo **Detroit Diesel** Mercedes-Benz Waukesha Deutz Mitsubishi White Eng Ford MTU of North America Yanmar Hatz Diesel Navistar

Hatz Diesel Navista Hino Nissan Isuzu Perkins

Iveco John Deere

For assistance in calculating engine airflow, please contact Donaldson customer service. See back cover for contact information.

# Engine Air Consumption Guide



Facility			lasta las	Exhaust
Engine Model	RPM	НР	Intake CFM	Temp. Flow (°F) (CFM)
	ALLI	S CH	ALME	RS
10000	2200	145.	265	
11000				
16000	2100	250.	420	
17000 MKII				
2000				
21000 MKII				
213				
25000 MKII				
2800				
2900				
320				
3400				
3500				
3700				
426	3600	72.	150	
4331	2400	100.	247	
433T				
6000				
61000				
61381				
6138LT				
6138T				
6491				
649T 65000				
6701				
670T				
6851				
685T				
7000				
D175				
D262				
D344	1800	88	143	
		CA	SE	
301BD				1000 414
336BD				1000 462
336BDT				850 648
451BD				1000 973
451BDT				900 957
504BD				950 718
504BDT				900 1108
504BDTI A267D				950 1567 1000 333
A284				1000 368
A377				1000 376
A451D				1000 541
G188				1000 222
G188D				1000 373
	CA	TERF	PILLAI	R
1160				1050 1146
1673T				950 1567
1674TA				900 1738
1693TA				900 2720
3116				856 1511
	2600	250.	713	867 1755
			685	929 1773
	2600	200	7/15	001 2006

 $2600.....300.....745 \hspace{0.2in} 984......2006$ 

				Exhaust
Engine Model	RPM	НР	Intake CFM	Temp. Flow (°F) (CFM)
3126B				660 2640
31200			1355	7163017
	2200			7413031
	2200			808 1471
	2200			821 1595
			649	867 1683
	2200			916 1778
	2400	330.	709	931 1937
3140				1000 1109
3145	2800		410	1050 1146
3150				1000 1109
3160	2800		410	1080 1169
3176	1800	275.	692	676 1458
	1800	300.	738	693 1579
	1800	350.	802	760 1819
	1800	365.	805	808 1900
3204NA	2400	66.	193	980 515
3208ATAC	up t	o 300	950	
3208N	2200	165.	325	1076 930
3208NA	2800	210.	410	1000 1109
3208T				900 1627
	2200	215.	591	855 1443
3208T-DIAT				
	2600			854 1837
	2800			874 2162
3208T-DIT				976 1740
3304B				
3304NA				1050 576
3304T				900 665
3306	1900	300.	745	1019 2059
3306B	1800	285.	745	825 1781
	1800			843 1887
3306NA				950 849
3306T				900 1511
000074	up			050 4000
3306TA				950 1629
34063406B				880 2758 655 1917
3400D				705 2125
				739 2125
				753 2255
				806 2532
				847 2694
3406E				762 2301
J400L			1023	899 2717
			1025	901 2872
			1083	919 2925
			1105	9373017
			1119	9543098
			1164	959 3236
			1164	959 3236
3406T				900 2292
3406TA				900 2519
3408T				900 2468
3408TA				900 3073
3412T				870 4234
3412TA				900 6420
3508	1800	1000.	2490	900 6271
3512				900 9306
3516	1800	. 2000.	4830	900 12164
3606	1000	. 2475.	5850	850 14192
3608	1000	3330.	7235	800 16882
3612				800 27300
3616	1000	. 6655.	.14470	800 33763
5.4-6				950 2718
5.4-8	1900	614.	1477	950 3857

Engine			Intake	Exhaust Temp. Flow
Model	RPM	HP	CFM	(°F) (CFM)
5.4V12	1900	896	1936	900 4876
5.75-6	1330	317	780	950 2037
6.25-6	1375	440	1111	950 2901
C-10	1800	305	755	821 1888
	1800	335	766	918 2078
			752	892 1997
			766	918 2078
C-12	1800			876 2110
			815	859 2121
			826	898 2202
			833	924 2265
			836	937 2287
			815	922 2220
			826	948 2276
			819	953 2269
-15	1800			762 2294
			1023	899 2714
			1066 1083	902 2830
				919 2925
			1105 1119	937 3017
16	1800			954 3098 941 3165
,-10			1164	959 3236
VIANCE	2200			1050 635
	2200 2200			950 1091
	2200 2200			1000 944
	2200 2200			900 1544
	2200			950 1799
	2200			950 2337
	1300			1050 1169
	1300			950 2316
343T	2000	315	786	950 2052
	2000			900 2508
346TA	2000	565	1350	900 3400
348TA	2000	850	2048	900 5158
349TA	2000	1130	2827	900 7120
0353TA	1300	490	1091	900 2748
	1300			900 3780
398TA	1300	975	2323	900 5851
)399T	1300	1300	3009	900 7578
C	ONTIN	IENT	AL MO	OTORS
	2400			1100 300
	2400			1100 188
	2000			1100 168
	2400			1100 243
	2400			1100 243
	2400			1100 292
	2400			1100 315
	2400			1100 332
	2400			1100 335
	2400			1100 364
	2400			1100 367
	2000			1100 168
	2000			1100 196
H227				1100 277
1243				1100 300
H260				1100 324
	2000 2400			1100 462

L478.....2400.....162.....265

M271 .....2400 .....141 M290 ......2400 .....151

M330 ......172

M363 .....2400 ..... 122 .....201

N56.....2200......27 N62.....2400.....31 1100 ...... 407

1100 ...... 436

1100 ...... 497

1100 ...... 581 1100 ...... 78

1100 ..... 90

Engine Model	RPM	НР	Intake CFM	Exhaust Temp. Flow (°F) (CFM)
CONTIN	IENTAL	МОТ	ORS CO	NTINUED
R513	. 2400		267	1100 771
R572				1100 861
R602	.2400	. 191	313	1100 904
S749	. 2200		358	1100 1034
S802				1100 1132
S820				1100 1314
T&B371				1100 558
T&B427				1100 696
U501				1100 751
V603				1100 904
Y112 Y69				1100 168 1100 107
Y91				1100 263
131				1100 203
	Cl	JMN	IINS	
3B2.9				1000 311
4B3.9				1050 419
4BT				890 750
4BT				970 922
4BT3.9				1000 684
4BT3.9-G1				850 357
4BT3.9-G2 4BTA3.9				850 381
6B5.9				900 751 1000 611
6BT				780 1290
001	2500			1031 1531
	2300			910 1380
6BT5.9				900 960
6BT5.9-G1				900 564
6BT5.9-G2				900 718
6BTA5.9				900 1131
6C8.3				1000 854
6CT				930 1740
	2200			1000 2140
0070.0	2000			985 1665
6CT8.3				900 1398
6CTA8.3 C-160				900 1592 900 756
C-180				900 881
C-190				900 1247
FLEET 270				900 1788
FLEET 300				900 1927
	1600			900 1788
Formula 240				900 1587
	1800	. 240	618	900 1556
Formula 270	. 1800	. 270	720	900 1813
Formula 300				900 1917
	1800			900 1876
	1800			900 1874
Formula 315				900 1851
Formula 350				900 2068
	1800			900 2015
Formula 400	1800			900 2158
ronnund 400	. 1900			900 2670 950 2428
	1900			900 2483
Formula 450				950 2898
Formula L10				- 50 2000
	1900	. 240	522	900 1315
	1900			900 1461
	1900	. 240	585	900 1473

F:			Ind. I	Exhaust
Engine Model	RPM	НР	Intake CFM	Temp. Flow (°F) (CFM)
Formula L10			0	(1) (01111)
Formula LIU		270	556	900 1400
		270		900 1556
	1900	270	606	900 1526
Formula L10				
GNH-220-IP.		300		900 1534
GNH-220-1P. GNH-250-1P.				900 630 900 667
GV-12-525-IP				900 1461
ISB				698 1257
	2600			801 1250
	2500			831 1246
	2600 2500			857 1313
	2500			892 1311 812 1456
	2500			8121456
	2600			886 1592
	2500			956 1673
ISC				706 1417
	2400			746 1485
	2400	260 285		765 1578 833 1531
	2200			860 1578
	2200			919 1686
	2200			927 1758
	2200			966 1841
ISL				891 1682
ICN 4	2100			933 1740
ISM		280 310		670 1523 721 1528
		330		742 1610
	2100			720 1778
	2100			737 1853
	2100			737 1853
	2100 2100			9692171
	2100			789 2030 965 2341
ISX				655 2036
	1800	450	1129	696 2218
	2000			842 2504
	2000			905 2633
VT 1150 C		600		9753202
KT-1150-C KT-2300-C				900 2846 880 5956
KT-450				850 2741
KTA-1150-C				900 3526
	2100			880 3499
KTA-2300-C				900 7304
VTA 2007 C	2100			900 6800
KTA-3067-C		. 1600 . 1350		900 9470 900 8701
KTA-525				850 3457
KTA-525-F0I		020		000
	1900	525	1200	850 2911
KTA-600				850 3396
KTTA-19-C				900
KTTA-38-C				900
				745 1300
KTTA-50-C	1700			
L10		280		760 1407
	1700 1600	280 310	640 638	
	1700	280 310 270	640 638 670	760 1407

					aust
Engine Model	RPM	НР	Intake CFM	Temp.	Flow (CFM)
				. ,	
M11					1476
	1600 1600				1390 1554
	1600			828	
	1600			832	
N-855-C					1116
	2100				1116
N-927					1154
	2100				1228
	2100				1228
N14					1997
	1800 2100				2354 2254
	2100				2474
	2100				2737
	2100				2984
	2100				2984
	2100	410	1164	670	2614
	2100	435.	1302		2639
	2100				2984
	2100				2984
VH-220					1184
NH-230 NH-230S					1159
IH-230S IH-250-М					1159 1201
111-230-IVI	1800				1105
	1800			900	
	2100				1159
IHC-250	2100	240.	460	900	1159
	2300			900	1788
HC-250-D.					1159
HD-230					1247
HF-240					1272
IHF-265					1272
IHH-250 IHHTC-335					1159 2062
HTF-295					2002
T-335-M					1632
	1800				1637
	2100	285.	775		2024
	2100	335	800		2089
T-380-M	2300	380	950		2481
	2000				1893
	2000				1889
IT OFF C	2300				2400
IT-855-C	2100			880	
	2100			850 850	
	2100			900	
	2100				2267
	2100				2065
	2100			880	
	2100			900	
JTΛ _270	1950				1965
VIA-3/0	2100				2305
		400			2426
ITA-400		400		unit	2720
ITA-400 ITA-420	2300				
NTA-400 NTA-420 NTA-855-C.	2300 2100	400.	1000	880	2481
NTA-400 NTA-420	2300 2100 2100	400. 360.	1000 960	880 880	2481 2382
NTA-400 NTA-420	2300 2100	400 . 360 . 360 .	1000 960 980	880 880 900	2481
NTA-400 NTA-420 NTA-855-C.	2300 2100 2100 2100 2100	400. 360. 360. 400.	1000 960 980 1050	880 880 900	2481 2382 2468
NTA-400 NTA-420	2300 2100 2100 2100 2100	400 360 360 400	1000 960 980 1050 740	880 900 900 850	2481 2382 2468 2644

# Engine Air Consumption Guide



				Exh	
Engine Model	RPM	НР	Intake CFM	Temp.	
MIOUEI				. ,	(CI IVI)
NITC 200			ONTINI		1700
NTC-290			685		1736 1725
			580		1482
NTC-300					2357
NTC-335	2100	280.	780		1936
	2100	300.	805	880	1998
			850		2141
NTO 000			830		2090
NTC-350					2229
			865 845		2146 2097
			760		1844
			986		2483
	2100	350.	930	900	2342
NTC-400	2100	400.	1165		3042
			1030		2594
NTCC-300.					2186
NTCC-350. NTCC-400.					2519 2745
NTF-295					1722
NTF-365					2453
P.TORQ 240					1556
P.TORQ 270					1851
	2100	270.	840	900	2116
P.TORQ 315		315.	890	950	2324
P.TORQ L10					
			645		1624
		240.			1453
P.TORQ.L10		240.	047	900	1029
1.10114.216		270.	630	900	1587
Signature.					2638
		565.			2777
			1164		2936
SUPER 250					1247
V-12-500-N			840 720		2116 1880
			720		1813
			840		2193
V-378-C					698
V-504-C				900	899
V-504-M	3300	202.	425	950	1110
			322		811
\			386		972
V-555					1166
V-555-C V-555-E					1043
V-903					1536
* 000			610		1536
	2600	269.	610		1536
	2600	288.	610	880	1514
V-903-C					1514
1/ 00			610		1480
V-903-M					1593
			545 585		1373
V-9035					14/3
V-9035 V5-120-635		200.	320	000	1230
		435.	1060	900	2670
V5-120-635	-M				
			1380		3476
V6-155					830
V8-185-E V8-210					1110 1110
vo-Z1U	აასს	202.	425	უეს	1110

				Exhaust
Engine Model	RPM	HP	Intake CFM	Temp. Flow (°F) (CFM)
V8-300	3000	288.	580	970 1536
V8-300-M.				950 1528
	2600	220.	505	900 1272
	2800	260.	545	950 1423
VT-12-635-				
		635.		950 3812
VT 10 700		490.	1100	900 2770
VT-12-700-		700	1600	000 4267
		700. 480.		980 4267 900 2846
		545.		900 2997
		595.		950 3917
VT-12-800-		000.		000
		800.	1820	950 4752
		550.		900 3337
		620.		900 3526
		680.		950 4439
VT-1710-C				900 4281
VT-555				900 1574
VT-555-C				850 1419
VT-903				900 2141
		350.		900 2644
VT 000 0		320.		900 2342
VT-903-C		350. 320.		900 2317 900 2279
VT8-370-N				950 2428
V 10-3/U-IV	3000 2600	270. 270.	930 760	900 1914
		320.		950 2259
VTA-1710-				950 4909
		800.		980 5600
VTR-28-C.				900
	DET	ROI1	DIES	EL
12V-149	1900	800.	2800	850 6793
12V-149T	1900	1000.	3600	850 8733
12V-149TI	1900	1200.	4300	850 10431
12V-71				850 2736
		471.		850 3469
401/-47		456.		850 3176
12V-71T				850 4367
16\/ 140	1800			850 4003
16V-149 16V-149T				850 8733 850 11644
16V-149TI.				850 13343
16V-14911				850 4241
		466.		850 3653
16V-71T				850 5434
		700.		850 5580
16V-92	1800	600.	1960	850 4755
		720.		850 5580
16V-92T				850 7763
				850 6307
2-53				850 315
				850 221
0.71				850 344
2-71				850 541
		48.		850 485
3-53/2-VA		75		850 318 850 587
ა-აა/Z-VA		75. 59.		850 587 850 490
		59.		850 614
		98.		850 774
	_000			/ / T
3-53T	2500	125	500	850 1213
3-53T		125. 125.		850 1213 850 1213
3-53T 3-71	2500	125.	500	

Engine			Intake	Exh Temp.	aust Flow
Model	RPM	HP	CFM	(°F)	
4-35T	2500	170	596		1446
4-53/2-VAL.					825
1 00/2 1/12.					684
	2200		356	850	864
	2800	136.	450	850	1092
1-53T	2500	170.	596	850	1446
					667
		159.			1334
		117.			1031
0.71		152.			1213
6-71		236. 175.			2001 1545
		175. 228.			1819
		220.			1013
6-71T					2535
6-71TT					2256
6-V-71					1735
		175.			1368
	2100				1589
6V-53					1295
		210.			1638
N/ 50-					1521
V-53T					2074
V-92					1771
V-92T		270.			2086
V-3Z1		322			2420 2911
V-92TA					2972
V-92TT					2499
V-92TTA					2547
2LN	3000	165.	376	850	912
.2LT	3000	205.	553	850	1342
V-53				850	1681
					1907
V-71					1827
		314.			2314
N/ 71T		304.			2120
3V-71T					2911
V-71TA		270			2669
V-711A V-71TT					3008
v-7111 V-71TTA					2559
8V-92					2377
		360.			2790
V-92T					3881
	1800		1300		3154
V-92TA	2100	435.	1434		3479
V-92TT				850	3154
V-92TTA			1250	850	3032
eries 40E					
		175.			1450
		190.			1575
			740		1730
		230. 195.	700 715		1810 1610
		195. 250.			1810
Series 40E			700	000	1010
551103 TUL		, 250.	685	850	1725
			705		1890
		300.	710	965	1930
	2200	300.	710 715		

**254** • Engine Air Filtration 850 ......502 www.buydonaldson.com



				Exha	aust
Engine Model	RPM	НР	Intake CFM	Temp. (°F)	Flow
DE	TROIT D	IESEI	LCONT	INUED	
Series 50 (8	3.5 Ltr)				
	2100			625	1575
	2100				1720
	2100 2100				1845
	2100			730	2055
Series 60 (1		330.	013	000	2000
001100 00 (1	2100	330.	1050	610	2157
	2100			645	2310
	2100	370.	1010	725	2300
	2100	400.	1050	780	2500
	2100				2652
	2100				2877
0 : 00/4	2100	500.	1170	825	2877
Series 60 (1		EEO	1001	000	2402
	2100 2100			986 867	3402
	۲۰۰۵	3/3.	14/1	007	3221
		DEL	JTZ		
BF12L 714	2300	390.	695	850	1686
BF6L 913	2800	175.	396	850	961
F10L 413					1443
F10L 714					1400
F12L 413					1732
F12L 714 F1L 208					1686
F1L 208 F1L 210					170 233
F1L 411D					238 238
F2L 411D					323
F2L 411W					323
F2L 912	2500	36.	150	850	364
F2L 912W				850	364
F3L 912					427
F3L 912W					383
F4L 912					490
F4L 912W F5L 912					437 509
F5L 912					454
F6L 413					866
F6L 714					842
F6L 912					611
F6L 912W	2500	101.	224	850	543
F8L 413	2650	250.	476	850	1155
F8L 714	2300	220.	463	850	1123
		FOF	RD		
00	2400	59.	101	900	254
172DF					254
175DF	2500	52.	108	900	272
183D				900	249
192DF					285
201DF					280
220					327
233D 242D					302
242D 242DF					335 375
254DF 254DF					395
256DF					395
3320DF					511
362DF	2500	121.	223		562
363DFT	2400	150.	214		539
380DF					587
401DF					620
401DFT	2500	167.	246	900	620

Engine Model	RPM	НР	Intake CFM	Exhaust Temp. Flow (°F) (CFM)
67GF	3600	32.	60	900 151
98GF	3600	45.	87	900 219
X	2250	60.	122	900 307
Y	2250	96.	183	900 461
			IESEL	
2L30				1100 196
2L40				1100 237
2M40 3L30				1100 246
3L40				1100 292 1100 355
3M40				1100 376
4L30				1100 390
4L40				1100 474
4M40				1100 491
E573				1100 40
E673				1100 46
E75				1100 52
E780				1100 72
E786				1100 87
E79				1100 58 1100 81
E88 E89				1100 87
E950				1100 87
Z788				1100 159
		HIN	10	
Z790				1100 176
DK10				900 819
DK10T DM100				900 1070 900 416
EB300				900 793
EC100				900 524
EF550				900 1441
EF750	2200	245.	589	900 1483
EF750T	2200	272.	850	900 2141
EH100				900 615
EH500				900 698
EH700				900 730
EK100				900 1176
EL100				900 824
EL100T EM100				900 1108
ER100				900 912 900 1025
EV700				900 1763
		ISU	ZU	
QD100	3200	87.	185	900 466
QD130				900 579
QD145				900 705
QD145T				900 768
QD200				900 1033
QD200T				900 1297
QD27				900 126
QD40 QD60				900 201
QD85				900 353 900 408
QD90				900 378
QT15				900 139
QT23				900 189
	3000			900 242

Engine Model	RPM	НР	Intake CFM	Exhaust Temp. Flow (°F) (CFM)
		IVE	CO	
803 i 3L-N <i>A</i>	۸ 2500	51.	120	1100 347
804 i 4L-N <i>A</i>				1100 448
805 i 5L-NA				1100 214
806 i 6L-NA 806 i tc 6L-		102.	235	1100 679
	2500	131.	340	900 856
8210 i 6L-N	A 2000	205	440	1100 1271
8280 i V8-N	IA			
8281 SRi V	2200 R-ΤΩΔ	287 .	600	1100 1733
0201 0111 11	2200	424.	900	900 2267
8281 Si V8-	TC 2000	221	700	900 1990
8361 Si 7L-	TC			JUU 1330
8361 i 6L-N	2400	157.	450	900 1133
030110L-IV	2500	139.	322	1100 930
	J0	HN I	DEERE	
3164D	2500	52.	100	900 252
3179D				900 252
3179T	2500	79.	178	900 448
4219D	2500	70.	135	900 340
4239A	2500	117.	277	900 698
4239D	2500	80.	148	900 373
4239T	2500	109.	258	900 650
4276D	2500	82.	160	900 403
4276T	2200	98.	266	900 670
6076A	2200	240.	568	900 1431
6076H	2200	250.	647	900 1629
6076T	2200	190.	505	900 1272
6329D	2500	104.	200	900 504
6359A	2500	176.	470	900 1184
6359D	2500	121.	228	900 574
6359T	2500	163.	370	900 932
6414D	2200	118.	228	900 574
6414T	2200	146.	360	900 907
6466A	2100	233.	579	900 1458
6466D	2200	138.	258	900 650
6466T	2200	185.	484	900 1219
6619A				900 1713
8955A	2100	456.	1130	900 2846
8955T	2100	356.	978	900 2463
		KOH	LER	
K161				1150 42
K181				1150 48
K241				1150 60
K301				1150 72
K321				1150 78
K341				1150 89
K582				1150 143
K91				1150 21
KT17				1150 104
KT19	3600	19.	39	1150 116

**KUBOTA** 

www.buydonaldson.com Engine Air Filtration • 255

QT35.....3000......32......96

6LD 325 ......... 7....... 17

1000 ...... 46

# Engine Air Consumption Guide



					naust					Exh							aust
Engine Model	RPM	НР	Intake CFM	Temp.	(CFM)	Engine Model	RPM	НР	Intake CFM		(CFM)	Engine Model	RPM	НР	Intake CFM		. Flow (CFM)
D1402-B					156	6LD 325/C	1800 .	7	17		46		2300 .			900 .	1662
D3200-B					310	6LD 360					51		4 2300 .				1889
D600-B					88	6LD 360 V					51	1	2300 .				1788
D850-BW					103	6LD 400					57		42100 .				2367
DH850-B					123	7LD 665					78		2300 .				2116
S2800-B					292	7LD 665/F					78		2300 .				2670
V1100-B					139	7LD 740/I.					87		A 2300 .				3098
V1702-B					194	8LD 600-2					141		3600 .				337
V1902-B					209	8LD 665-2					157	1	3600 .				413
V4300-B VH1100-B					413 166	8LD 665-2 8LD 740-2			44 52		119 141	UIVIO30	3500 .	40	95	900 .	239
vпттоо-в Z400-В					100	9LD 561-2					130		M	IIZTI	BISH	ı	
Z600-BW					73	9LD 561-2					100	O40A DT					400
ZB400-B					53	3LD 301 2	/ L 2200	10		1000.	100		1800 .				408
ZB600C-1-E					73			MA	CK				A1800.				523
ZH600-B					83	FC	NΙΛ			750	1950		K 1800 .				5510
						E6 F7			NA NA				1800 .				614!
		LIST	ΓER			E/		300 350			1561 1679		A 1800 . K 1800 .				6920 7550
HL3	2500			900	315				NA		1934		A 1200 .				755 1992
HL4					421			400 427			2136		K 1200 .				1332 2115
п <b>.</b> 4 HL6					630				NA		2315		1200 . 1800 .				2113
HLT6					756				NA		1550		A 1800 .				924
HR2					184				5NA		1653		K 1800 .				997
HR3					277			355/380			1767		1800 .				204
HRW2					186	E9					3050		1800 .				256
HRW3					277	EN291					448		1800 .				277
HRW4	2200	62	146		368	EN331			206		519		1800 .				161
HRW6					554	EN402					620		1800 .				196
HRWS6	2000	102	200	900	504	EN438	2600		247	900	622	S6B-PTK	1800 .	360	880		221
LT1				900	60	EN540	2400 .		280	900	705		1800 .			900	3123
LV1				900	71	EN707C	2100 .		306	900	771	S6N-PTA	1800 .	565	1380	900	3476
LV2	3600	18	55	900	139	END465	2600		325	900	819	S6N-PTk	1800 .	615	1480	900 .	372
ST1				900	78	END475	2400 .		280	900	705	S6U-PTA	1200 .	1550	3960	900	9973
TL2					186	END56730	2100	250	600	900	1511		1200 .			900 .	1057
TL3					280	END5864.					2141		1800 .				408
TS2					154	END673E.					1007	1	1800 .				463
TS3	3000	33	91	900	229	END707					1033	S8N-PTk	1800 .	810	1980	900	498
	10	MDA	ARDIN			END864B					1360		ATIL OF	MOD.	TU AR	/EDI/	^ A
	_			ı		ENDT475.					1159	IN	ITU OF	חטעו	ΙПΑΝ	VIENI	A
IOLD 400-2.		16	34	1000	92	ENDT673.					1511	12V-396-					
10LD 400-2/						ENDT675. ENDT676.					1574		1845.	1560	3919		3338
	3600				111	ENDT864					2015 2166	12V-396-					
I1LD 535-3.					200	ENDT865.					2418			1200	4534		3862
11LD 625-3.					227	ENDT866.					2644	12V-396-					
3LD 450					54	ENDTF67					1675	01/ 000 T		1300	2902		2472
BLD 510					59	ENDTF67					1574	8V-396-T					
BLD 510/L					46	LIVETTON			020	000	1074	01/ 000 T		1050	2436		207
1LD 640					76		MER	CED	ES-BE	NZ		8V-396-T		1000	0044		050
ILD 640/L					59	OM314					420	0\/ 20C T		1800	2944		2508
1LD 705					73						428	8V-396-T		070	106/		1500
1LD 820 1LD 820/L					87	OM346					1075		1745.	0/0	1864		1588
FLD 620/L 5LD 675-2					73 157	OM352 OM352A					655 846		T.	ΙΔVΙ	STAR		
5LD 675-2 5LD 675-3					235	OM355					824	4 400					
5LD 875-3 5LD 825-2					170	OM360					776		3800 .				48
5LD 825-2 5LD 825-2/L					170	OM401					856		3000 .				89
5LD 825-2/L 5LD 825-3					254	OM401					856		144).2600.				135
5LD 825-3 5LD 825-3/L					216	OM403					1166		3000 .				94
5LD 825-4					338	OM404			738		1859		550)2800.				114
5LD 825-4 5LD 825-4/L					287	OM407					1209		2500 .				32
5LD 930-3					284	OM407					1410	C-221					370
5LD 930-4					379	OM407h					1209		2800 .				477
6LD 260					41	0M407h					1410	C 2/1E	2800 . 3000 .	I I 8	183		540
6LD 260/C.					38	OM421					1088	U-345	. ۵۷۷۵				668

**256** • Engine Air Filtration www.buydonaldson.com

900 ...... 1410

NAVISTAR CONTINUED

1150 ..... 760

C-392......180.....255

 $0\,M422\,.....2300\,.....\,280\,.....560$ 



				Exhaust
Engine Model	RPM	НР	Intake CFM	Temp. Flow (°F) (CFM)
C-549	3200	232.	381	1150 1136
C135B	2400	46.	70	1150 209
C153	2400	53.	80	1150 239
C175	2500	63.	95	1150 283
D155	2500	48.	95	900 239
D179	2400	59.	99	900 249
D188	2400	62.	104	900 262
D206	2500	56.	119	900 300
D236				900 330
D239				900 348
D268				900 416
D282				900 393
D310				900 416
D312				900 544
D312 D360				
				900 630
D370				900 473
D407				900 617
D414				900 723
D466				900 813
D550B				900 962
D554	2300	150.	294	900 740
D691				900 645
DT239				900 567
DT358				900 856
DT360	2700	190.	588	850 1426
DT361	2600	146.	341	900 859
DT402				900 957
DT407				900 927
DT414				900 1131
DT420				900 1015
DT466				737 1520
DT466				765 1530
DT466				855 1710
DT466				845 1640
DT466				984 1820
DT573				900 1357
DT573B DT817				900 1322
				900 2456
DT817B				900 2456
DT817C				900 2456
DVT800				900 1894
MV-404				1150 939
MV-446				1150 1038
UC60				1150 98
UR-450				1150 698
UV-401				1150 725
V-304	4400	180.	298	1150 888
V-345	3800	172.	284	1150 847
V-345	3800	168.	284	1150 847
V-392	3600	236.	306	1150 912
V-537				1150 1109
VS-478				1150 1049
VS-549				1150 1136
		NISS		
A-12				900 186
A-15				900 239
ED-33				900 423
FD-33T				900 592
FD-6				900 612
FD-6T				900 856
H-20				900 207
H-30				900 257
п-зи J-15				900 139
	2600			900 201

				Exhaust
Engine Model	RPM	НР	Intake CFM	Temp. Flow (°F) (CFM)
ND-6				900 655
P-40 PD-6				900 302 900 907
PD-6T				900 1272
PE-6				900 1028
PE-6T				900 1436
RD10				900 1718
RD10T	2400	415	1000	900 2519
RD10TA				900 3022
RD8				900 1373
RD8T				900 1922
SD-16 SD-22				900 214 900 277
SD-22				900 317
SD-23				900 416
SD-33T				900 579
		ERK		
3.1522				900 239
4-107 4-108				900 249
4-108				900 252 900 322
4-203				900 307
4-236				900 385
4-248				900 363
4-270				900 315
4-300				900 383
4-302				900 405
4-318				900 370
4-99				900 232
4.108 4.165				900 257
4.165				900 340 900 295
4.236				900 395
4.248				900 383
4.318	2000		140	900 353
6-305	2600	89	184	900 463
6-354				900 579
6-372				900 541
6.247				900 516
6.3544 6.3724				900 599 900 572
D3-152				900 222
D3.152				900 8
D4.203				900 8
T6-354				900 773
T6-354-3				900 806
T6.3544				900 932
TV8.640				900 1725
V8-510 V8-540				900 834
V8-540 V8-605				900 786 900 881
V8.540				900 932
V8.640				900 1035
	D	ENA	HIT	
18TS/GTS				1150 686
20 TL/GTL				1150 596
20 TX				1150 686
20 TX	5000	112	230	1150 686
4 GTL				1150 209
4L/TL				1150 119
9 TD/GTD				900
FUEGO TUF	₹BU D 4250	OE.	211	900 531
	4Z3U	ბე	∠۱۱	JUU 03 I

Engine Model	RPM	НР	Intake CFM	Exhaust Temp. Flow (°F) (CFM)
TRAFIC				1150 268
TRAFIC		46.	90	1150 268
TRAFIC PRO	)P 4000	EC	140	900353
	4000	50.	140	300
		SAN	ΛE	
1052 LP	2500	39.	83	71
1053 P	2500	64.	124	106
1054 P				141
1054 PT				129
1055 P 1056 P				175 211
1056 PS				194
1056 PT				194
916.3A				112
916.4A	3000	81.	175	149
	TI	EI EN	YNE	
A CN				11
ACN AENL				11
AGND				22
BKN				14
EY18-3W				9
EY21W				28
EY25W				13
EY27W EY44W				14
NH4D				
R08				51
R11				62
R14	4200	48.	105	89
R17				153
R22				187
RD16 RD21				115
S-12D				26
S-14D				26
S-8D				15
TJD	3600	18.	48	41
TM13				60
TM13				38
TM20				85
TM20 TM27				
TM27				102
TMD13				61
TMD20				94
TMD27				256
TRA-12D				21
V-465D V460D				113
VE4				41
VF4				48
VG4D				64
VH4				52
VH4D				55
VR4D				104
W2-1230 W2-1235				47
W2-1235 W2-880	3600 3600	3U. 2N	0ŏ 44	37
W4-1770				61
WD1-340				15
	TELEDY			IED
14/04 000				
WD1-350	3000	8.	20	17

Engine Air Filtration • 257 www.buydonaldson.com

# Engine Air Consumption Guide



Engine Model	RPM	НР	Intake CFM	Exhaust Temp. Flow (°F) (CFM)
WD1-450	3400	10	26	22
WD1-660	3000	15	38	32
WD1-670	3000	16.	40	34
WD1-750	3000	17.	43	37
WD2-1000	3000	21.	52	44
WD2-860	3000	19.	48	41
WI-145	4000	4.	8	7
WI-145V	3600	4.	8	7
WI-185	3600	5.	10	9
WI-185V	3600	5.	10	9
WI-340	3600	9.	20	17
WI-390	3600	11	22	19
WI-588	3600	16.	34	29
	VOL	.KSV	<b>VAGO</b> I	N
026.2	2200	70.	140	1150 417
068.5	4000	48.	90	900 227
068.A	4000	60.	120	900 302
075.1	4000	75	145	900 365

VOLKSWAGON									
026.2	2200	70	140	1150 417					
068.5	4000	48	90	900 227					
068.A	4000	60	120	900 302					
075.1	4000	75	145	900 365					
126A	2000	45	90	1150 268					

VOLVO	
D45BPP 2300 75 195	900 491
TD100G2000 223460	900 1159
TD100GPP2000223460	900 1159
TD120HP2000286575	900 1448
TD121G2000 284575	900 1448
TD45B2200 90235	900 592
TD61A2500 154330	900 831
TD61AP2500 165350	900 881
TD61AW 2500 162 350	900 881
TD71A2200 189360	900 907
TD71AP2200 192360	900 907
TD71AW 2400 190360	900 907
TID100KPP2000249515	900 1297
TID121KP2000343695	900 1750
TID121LP 1800 401 800	900 2015
TID71A2200 216380	900 957
TID71AP 2200 209400	900 1007

	W	AUKE	:SHA	
190DLC	2800	84	128	109
197DLC	2800	91	208	177

Engine			Intake	Exh Temp.	aust Flow
Model	RPM	НР	CFM	(°F)	
				` '	. ,
197DLCS D317D					273 243
D317D					243
F1197D					528
F1197DS					818
F1197DSI					937
F1905DS					733
F1905DSI					865
F2896D					685
F2896DS	1200	695.	1032		879
F2896DSI					1112
F475D					375
F475DS					443
F674D					460
F674DS					469
H1077D					537
H1077DS					920
H1077DSI					1014
H866DS					784
L1616D					801
L1616DS L1616DSI					1431 1576
L1616DS1					1576 1210
L5100D					1849
L5100DS					2181
L5790D					1457
L5790DS					2215
L5790DSI	—				2624
LRDCS					879
NKDC					482
NKDCS					733
P2154D	2200	592.	1420		1210
P2154DS					2087
P2154DSI					2215
VLRD					1457
VLRDS					2215
VRD232					136
VRD283					153
VRD310					217
WAKD					451
WAKDS	1800	400.	810		690

**WHITE ENG** 

D-2000......2600 ......70.....120 D-2300.....2400 ......137

Engine Model	RPM	НР	Intake CFM	Exhaust Temp. Flow (°F) (CFM
D-2300T	2400		211	180
D-3000	2800	110.	193	164
D-3000T	2600	130.	280	239
D-3300T	1800		175	149
D-3400	2400		210	179
D-3400T	2400		333	284
D-4800	2400		260	22
D-4800T	2400		400	341
D-4800TA	2400		400	34
D-4800TAH	1800		431	367
G-1600	2400		102	87
G-2000	2800	84.	120	102
G-2300	2400		130	111
G-3000	2800	130.	181	154
G-3400	2400		210	179
	١	/ANI	MAR	
12LAAL-DT	1800	. 1060.	2772	900 698
3T95LE	2800	51.	114	900 287
4HAL	1800	110.	260	900 655
4T95LE	2800	68.	150	900 378
4T95LTE	2800	85.	208	900 524
6HAL	1800	165.	390	900 982

d-34002400210	179
YANMAR	
12LAAL-DT180010602772 3T95LE280051114 4HAL1800110260 4T95LE280068150 4T95LTE280085208 6HAL1800165390 6HAL-DT1800330837 6HAL-HT1800264692 6HAL-T1800209512 6LAAL-DT18005301370	900 6981 900 287 900 655 900 378 900 524 900 2108 900 2108 900 1289 900 1289
6T95LE2800 102233	900 587
6T95LTE2800128314 8LAAL-DT18007051800	900 791 900 4533







All air cleaner housings and intake accessories featured in this catalog are listed in this section by part number in alpha/numeric order. If you have a part number (for instance, H000466), but don't know what it is, this section will tell you a brief description and the page number where the item can be found in this catalog.

Some descriptions in this section list the first two letters of the air cleaner series name. For instance, ST includes all STB and STG air cleaners; EB includes all EBA and EBB air cleaners; and so on.

If an air cleaner model directs you to the Air Cleaner Service Parts Section, you will be able to find service parts that are still available for an obsolete air cleaner model.

#### **Abbreviations**

A/C = Air Cleaner Assembly HORZ = Horizontal ID = Inner Diameter OD = Outer Diameter PER = Peripheral Inlet RS = Rain Shield TUB or TUBE = Tubular Inlet VERT = Vertical

Part	Page	
No.	No.	Product Description
4042511	199-218	Air Cleaner, FGA
A052526	199-218	Air Cleaner, FWA
A052527	199-218	Air Cleaner, FWA
A060022	199-218	Air Cleaner, FGA
A065007	199-218	Air Cleaner, FWA
A065015	199-218	Air Cleaner, FWA
A080022	199-218	Air Cleaner, FWA
A080031	199-218	Air Cleaner, FWA
092018	199-218	Air Cleaner, EBA-KPI
A092019	199-218	Air Cleaner, EBA-KPII
092037	64-65	Air Cleaner, EBA Konepac
100013	199-218	Air Cleaner, FGA
A100017	199-218	Air Cleaner, FWA
100019	199-218	Air Cleaner, FWA
110007	199-218	Air Cleaner, EBA-CYL
110052	59-60	Air Cleaner, ERA RadialSeal
112018	64-65	Air Cleaner, EBA Konepac
112078	64-65	Air Cleaner, EBA Konepac
120003	199-218	Air Cleaner, FWA
120036	199-218	Air Cleaner, FWA
127200	199-218	Air Cleaner, FGA
130045	199-218	Air Cleaner, EBA-CYL
130060	199-218	Air Cleaner, EBA-CYL
130087	199-218	Air Cleaner, EBA-CYL
130115	59-60	Air Cleaner, ERA RadialSeal
132001	64-65	Air Cleaner, EBA Konepac
132004	199-218	Air Cleaner, EBA-KPI
132020	199-218	Air Cleaner, EBA-KPII
140002	199-218	Air Cleaner, FWA
140003	199-218	Air Cleaner, FWA
140033	199-218	Air Cleaner, FWA
140036	199-218	Air Cleaner, FWA
144800	199-218	Air Cleaner, FGA
144900	199-218	Air Cleaner, FGA
145200	199-218	Air Cleaner, FGA
150039	199-218	Air Cleaner, EBA-CYL
A150128		Air Cleaner, EBA-CYL
A150138	59-60	Air Cleaner, ERA RadialSeal
A150141	59-60	Air Cleaner, ERA RadialSeal
A150174	199-218	Air Cleaner, EBA-CYL
A160001	199-218	Air Cleaner, FWA

Part No.	Page No.	Product Description
A160013	199-218	Air Cleaner, FWA
A160173	199-218	Air Cleaner, EBA-CYL
A161500	199-218	Air Cleaner, FGA
A161600	199-218	Air Cleaner, FGA
B045008	83-84	Air Cleaner, FKB
B055006	83-84	Air Cleaner, FKB
B065045	83-84	Air Cleaner, FKB
B080080	91-92	Air Cleaner, XRB
B085001	47-48	Air Cleaner, ECB DuraLite
B085008	47-48	Air Cleaner, ECB DuraLite
B085011	47-48	Air Cleaner, ECB DuraLite
B085046	47-48	Air Cleaner, ECB DuraLite
B085048	47-48	Air Cleaner, ECB DuraLite
B085056	47-48	Air Cleaner, ECB DuraLite
B100001	199-218	Air Cleaner, FWB
B100002	199-218	Air Cleaner, FWB
B100028	199-218	Air Cleaner, STB
B100127	90-91	Air Cleaner, XRB
B105002	47-48	Air Cleaner, ECB DuraLite
B105006	47-48	Air Cleaner, ECB DuraLite
B105020	47-48	Air Cleaner, ECB DuraLite
B120105	199-218	Air Cleaner, EBB-STYB
B120129	199-218	Air Cleaner, STB
B120271	74	Air Cleaner, EBB
B120376	47-48	Air Cleaner, ECB DuraLite
B120439	47-48	Air Cleaner, ECB DuraLite
B120470	91-92	Air Cleaner XRB
B125003	47-48	Air Cleaner, ECB DuraLite
B125005	47-48	Air Cleaner, ECB DuraLite
B125011	47-48	Air Cleaner, ECB DuraLite
B140019	199-218	Air Cleaner, STB
B140044	74	Air Cleaner, EBB
B140149	199-218	Air Cleaner, EBB-STYB
B140150	199-218	Air Cleaner, EBB-STYB
B160049	74	Air Cleaner, EBB
B160071	161	Air Cleaner, STB
C045001	47-48	Air Cleaner, ECC DuraLite
C045002	47-48	Air Cleaner, ECC DuraLite
C055002	47-48	Air Cleaner, ECC DuraLite
C055003	47-48	Air Cleaner, ECC DuraLite
C065001	47-48	Air Cleaner, ECC DuraLite

Part No.	Page No.	Product Description
C065002	47-48	Air Cleaner, ECC DuraLite
C065003	47-48	Air Cleaner, ECC DuraLite
C065015	47-48	Air Cleaner, ECC DuraLite
C085001	47-48	Air Cleaner, ECC DuraLite
C085002	47-48	Air Cleaner, ECC DuraLite
C085003	47-48	Air Cleaner, ECC DuraLite
C085004	47-48	Air Cleaner, ECC DuraLite
C085005	47-48	Air Cleaner, ECC DuraLite
C085006	47-48	Air Cleaner, ECC DuraLite
C085041	47-48	Air Cleaner, ECC DuraLite
C085043	47-48	Air Cleaner, ECC DuraLite
C105003	47-48	Air Cleaner, ECC DuraLite
C105004	47-48	Air Cleaner, ECC DuraLite
C105017	47-48	Air Cleaner, ECC DuraLite
C105028	47-48	Air Cleaner, ECC DuraLite
C125004	47-48	Air Cleaner, ECC DuraLite
D045003	47-48	Air Cleaner, ECD DuraLite
D045004	47-48	Air Cleaner, ECD DuraLite
D055004	47-48	Air Cleaner, ECD DuraLite
D065003	47-48	Air Cleaner, ECD DuraLite
D065008	47-48	Air Cleaner, ECD DuraLite
D080020	35-37	Air Cleaner, PSD, PowerCore®
D080026	35-37	Air Cleaner, PSD, PowerCore®
D080056	35-37	Air Cleaner, PSD, PowerCore®
D090055	35-37	Air Cleaner, PSD, PowerCore®
D090073	35-37	Air Cleaner, PSD, PowerCore®
D090101	35-37	Air Cleaner, PSD, PowerCore®
D090120	35-37	Air Cleaner, PSD, PowerCore®
D090121	35-37	Air Cleaner, PSD, PowerCore®
D100029	35-37	Air Cleaner, PSD, PowerCore®
D100030	35-37	Air Cleaner, PSD, PowerCore®
D100031	35-37	Air Cleaner, PSD, PowerCore®
D100032	35-37	Air Cleaner, PSD, PowerCore®
D100068	35-37	Air Cleaner, PSD, PowerCore®
D100072	35-37	Air Cleaner, PSD, PowerCore®
D120035	35-37	Air Cleaner, PSD, PowerCore®
D120036	35-37	Air Cleaner, PSD, PowerCore®
D120037	35-37	Air Cleaner, PSD, PowerCore®
D120038	35-37	Air Cleaner, PSD, PowerCore®
D140078	35-37	Air Cleaner, PSD, PowerCore®
D140070	25.27	A: CI DCD D DC

D140079 35-37 Air Cleaner, PSD, PowerCore®



Part No.	Page No.	Product Descri	iption
DBA5002	199-218	ilter, primary - Donaldson	Blue <sup>™</sup>
DBA5007	199-218	Filter, primary - Donaldson	Blue <sup>™</sup>
DBA5008	199-218	Filter, primary - Donaldson	Blue <sup>™</sup>
DBA5015	75	Filter, primary - Donaldson	Blue <sup>™</sup>
DBA5016	199-218	Filter, primary - Donaldson	
DBA5024		Filter, primary - Donaldson	
DBA5025	65	Filter, primary - Donaldson	
DBA5026	65	Filter, primary - Donaldson	
DBA5027	70-71	Filter, primary, no cover - Do	71
DBA5028	75	Filter, primary - Donaldson	Blue <sup>™</sup>
DBA5029	70-71	Filter primary, no cover - Do	
		Filter, primary - Donaldson	
		Filter, primary - Donaldson	
		Filter, primary - Donaldson	
		Filter, primary - Donaldson	
DBA5041	146	Filter, primary - Donaldson	
		Filter, primary - Donaldson	
		Filter, primary - Donaldson	
DBA5044		Filter, primary - Donaldson	
	70-71	Filter, primary - Donaldson	
DBA5047		ilter, primary, attached cov	
DBA5049		Filter, primary - Donaldson	
DBA5053		Filter, primary, attached cov	
		ilter, primary - Donaldson	
DBA5059 DBA5067		Filter, primary - Donaldson	
DBA5067		Filter, primary - Donaldson Filter, primary - Donaldson	
	75	Filter, primary - Donaldson	
		Filter, primary - Donaldson	
DBA5109		Filter, primary - Donaldson	
		Filter, primary - Donaldson	
		Filter, primary - Donaldson	
		Filter, primary - Donaldson	
		Filter, primary - Donaldson	
		Filter, primary - Donaldson	
DBA5136		Filter, primary - Donaldson	
DBA5148	60	Filter, primary - Donaldson	
DBA5149	60	Filter, primary - Donaldson	
DBA5150	60	Filter, primary - Donaldson	
DBA5151	60	Filter, primary - Donaldson	
DBA5152	136-138	Filter, primary - Donaldson	Blue <sup>™</sup>
DBA5153	136-138	Filter, primary - Donaldson	Blue <sup>™</sup>
DBA5204	199-218	ilter, primary - Donaldson	Blue <sup>™</sup>
DBA5220	155-117	Filter, primary - Donaldson	Blue <sup>™</sup>
DBA5221	113-117	Filter, primary - Donaldson	
DBA5222	116	Filter, primary - Donaldson	
DBA5223	116	Filter, primary - Donaldson	
DBA5224	104	Filter, primary - Donaldson	
DBA5225	104	Filter, primary - Donaldson	
DBA5226	104	Filter, primary - Donaldson	
DBA5227	104	Filter, primary - Donaldson	
DBA5228	104	Filter, primary - Donaldson	
DBA5230	116	Filter, primary - Donaldson	
DBA5231		Filter, primary - Donaldson	
		Filter, primary - Donaldson	
DBA5234	199-218	Filter, primary - Donaldson	Diue

Part No.	Page No.	Product Description
G042503	199-218	Air Cleaner, FWG
G042529	199-218	Air Cleaner, FWG
G042544	101-103	Air Cleaner, FPG RadialSeal
G042545	101-103	Air Cleaner, FPG RadialSeal
G042547	199-218	Air Cleaner, FPG
G042549	199-218	Air Cleaner, FPG
G052510	199-218	Air Cleaner, FWG
G052512	199-218	Air Cleaner, FWG
G052558	199-218	Air Cleaner, FHG-STYA
G052559	199-218	Air Cleaner, FHG-STYA
G052560	199-218	Air Cleaner, FHG-STYA
G052561	199-218	Air Cleaner, FHG-STYA
G052617	199-218	Air Cleaner, FHG-STYA
G052685	113-117	Air Cleaner, FRG RadialSeal
G052686	113-117	Air Cleaner, FRG RadialSeal
G057511	101-103	Air Cleaner, FPG RadialSeal
G057512	101-103	Air Cleaner, FPG RadialSeal
G057513	101-103	Air Cleaner, FPG RadialSeal
G057514	101-103	Air Cleaner, FPG RadialSeal
G057516	199-218	Air Cleaner, FPG
G057517	199-218	Air Cleaner, FPG
G060003	199-218	Air Cleaner, SDG-PER
G065008	199-218	Air Cleaner, FWG
G065012	199-218	Air Cleaner, FWG
G065104	199-218	Air Cleaner, FHG-STYA
G065113	199-218	Air Cleaner, FHG-STYA
G065212	199-218	Air Cleaner, FHG-STYA
G065256	199-218	Air Cleaner, FHG-STYA
G065261	199-218	Air Cleaner, FHG-STYB
G065266	199-218	Air Cleaner, FWG
G065359	199-218	Air Cleaner, FHG-STYB
G065360	199-218	Air Cleaner, FHG-STYB
G065411	101-103	Air Cleaner, FPG RadialSeal
G065424	101-103	Air Cleaner, FPG RadialSeal
G065426	199-218	Air Cleaner, FPG
G065427	199-218	Air Cleaner, FPG
G065432	101-103	Air Cleaner, FPG RadialSeal
G065433	101-103	Air Cleaner, FPG RadialSeal
G065541	113-117	Air Cleaner, FRG RadialSeal
G065551	113-117	Air Cleaner, FRG RadialSeal
G070017	101-103	Air Cleaner, FPG RadialSeal
G070018	101-103	Air Cleaner, FPG RadialSeal
G070019	101-103	Air Cleaner, FPG RadialSeal
G070020	101-103	Air Cleaner, FPG RadialSeal
G080009	199-218	Air Cleaner, SBG-PER
G080010		Air Cleaner, SBG-TUB
G080023		Air Cleaner, FWG
G080026		Air Cleaner, FWG
G080147		Air Cleaner, FHG-STYB
G080195		Air Cleaner, FHG-STYA
G080200		Air Cleaner, FHG-STYA
G080372		Air Cleaner, FHG-STYB
G080490		Air Cleaner, FHG-STYB
G080491		Air Cleaner, FHG-STYB
G080582		Air Cleaner, FRG RadialSeal
G080585	113-11/	Air Cleaner, FRG RadialSeal

Part No.	Page No.	Product Description
G082525		Air Cleaner, FPG RadialSeal
G082526		Air Cleaner, FPG RadialSeal
G082527		Air Cleaner, FPG RadialSeal
G082528		Air Cleaner, FPG RadialSeal
G090022		Air Cleaner, FHG-STYA
G090024	199-218	Air Cleaner, FHG-STYA
G090182		Air Cleaner, FHG-STYB
G090183	199-218	Air Cleaner, FHG-STYB
G090219	101-103	Air Cleaner, FPG RadialSeal
G090225	101-103	Air Cleaner, FPG RadialSeal
G090245	113-117	Air Cleaner, FRG RadialSeal
G090250	113-117	Air Cleaner, FRG RadialSeal
G092001	69-71	Air Cleaner, ECG Konepac
G092004	199-218	Air Cleaner, ECG-KPII
G092401	69-71	Air Cleaner, ECG Konepac
G092501	199-218	Air Cleaner, ECG-KPI
G100003	199-218	Air Cleaner, FWG
G100004	199-218	Air Cleaner, FWG
G100028	199-218	Air Cleaner, FHG-STYA
G100029	199-218	Air Cleaner, FHG-STYA
G100035	199-218	Air Cleaner, FHG-STYA
G100036	199-218	Air Cleaner, FHG-STYA
G100160	199-218	Air Cleaner, SBG-PER
G100161	199-218	Air Cleaner, SBG-TUB
G100297	113-117	Air Cleaner, FRG RadialSeal
G100317	101-103	Air Cleaner, FPG RadialSeal
G100319	101-103	Air Cleaner, FPG RadialSeal
G100395	113-117	Air Cleaner, FRG RadialSeal
G100398	113-117	Air Cleaner, FRG RadialSeal
G110103	199-218	Air Cleaner, FTG
G110119	54-55	Air Cleaner, EPG 11" RadialSeal
G110120	54-55	Air Cleaner, EPG 11" RadialSeal
G110206	113-117	Air Cleaner, FRG RadialSeal
G110214	113-117	Air Cleaner, FRG RadialSeal
G112000	199-218	Air Cleaner, ECG-KPII
G112001	69-71	Air Cleaner, ECG Konepac
G112401	199-218	Air Cleaner, ECG-KPI
G112404	69-71	Air Cleaner, ECG Konepac
G112417	69-71	Air Cleaner, ECG Konepac
G112501	69-71	Air Cleaner, ECG Konepac
G112504	69-71	Air Cleaner, ECG Konepac
G120012	199-218	Air Cleaner, FHG-STYA
G120014	199-218	Air Cleaner, FHG-STYA
G120036	199-218	Air Cleaner, FHG-STYA
G120037	199-218	Air Cleaner, FHG-STYA
G120059	199-218	Air Cleaner, FWG
G120063		Air Cleaner, FWG
G120075	199-218	Air Cleaner, STG-PER
G120250		Air Cleaner, SBG-PER
G120251		Air Cleaner, SBG-TUB
G120332		Air Cleaner, STG Donaclone Tubular
G120415		Air Cleaner, FRG RadialSeal
G120417		Air Cleaner, FRG RadialSeal
G130043		Air Cleaner, FTG
G130079	54-55	Air Cleaner, EPG 13" RadialSeal
G130089	54-55	Air Cleaner, EPG 13" RadialSeal
2.50000	0.00	Journey 2. O 10 Hadianoodi



Part No.	Page No.	Product Description
G130097	113-117	Air Cleaner, FRG RadialSeal
G130107	113-117	Air Cleaner, FRG RadialSeal
G132000	69-71	Air Cleaner, ECG Konepac
G140022	199-218	Air Cleaner, FHG-STYA
G140023	199-218	Air Cleaner, FHG-STYA
G140054	199-218	Air Cleaner, FHG-STYA
G140055	199-218	Air Cleaner, FHG-STYA
G140076	145-147	Air Cleaner, STG Donaclone Peripheral
G140083	199-218	Air Cleaner, FWG
G140195	128-129	Air Cleaner, FVG Cycloflow
G140260	199-218	Air Cleaner, SBG-PER
G140261	199-218	Air Cleaner, SBG-TUB
G140270	199-218	Air Cleaner, SBG-PER
G140523	113-117	Air Cleaner, FRG RadialSeal
G140526	113-117	Air Cleaner, FRG RadialSeal
G150039	199-218	Air Cleaner, FTG
G150048	54-55	Air Cleaner, EPG 15" RadialSeal
G150049	54-55	Air Cleaner, EPG 15" RadialSeal
G150092	113-117	Air Cleaner, FRG RadialSeal
G160035	199-218	Air Cleaner, SBG-TUB
G160048	199-218	Air Cleaner, FHG-STYA
G160049	199-218	Air Cleaner, FHG-STYA
G160057	199-218	Air Cleaner, FHG-STYA
G160077	145-147	Air Cleaner, STG Donaclone Peripheral
G160078	199-218	Air Cleaner, FHG-STYA
G160104	199-218	Air Cleaner, FWG
G160107	199-218	Air Cleaner, FWG
G160158	199-218	Air Cleaner, STG-TUB
G160254	199-218	Air Cleaner, FHG-STYA
G160331	199-218	Air Cleaner, SBG-TUB
G160340	199-218	Air Cleaner, SBG-PER
G160359	199-218	Air Cleaner, SBG-PER
G160376	128-129	Air Cleaner, FVG Cycloflow
G160443	199-218	Air Cleaner, STG-PER
G160445	145-147	Air Cleaner, STG Donaclone Tubular
G160587	128-129	Air Cleaner, FVG Cycloflow
G160679	113-117	Air Cleaner, FRG RadialSeal
G161006	145-147	Air Cleaner, STG Donaclone Peripheral
G161020	145-147	Air Cleaner, STG Donaclone Tubular
G180031	113-117	Air Cleaner, FRG RadialSeal
G200008	154-156	Air Cleaner, SRG Donaclone, Vertical
G200013	154-156	Air Cleaner, SRG Donaclone, Vertical
G200016	199-218	Air Cleaner, SRG
G200086	136-138	Air Cleaner, SSG Donaclone, RadialSeal
G200087	136-138	Air Cleaner, SSG Donaclone, RadialSeal
G200088	136-138	Air Cleaner, SSG Donaclone, RadialSeal
G210007	122-123	Air Cleaner, FTG Cycloflow
G210010	122-123	Air Cleaner, FTG Cycloflow
G290000	154-156	Air Cleaner, SRG Donaclone, Vertical
G290001	199-218	Air Cleaner, SRG
G290010	199-218	Air Cleaner, SRG
G290012		Air Cleaner, SRG Donaclone, Vertical
G290023		Air Cleaner, SRG Donaclone, Vertical
G290052		Air Cleaner, SSG Donaclone, RadialSeal
		Air Cleaner, SSG Donaclone, RadialSeal
G290053	100 100 1	All Olcanol, ood Dollacione, Hadialocal

Part No.	Page No.	Product Description
G290057	136-138	Air Cleaner, SSG Donaclone, RadialSeal
H000165	179	Inlet Hood, metal
H000170	179	Inlet Hood, metal
H000275	179	Inlet Hood, metal
H000276	179	Inlet Hood, metal
H000339	179	Inlet Hood, metal
H000349	180	Mounting Band
H000350	180	Mounting Band
H000351	180	Mounting Band
H000466	179	Inlet Hood, plastic
H000467	179	Inlet Hood, plastic
H000468	179	Inlet Hood, plastic
H000469	179	Inlet Hood, plastic
H000470	179	Inlet Hood, plastic
H000471	179	Inlet Hood, plastic
H000472	179	Inlet Hood, plastic
H000473	179	Inlet Hood, plastic
H000483	198	Air Stack Extension
H000484	198	Air Stack Extension
H000604	179	Inlet Hood, plastic
H000605	179	Inlet Hood, ST 12" Tube A/C
H000606	179	Inlet Hood, plastic
H000607	179	Inlet Hood, plastic
H000672	162	Pre-Cleaner Hood Assembly-STB
H000722	195	Ejector Check Valve
H000820	175	Pre-Cleaner, Full-View
H000821	175	Pre-Cleaner, Full-View
H000823	175	Pre-Cleaner, Full-View
H000858	175	Pre-Cleaner, Full-View
H000875	177	In-Line, Horizontal Separator
H000878	177	In-Line, Vertical Separator
H000886	177	In-Line, Vertical Separator
H001009	162	Pre-Cleaner Body Assembly-STB
H001023	195	Ejector Check Valve
H001053	179	Inlet Hood, plastic
H001063	179	Inlet Hood, plastic
H001200	196	Air Ram, Low Profile
H001212	176	Donaspin P/C & Exhaust Ejector, 3" ID
H001215	176	Donaspin P/C & Exhaust Ejector, 4.50" ID
H001220	177	In-Line Separator, Vertical , 8"
H001249	175	Pre-Cleaner, Full-View
H001250	175	Pre-Cleaner, Full-View
H001251	175	Pre-Cleaner, Full-View
H001308	176	DonaSpin P/C & Exhaust Ejector, 5" ID
H001375	176	DonaSpin P/C & Exhaust Ejector, 6" ID
H001377	179	Inlet Hood, plastic, 2" OD
H001378	179	Inlet Hood, plastic, 3" OD
H001379	179	Inlet Hood, plastic, 3.5" OD
H001474	177	In-Line Separator, Horizontal, 4"
H001654	196	Air Ram, Louvered
H001660	196	Air Ram, Louvered
H001661	196	Air Ram, Louvered
H001742	179	Inlet Hood, Bright SSTL, 7" OD
H001756	179	Inlet Hood, Bright SSTL Low Profile, 6" ID
H001773	179	Inlet Hood, EB A132020 A/C

No. No. Product Description  H001906 177 In-Line Separator, Horizontal H001946 179 Inlet Hood, Bright Stainless, 8" 0D	
H001946 179 Inlet Hood, Bright Stainless, 8" OD	
U001047 170 Inlat I and Dui-let Ct-! 7" OD	
H001947 179 Inlet Hood, Bright Stainless, 7" OD	
H001948 179 Inlet Hood, Bright Stainless, 6" OD	
H002023 102 Mounting Band	
H002040 175 Pre-Cleaner, Full-View	
H002042 175 Pre-Cleaner, Full-View	
H002043 175 Pre-Cleaner, Full-View	
H002044 175 Pre-Cleaner, Full-View	
H002045 175 Pre-Cleaner, Full-View	
H002068 179 Inlet Hood, plastic, 1.75"	
H002070 102 Mounting Band, metal	
H002223 175 Pre-Cleaner, Full-View	
H002224 175 Pre-Cleaner, Full-View	
H002394 171 Pre-Cleaner, TopSpin™	
H002425 171 Pre-Cleaner, TopSpin™	
H002426 171 Pre-Cleaner, TopSpin™	
H002427 171 Pre-Cleaner, TopSpin™	
H002431 171 Pre-Cleaner, TopSpin™	
H002432 171 Pre-Cleaner, TopSpin™	
H002433 171 Pre-Cleaner, TopSpin™	
H002434 171 Pre-Cleaner, TopSpin™	
H002435 171 Pre-Cleaner, TopSpin™	
H002436 171 Pre-Cleaner, TopSpin™	
H002437 171 Pre-Cleaner, TopSpin <sup>™</sup>	
H002438 171 Pre-Cleaner, TopSpin™	
H002439 171 Pre-Cleaner, TopSpin™	
H002612 38, 195 Exhaust Ejector	
H002613 38, 195 Exhaust Ejector	
H002614 38, 195 Exhaust Ejector	
H002615 38, 195 Exhaust Ejector	
H002616 38, 195 Exhaust Ejector	
H002617 38, 195 Exhaust Ejector H002618 38, 195 Exhaust Ejector	
H002619 38, 195 Exhaust Ejector H002700 167-168 Pre-Cleaner, Strata™ Cap	
H002704 167-168 Pre-Cleaner, Strata™ Cap	
H002762 38, 195 Exhaust Ejector	
H002763 38, 195 Exhaust Ejector	
H002764 38, 195 Exhaust Ejector	
H002765 38, 195 Exhaust Ejector	
H002766 38, 195 Exhaust Ejector	
H002767 38, 195 Exhaust Ejector	
H002768 38, 195 Exhaust Ejector	
H002769 38, 195 Exhaust Ejector	
H002850 173 Pre-Cleaner, TopSpin™ HD	
H002851 173 Pre-Cleaner, TopSpin™ HD	
H002852 173 Pre-Cleaner, TopSpin™ HD	
H002853 173 Pre-Cleaner, TopSpin™ HD	
H002854 173 Pre-Cleaner, TopSpin™ HD	
H002855 173 Pre-Cleaner, TopSpin™ HD	_
H002856 173 Pre-Cleaner, TopSpin™ HD	
H002857 173 Pre-Cleaner, TopSpin™ HD	
H008441 102 Mounting Band, 8mm Threaded Ho	les
H008442 102 Mounting Band, metal	
H008443 102 Mounting Band, metal	



Part No.	Page No.	Product Description
H008444	102	Mounting Band, metal
H770037	180	Mounting Band, metal
H770068	180	Mounting Band, metal
H770082	179	Inlet Hood
P002348	180	Mounting Band, 5.25" ID A/C
P002351	180	Mounting Band, 6" ID A/C
P003245	180	Mounting Band, 7.75" ID A/C
P004073	180	Mounting Band, metal
P004076	180	Mounting Band, 10.19" ID A/C
P004079	180	Mounting Band, metal
P004307	180	Mounting Band, 8" ID A/C
P004906	180	Mounting Band, 7" ID A/C
P007189	180	Mounting Band, 4" ID A/C
P007191	180	Mounting Band, 6.5" ID A/C, ST 10" PC
P013722	180	Mounting Band, metal
P016330	175	Bowl Assembly, PB 3," 3.75", 4" & 4.5" OD, P/C
P016548	175	Cover Assembly, PB 3", 3.75", 4", 4.5" OD, P/C
P016845	180	Mounting Band
P016972	146	Gasket Kit for Cover OF ST 14" A/C
P017281	136-138	Cover chain
P017283	136-138	Chain connector
P017365	146	Cover Gasket SB, ST 12" A/C
P017367	146	Cover Gasket SB, ST 16" A/C
P017617	146	Latch, Over Center
P020115	175	Bowl Assembly, PB 1.38"-2" OD, P/C
P020116	175	Cover Assembly, PB P/C, 1.38"-2" OD
P020227	175	Bowl Assembly, PB 2"-3" OD, P/C
P020344	175	Bowl Assembly, PB 4", 4.5", 5.0" OD, P/C
P020345	175	Cover Assembly, PB P/C 4", 4.5", 5.0" OD
P020648	175	Cover Assembly, PB P/C, 2"-3" OD
P100089	185	Restriction Tap for Safety Filter Fitting
P100780	146	Body Clamp Assembly
P100794	146	Dust Cup for STG Air Cleaners
P100808	136-138	Clamp Assembly, FH, FW, SB, SR, SS A/C
P100860	146	Dust Cup, STG
P101290	187	Rubber Hump Reducer, 3.5"/3" ID
P101291	187	Rubber Hump Reducer, 4"/3" ID
P101292	187	Rubber Hump Reducer, 4"/3.5" ID
P101293	187	Rubber Hump Reducer, 5"/4" ID
P101294	187	Rubber Hump Reducer, 6"/5.5" ID
P101759	146	Inlet Shroud, ST 16" Peripheral A/C
P101891	187	Rubber Hump Reducer, 5.5"/4" ID
P102820	187	Rubber Hump Reducer 3"/2.5" ID
P102870	146	Inlet Shroud, ST 14" Peripheral A/C
P102948	188	Rubber Reducer, 2"/1.75" ID
P103198	191	Vacuator™ Valve 30 Durometer, 3" Dia.
P103516	187	Rubber Hump Reducer, 5.5"/5" ID
P103530	145-147	Dust Cup, Horz w/VacValve, SB/ST 16" RS/Tube A/C
P104087	188	Rubber Reducer, 2"/1.5" ID
P104088	188	Rubber Reducer, 2.25"/2" ID
P104089	188	Rubber Reducer, 2.5"/2" ID
P104090	188	Rubber Reducer, 2.5"/2.25" ID
P104691	175	Cover Assembly, PB P/C 6"-7" OD
P104973	146	Dust Cup w/Vac Valve, STG
P105220	191	Vacuator™ Valve, 60 Durometer
P105529	186	Rubber 90° Elbow, 2" ID

Part No.	Page No.	Product Description
P105530	186	Rubber 90° Elbow, 2.25" ID
P105531	186	Rubber 90° Elbow, 2.5" ID
P105532	186	Rubber 90° Elbow, 3" ID
P105533	186	Rubber 90° Elbow, 4" ID
P105534	186	Rubber 90° Elbow, 5.5" ID
P105535	186	Rubber 90° Elbow, 6" ID
P105536	186	Rubber 90° Elbow, 7" ID
P105541	187	Rubber 45° Elbow, 2" ID
P105542	187	Rubber 45° Elbow, 2.25" ID
P105543	187	Rubber 45° Elbow, 2.5" ID
P105544	187	Rubber 45° Elbow, 3" ID
P105545	187	Rubber 45° Elbow, 4" ID
P105546	187	Rubber 45° Elbow, 5.5" ID
P105547	187	Rubber 45° Elbow, 6" ID
P105548	187	Rubber 45° Elbow, 7" ID
P105608	188	Rubber Straight Hump, 3" ID
P105609	188	Rubber Straight Hump, 4" ID
P105610	188	Rubber Straight Hump, 5" ID
P105611	188	Rubber Straight Hump, 5.5" ID
P105612	188	Rubber Straight Hump, 6" ID
P105613	188	Rubber Straight Hump, 7" ID
P105622	185	Remote Mnt, 90° Elb Rest Tap. Fitting
P106329	115-117	Air Cleaner Baffle Assembly, FRG
P106593	191	Vacuator™ Valve 60 Durometer
P106637	115-117	Air Cleaner Baffle Assembly
P106771	115-117	Air Cleaner Baffle Assembly
P106952	115-117	Dust Cup/Cover
P107375	145-147	Quick Release Dust Cup, SB, SR, ST A/C
P107377	145-147	Quick Release Dust Cup, SB, ST 16" A/C
P107844	186	Rubber 90° Elbow, 5" ID
P109021	187	Rubber 45° Elbow, 5" ID
P109062	146	Wing Nut
P109107	128-129	
P109153		Cover Assembly, ST 16" A/C
P109296		Vacuator Dust Cup
P109297		Vacuator Dust Cup
P109331	187	Rubber 45° Elbow, 3.5" ID
P110875	146	Air Cleaner Body Assembly
P111414	188	Rubber Straight Hump, 10" ID
P112605	186	Rubber 90° Elbow, 8" ID
P112606	187	Rubber 45° Elbow, 8" ID
P112607 P112608	187	Rubber Hump Reducer, 10"/8" ID
	188	Rubber Straight Hump, 8" ID  Rubber Hump Reducer, 8"/7" ID
P112609 P112610	187	Rubber Hump Reducer, 7"/6" ID
P112611	187 187	Rubber Hump Reducer, 6"/5" ID
P112789		Gasket, Quick Release Dust Cup
P112803	191	Vacuator™ Valve 40 Durometer
P113733	186	Rubber 90° Elbow, 4.5" ID
P114313	187	Rubber 45° Elbow, 10" ID
P114314	186	Rubber 90° Elbow, 10" ID
P114315	187	Rubber Hump Reducer, 8"/6" ID
P114316	187	Rubber 45° Elbow, 4.5" ID
P114317	188	Rubber Straight Hump, 4.5" ID
P114318	186	Rubber 90° Elbow, 3.5" ID
P114319	188	Rubber Straight Hump, 3.5" ID

Part No.	Page No.	Product Description
P114931	145-147	Filter, safety
P115023	146	Lower Body Assembly, ST, SB 16" RS A/C
P115070	155-156	Filter, safety
P115096	136-138	Gasket, Body for SSG, SRG AC
P115098	136-138	Gasket, Body for SSG, SRG AC
P115110	136-138	SRG, SSG AC lower body assembly
P115200	181	Clamp, Hose-type Lined
P115201	181	Clamp, Hose-type Lined
P115202	181	Clamp, Hose-type Lined
P115203	181	Clamp, Hose-type Lined
P115204	181	Clamp, Hose-Type Lined High Torque
P115205	181	Clamp, Hose-Type Lined High Torque
P115206	181	Clamp, Hose-Type Lined High Torque
P115207	181	Clamp, Hose-Type Lined High Torque
P115208	181	Clamp, Hose-Type Lined High Torque
P115209	181	Clamp, Hose-Type Lined High Torque
P116175	128-129	Wing Nut for FV A/C
P116446	128-129	Filter, safety
P117724	186	Rubber 90° Elbow Reducer, 5.5"/6" ID
P117781	155-156	Filter, safety
P117785	136-138	Lower Body Assembly, SSG, SRG A/C
P117791	136-138	Gasket, SR, SSG A/C
P118552	136-138	SSG AC lower body assembly
P119325	60	Nut, Plastic for E Series A/C
P119370	146	Filter, safety
P119371	146	Filter, safety
P119463	60	Bolt
P119874	138	Intake/Rain Shield for SS, SR 29" A/C
P119875	138	Intake/Rain Shield for SS, SR 2" A/C
P119876	136-138	Rain shroud, front
P119877	138	Intake/Rain Shield for SS, SR 29" A/C
P120279	115-117	Cover
P120604	70-71	Gasket, Cover
P121067	115-117	Clamp Assembly, FH, FR 12" A/C
P121482	186	Rubber 90° Elbow Reducer, 4"/5" ID
P122067	185	Restriction Tap Filter Fitting
P123462	186	Rubber 90° Elbow Reducer, 3"/3.5" ID
P124860	128-129	Filter, safety
P124866	128-129	Filter, safety
P124867	128-129	Filter, primary
P126530	187	Rubber Hump Reducer, 7"/5.5" ID
P128408	146	Filter, safety
P128990	186	Rubber 90° Elbow Reducer, 5.5"/7" ID
P129396	65	Filter, primary, treated
P129469	60	Retaining Ring
P129472	65	Filter, primary, treated
P129660	187	Rubber Hump Reducer, 8"/5.5" ID
P133338	187	Rubber 45° Elbow Reducer, 5.5"/6" ID
P133339	187	Rubber 45° Elbow Reducer, 6"/7" ID
P134534	185	Water Manometer Kit
P136494	187	Rubber Hump Reducer, 7"/5" ID
P140822	65	Filter, primary
P141228	65	Filter, primary
P142100	70-71	Filter, primary, no cover
P143422	181	Clamp, Lined Hose-Type
P143895	186	Rubber 90° Elbow Reducer, 5"/6" ID



Part No.	Page No.	Product Description
P148043	70-71	Filter, primary, treated
P148044	70-71	Filter, primary, no cover, treated
P148337	181	Clamp, T-bolt, 2" ID
P148338	181	Clamp, T-bolt, 2.25" ID
P148339	181	Clamp, T-bolt, 2.5" ID
P148340	181	Clamp, T-bolt, 2.75" ID
P148341	181	Clamp, T-bolt, 3" ID
P148342	181	Clamp, T-bolt, 3.5" ID
P148343	181	Clamp, T-bolt, 4" ID
P148344	181	Clamp, T-bolt, 4.5" ID
P148345	181	Clamp, T-bolt, 5" ID
P148346	181	Clamp, T-bolt, 5.5" ID
P148347	181	Clamp, T-bolt, 6" ID
P148348	181	Clamp, T-bolt, 7" ID
P148349	181	Clamp, T-bolt, 8" ID
P148350	181	Clamp, T-bolt, 10" ID
P149099	191	Vacuator™ Valve, 1" EBA, EBB A/C
P150692	70-71	Filter, primary, no cover
P150693	70-71	Filter, primary, attached cover
P150694	70-71	Filter primary
P150695	70-71	Filter primary
P150862	70-71	Access Cover, ECG Konepac 11" A/C
P151097	65	Filter, primary
P153551	70-71	Filter primary, attached cover
P154575	70-71	Filter primary, no cover, treated
P154927	50-51	Air Cleaner, ECO®-II
P155211	60	Gasket, Cover
P155264	60	Gasket, Cover
P158089		SSG AC, dust cup
P158324	175	Bowl Assembly, PB 7" OD, P/C
P158914	191	Vacuator <sup>™</sup> Valve
P159820	186	Rubber 90° Elbow Reducer, 7"/5" ID
P181015	75	Filter, primary - SM
P181028	75	Filter, primary - SM
P181038		Filter, primary - SM
P181039	162	Filter, primary - SM
P181040 P181041	146	Filter, primary - SM Filter, primary - SM
	146	
P181042 P181043		Filter, primary - SM Filter, primary - SM
P181043 P181044	147	
		Filter, primary - SM
P181049		Filter, primary - SM
P181099	75	Filter, primary - SM
P182015	75	Filter, primary
P182028	75	Filter, primary
P182038		Filter, primary
P182039	162	Filter, primary - ES
P182040		Filter, primary
P182041	146	Filter, primary
P182042	146	Filter, primary
P182043	128-129	Filter, primary
P182044	146	Filter, primary
P182049	128-129	Filter, primary
020.0		
P182099	75	Filter, primary
	75 198	Filter, primary Aluminum Intake Tubing

Part No.	Page No.		
P206851	198	Aluminum Intake Tubing	
P207367	198	Aluminum Intake Tubing	
P207368	198	Aluminum Intake Tubing	
P207369	198	Aluminum Intake Tubing	
P224684	198	Aluminum Intake Tubing	
P224691	198	Aluminum Intake Tubing	
P520882	187	Rubber Hump Reducer, 3.5"/2.75" ID	
P520883	187	Rubber Hump Reducer, 3"/2.75" ID	
P520884	187	Rubber Hump Reducer, 4"/2.75" ID	
P521639	185	Restriction Tap Sleeve, 5"	
P521641	185	Restriction Tap Sleeve, 6"	
P522133	115-117	Cover, FRG	
P522439	180	Mounting Band Bright, 13" ID	
P522958	191	Vacuator™ Valve, 2"	
P523096	55	Cover, EPG	
P524552	180	Mounting Band, Bright Stainless, EB 15" AC	
P524837	50-51	Air Cleaner, ECO®-II	
P524838	50-51	Air Cleaner, ECO®-II	
P525956	191	Vacuator™ Valve, 1"	
P526676	115-117	Cover Gasket, FRG	
P527435	55	Thumb Screw	
P527484	55	Filter, primary - SM	
P527586	50-51	Air Cleaner, ECO®-CM	
P527680	55	Filter, safety	
P527682	55	Filter, primary - SM	
P527683	55	Filter, safety	
P528722	50-51	Air Cleaner, ECO®-II	
P529151	55	Cover, EPG	
P532503	115-117	Filter, primary	
P532504	115-117	Filter, safety	
P532919	181	Clamp, Lined Hose-Type	
P532920	181	Clamp, Lined Hose-Type	
P532921	181	Clamp, Lined Hose-Type	
P532922	181	Clamp, Lined Hose-Type	
P532923	181	Clamp, Lined Hose-Type	
P532924	181	Clamp, Lined Hose-Type	
P532925	181	Clamp, Constant Torque Hose-Type	
P532926	181	Clamp, Constant Torque Hose-Type	
P532927	181	Clamp, Constant Torque Hose-Type	
P532928	181	Clamp, Constant Torque Hose-Type	
P532929	181	Clamp, Constant Torque Hose-Type	
P532943	189	Silicone 4-ply Bellows	
P532944	189	Silicone 4-ply Bellows	
P532945	189	Silicone 4-ply Bellows	
P532948	189	Silicone Charged Air Connector	
P532949	189	Silicone Charged Air Connector	
P532950	189	Silicone Charged Air Connector	
P532951	189	Silicone Charged Air Connector	
P532952	189	Silicone Charged Air Connector	
P532953	189	Silicone Charged Air Connector	
P532954	189	Silicone Charged Air Connector	
P532956	189	Silicone Charged Air Connector	
P532957	189	Silicone Charged Air Connector	
P532958	189	Silicone Charged Air Connector	

Part No.	Page No.	Product Description	
P532960	189	Silicone Hump Hose Connector	
P532961	189	Silicone Hump Hose Connector	
P532962	189	Silicone Hump Hose Connector	
P532966	115-117	Filter, primary	
P533685	104	Cover Assembly, FPG	
P533761	104	Cover Assembly, FPG	
P533781	115-117	Filter, safety	
P533890	55	Filter, safety	
P533916	55	Service Cover, EPG	
P533930	55	Filter, primary	
P534048	104	Cover Assembly, FPG	
P535396	104	Filter, safety	
P535559	60	Gasket, Cover	
P535571	189	Silicone 4-ply Bellows	
P535572	189	Silicone 4-ply Bellows	
P535573	189	Silicone 4-ply Bellows	
P536163	186	Rubber 90° Elbow Reducer, 3"/4" ID	
P536202	104	Cover Assembly	
P536439	115-117	Latch	
P536457	115-117	Filter, primary	
P536492	115-117	Filter, safety	
P536493	70-71	Gasket, Cover	
P537308	115-117	Cover Gasket	
P537447	50-51	Air Cleaner, ECOLITE®	
P537448	50-51	Air Cleaner, ECOLITE®	
P537449	50-51	Air Cleaner, ECOLITE®	
P537450	50-51	Air Cleaner, ECO®-CM	
P537451	50-51	Air Cleaner, ECO®	
P537452	50-51	Air Cleaner, ECO®	
P537453	50-51	Air Cleaner, ECO®	
P537454	50-51	Air Cleaner, ECO®	
P537455	50-51	Air Cleaner, ECO®-SM	
P537456	50-51	Air Cleaner, ECO®-SM	
P537468	186	Rubber 90° Elbow Reducer, 5"/6" ID	
P537699		Gasket Cover	
P537791	70-71	Filter primary attached black cover	
P537877	115-117	Filter, safety	
P538200		Cover Assembly	
P538259		Cover Assembly	
P538452		Service Cover	
P538928	104	Cover Latch	
P539422	104	Cover Assembly	
P540256	187	Rubber Hump Reducer, 4.5"/4" ID	
P542475	60	Cover	
P544238	60	Cover	
P544243	60	Filter, primary	
P544301	60	Filter, primary	
P544741	60	Filter, primary	
P544744	60	Cover	
P544827	60	Cover	
P544950	60	Filter, primary	
P547694	188	Elbow, 90 Deg, Reducer, Rubber, Cobra Adapter	
P549271		Filter, primary	
P549277		Filter, safety	
P549523	115-117	Filter, primary	



Part No.	Page No.	Product Description
P549530	115-117	Filter, safety
P600043	115-117	Filter, primary
P600047	115-117	Filter, safety
P600321	115-117	Cover
P600325	188	Elbow, 90 Deg, Reducer, Rubber, Cobra
		Adapter
P600326	188	Elbow, 90 Deg, Reducer, Rubber, Cobra Adapter
P600327	188	Elbow, 90 Deg, Reducer, Rubber, Cobra Adapter
P600328	188	Elbow, 90 Deg, Reducer, Rubber, Cobra Adapter
P600657	115-117	Cover
P600975	42	Filter, safety
P601280	115-117	Filter, primary
P601286	115-117	Filter, safety
P601437	115-117	Filter, primary
P601476	115-117	Filter, safety
P601560	42	Filter, safety
P601735	42	Cover
P601767	115-117	Filter, primary
P601774		Filter, safety
P601790		Filter, primary
P602211		Baffle Assembly
P602427	84	· · · · · · · · · · · · · · · · · · ·
	42	Filter, safety Cover
P602985		
P603504		Body gasket strips (two, short)
P603505		Lower body assembly
P603716	136-138	
P603729	84	Filter, safety
P604045	187	Rubber Hump Reducer, 5"/4.5" ID
P604457	84	Filter, primary
P605731	92	Cover
P606121	42	Filter, safety
P606122	44	Ford PowerCore Air Filter
P606497	84	Cover
P607373	50-51	Air Cleaner, ECO®
P607557	42	Filter, safety
P608116	92	Filter, primary (metal liner)
P608117	92	Cover
P608171	42	Cover
P608180	42	Cover
P608305	136-138	Filter, safety RadialSeal
P608306	136-138	Filter, primary RadialSeal
P608391	92	Filter, safety
P608533	42	Filter, primary
P608592	84	Cover
P608599	84	Filter, safety
P608665	42	Filter, primary
P608666	42	Filter, primary
P608667	42	Filter, primary
P608675	42	Filter, primary
P608676	42	Filter, primary
P608677	42	Filter Primary
	84	Filter Primary
P609218	_	
P609219	84	Cover
P609221	84	Filter Primary

Part No.	Page No.	Product Description
P609508	136-138	Lower body assembly
P609518	136-138	Filter, safety RadialSeal
P609519	136-138	filter, primary RadialSeal
P609942	92	Cover
P610776	136-138	Rain shroud, right side
P610777	136-138	Rain shroud, left side
P611189	92	Filter, safety
P611190	92	Filter, primary (metal liner)
P611539	92	Filter, primary (metal liner)
P611540	92	Filter, safety
P613679	50-51	Air Cleaner, ECO®
P615493	42	Filter, Safety
P615530	42	Cover
P617276	39	Scavenge Adapter, 90 Deg
P617631	42	Filter, Primary
P617632	191	Vacuator™ Valve
P619481	42	Cover, Watertight
P619482	42	Cover, Watertight
P621983	42	Filter, primary
P621984	42	Filter, safety
P622745	42	U-clip (9 clips)
P622945	42	Latch
P623026	42	Cover, with watertight seal
P623192	42	Gasket
P776008	191	Vacuator™ Valve
P776033	42	Latch
P777151	102	Mounting Band, plastic, FPG 04
P777366	42	Latch, Air Cleaner
P777639	115-117	Filter, safety
P777730	102	Mounting Band, plastic
P777731	102	Mounting Band, plastic
P777732	102	Mounting Band, polymer
P777868	115-117	Filter, primary
P777869	115-117	Filter, safety
P777920	115-117	Cover
P778810	102	Mounting Band, polymer
P780522	104	Filter, primary
P780523	104	Filter, safety
P780532	102	Mounting Band, FPG Alexin
P780594	102	Mounting Band, FPG Alexin
P781039	115-117	Filter, primary
P781098	115-117	Filter, primary
P781102	115-117	Filter, safety
P783185	115-117	Cover
P783746	39	Scavenge Adapter, Straight
P783747	39	Scavenge Adapter, Straight
P783748	39	Scavenge Adapter, Straight
P784019	39	Scavenge Adapter, 90 Deg
P784279	42	Cover
P784298	42	Cover
P784517	42	U-clip (4 clips)
P785651	42	Cover
P786337	39	Check Valve
P786340	39	Check Valve
P786343	39	Check Valve
P786989	42	Cover

D4	D	
Part No.	Page No.	Product Description
P821575	104	Filter, primary
P822686	104	Filter, primary
P822768	104	Filter, primary
P822769	104	Filter, safety
P822858	104	Filter, safety
P827653	104	Filter, primary
P828889	104	Filter, primary
P829332	104	Filter, safety
P829333	104	Filter, safety
S000011	198	Breather, 1/4" NPT
S000067	198	Breather, 1.50" ID
S000072	198	Breather, 1/2" NPT
S000080	198	Breather, 3/4" NPT
S000099	198	Breather, 2" NPT
S000183	198	Breather, 1" NPT
X001744	198	Air Stack Extension
X001746	198	Air Stack Extension
X001747	198	Air Stack Extension
X001966	178	Inlet Hood, metal, 2.5" OD
X001988	178	Inlet Hood, metal, 3.75" OD
X002014	178	Inlet Hood, metal, 3" OD
X002015	178	Inlet Hood, metal, 4" OD
X002017	178	Inlet Hood, metal, 1.75" OD
X002018	178	Inlet Hood, metal, 2" OD
X002019	178	Inlet Hood, metal, 2.25" OD
X002101	183	Restriction Gauge Kit, Informer, 30" Limit
X002102	183	Restriction Gauge Kit, Informer, 25" Limit
X002103	183	Restriction Gauge Kit, Informer, 20" Limit
X002215	184	Restriction Indicator, 15" Limit
X002220	184	Restriction Indicator, 20" Limit
X002225	184	Restriction Indicator, 25" Limit
X002230	184	Restriction Indicator, 30" Limit
X002250	183	Restriction Indicator, ServiSignal, 15" Limit
X002251	183	Restriction Indicator, ServiSignal, 20" Limit
X002252	183	Restriction Indicator, ServiSignal, 25" Limit
X002254	183	Restriction Indicator, ServiSignal, 30" Limit
X002275	183	Restriction Gauge, Informer, 30" Limit
X002277	183	Restriction Gauge, Informer, 25" Limit
X002278	183	Restriction Gauge, Informer, 20" Limit
X002315	184	Restriction Indicator Kit, 15" Limit
X002320	184	Restriction Indicator Kit, 20" Limit
X002325	184	Restriction Indicator Kit, 25" Limit
X002330	184	Restriction Indicator Kit, 30" Limit
X002350	183	Restriction Indicator Kit, SERVISIGNAL, 15" Limit
X002351	183	Restriction Indicator, ServiSignal, 20" Limit
X002352	183	Restriction Indicator, ServiSignal, 25" Limit
X002354	183	Restriction Indicator, ServiSignal, 30" Limit
X002700	185	Restriction Gauge Kit, 60" H20
X002730	185	Restriction Gauge Kit, 30" H20
X003538	146	Gasket Kit, ST 14" Tube/Peripheral
X003539	146	Gasket Kit, ST 16" Tube/Peripheral
X003691	197	Moisture Eliminator, Vertical, 7" Dia.
X003903	185	Restriction In-Field Service Gauge Kit
X004814	184	Indicator, Safety Signal, 7/16"-20 UNF
X004815	184	Indicator, Safety Signal, 7/16"-20 UNF




Part No.	Page No.	Product Description
X004816	184	Indicator, Safety Signal, 1/2"-13 UNF
X005555	146	Latch Repair Kit
X005822	197	In-Line Moisture Skimmer, 6" Dia.
X005900	197	In-Line Moisture Skimmer, 7" Dia.
X005901	197	In-Line Moisture Skimmer, 7" Dia.
X006452	55	Fastener Kit
X006561	192-193	Dust Dumpa
X006562	192-193	Dust Dumpa with Dust Cup
X007276	183	Mini-Informer Kit, 25" H20
X007335	183	Mini-Informer, Restriction Indicator, 25" H20
X007953	44	Ford PowerCore Air Induction Retrofit Kit
X009230	151	SRG/SSG Conversion Kit
X009231	151	SRG/SSG Conversion Kit
X009291	70-71	Latch Replacement Kit
X009701	151	SRG/SSG Conversion Kit
X009702	151	SRG/SSG Conversion Kit
X770037	184	Restriction Electrical Indicator, 15" Limit
X770050	184	Restriction Electrical Indicator, 20" Limit
X770062	184	Restriction Electrical Indicator, 25" Limit
X770075	184	Restriction Electrical Indicator, 20" Limit


Part	Page		Part	Page	
No.	No.	Product Description	No.	No.	Product Description



# Hydraulic & Transmission Filtration for Mobile Equipment

Donaldson offers a complete line of hydraulic and transmission filtration solutions that will keep your equipment operating at peak performance.

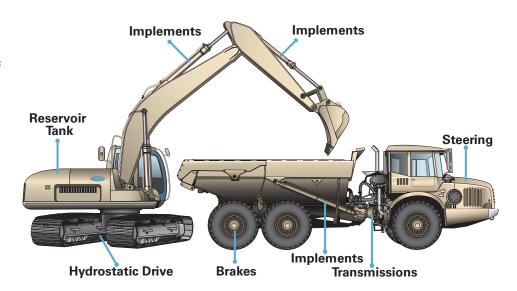

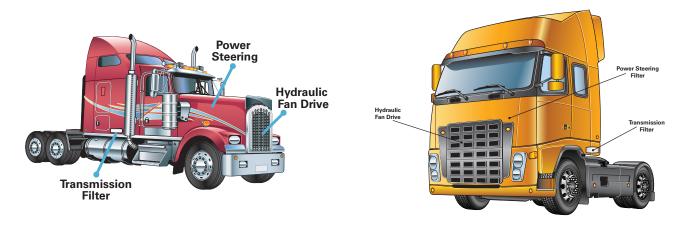



Single-pass Bulk Fuel Filtration System

## **Bulk Fluid & Lubricant Filtration**

Donaldson offers a range of custom and standard filtration products and **services** specifically targeted to resolve fuel and bulk oil filtration problems, including:

- On-site surveys
- Facility upgrade options
- Condition monitoring
- Contamination control training/audit
- Installation support, commissioning and fluid management systems
- Support from a local Donaldson distributor for replacement filters and spare parts.

### Air Cleaner Selection Steps — see pages 12/13 inside for complete details.

- 1. Determine the combustion air requirements of the engine
- 2. Determine the dust condition for the engine/machine and typical operating environment
- 3. Select an air cleaner series
- 4. Choose a specific air cleaner family or series
- 5. Choose intake accessories

Engine Displacement Formula	
4-Stroke (Cycle) Engine Formula  English Units  Airflow (CFM) = (Engine Size (CID) x RPM) x VE / 3456	
Metric Units Airflow (m³/min) = (Engine Size (Liters) x RPM) x VE / 2000	
VE = Volumetric Efficiency — 4-Stroke* 0.90 for naturally aspirated gas engine 0.90 for naturally aspirated diesel engine 1.60 for turbo charged diesel engine 1.85 for turbo charged after cooled diesel engine	
2 -Stroke (Cycle) Engine Formula	
English Units Airflow (CFM) = (Engine Size (CID) x RPM) x VE / 1728	
Metric Units Airflow (m³/min) = (Engine Size (Liters) x RPM) x VE / 1000	
VE = Volumetric Efficiency — 2-Stroke* 0.90 for naturally aspirated diesel engine 1.40 for scavenge blower diesel engine 1.90 for turbo charged diesel engine	
Engine Horsepower Formula	
English Units Airflow (CFM) = HP (SAE) x SA	
SA = (Specific Airflow) per Horsepower 4-stroke naturally aspirated diesel engine — 2.0 4-stroke turbo charged diesel engine — 2.3 4-stroke turbo charged after cooled diesel engine — 2.3	
2-stroke naturally aspirated diesel engine — 2.0 2-stroke scavenge blower diesel engine — 3.3 2-stroke turbo charged diesel engine — 3.6	
Metric Units Airflow (m³/min) = HP (SAE) x SA	
SA = (Specific Airflow) per Horsepower 4-stroke naturally aspirated diesel engine — 0.057 4-stroke turbo charged diesel engine — 0.065 4-stroke turbo charged after cooled diesel engine — 0.065	
2-stroke naturally aspirated diesel engine — 0.057 2-stroke scavenge blower diesel engine — 0.093 2-stroke turbo charged diesel engine — 0.102	

### Global Presence with a Local Touch

At Donaldson, we've built a strong, flexible and responsive distribution network to serve our customers around the world.

**Localized Manufacturing** – It starts with 30+ manufacturing locations around the world – producing most filters in the regions where they're used.

**Primary Distribution Centers** – Filters then move to our regional warehouses and distribution center hubs – meaning the filters you need are never far away.

**Logistics** – We work with a network of transportation and logistics companies, consolidators and cross-docking facilities to deliver products to distribution partners quickly and efficiently.

**Distribution Partners** – We've built one of the largest, strongest and most responsive distributor networks in the filter industry – meaning you can find the filters and support you need, nearly anywhere in the world.



DONALDSON



appsearch.donaldson.com

AMERICAS AND SOUTH



crossreference.donaldson.com

EUROPE & ASIA PACIFIC



b2b.emea.donaldson.com/ public/engine/prd/inqxref.htm

AUSTRALIA CROSS REFERENCE



donaldsontoolbox.com.au



Donaldson Company, Inc. Minneapolis, MN USA

www.buydonaldson.com www.donaldson.com North America 800-374-1374 Mexico, Latin America & Caribbean 52-449-910-6150

**Brazil** 55-11-2119-1604 **Europe** 32-16-38-3811

South Africa 27-11-997-6000 South East Asia 65-6311-7373 Greater China 852-2405-8388 Japan 81-42-540-4112 Korea 82-2-517-3333

Korea 82-2-517-3333 Australia 61-02-4350-2033 India 91-124-2290060

#### Catalog No. F110027 ENG (7/15)

© 2015 Donaldson Company, Inc. All rights reserved. Donaldson Company, Inc. reserves the right to change or discontinue any model or specification at any time and without notice. Printed in the U.S.A.