

UV-3000 Ultra Violet Water Sterilizer

Description

The UV-3000 is a robust, high quality ultra-violet sterilizer that offers very efficient treatment at a low cost per unit volume. Typically installed at the point of entry, it can treat municipal water as well as ground water from drilled or dug wells, and surface water from lakes, ponds or rivers (pre-filtration necessary). This sterilizer is perfectly sized to provide drinking water or purified process water for large houses and mansions, as well as for commercial and light industrial applications.

The UV-3000 contains a low-pressure, high output UV lamp in a 304L stainless steel reaction chamber (316L available). It comes with an electronic ballast that features a lamp-out alarm if there is no power to the lamp.

Combined with appropriate pre-filtration, this sterilizer is the centre piece of a complete water treatment system for the elimination of bacteria and viruses and reduction of taste and odour at the point of entry (see part # SYS3000-QS4E-1/2).

Additional features for this sterilizer can be ordered, such as a UV-monitoring system for fail-safe operation, a thermo-sensitive purge valve at the out port to prevent overheating in no-flow conditions, or volt-free contacts on the ballasts for remote signaling.

The UV-3000 kills most harmful pathogens such as viruses, bacteria and protozoa with a powerful UV disinfection dose that will inactivate the pathogens at a kill rate of 99.99% (log 4) or more (*Giardia, E. coli, Cryptospiridium, Vibria cholera, Legionella, Salmonella, Shigella, Streptococcus* and many others).







Applications

- ▶ Potable Water
- Health Clinics and Hospital Areas
- ▶ Herbal Medicine Production
- Hotels and Restaurants
- Fish Farming
- Pools and Spa's
- Food and Beverage Processing

Benefits

Stand

On Guard

- ► Efficient Disinfection, Low Cost per Litre
- Exceptional High UV Dose
- Extremely Simple to Use and Maintain
- ► High Quality Stainless Steel Reaction Chamber
- ► Easily Upgradeable with Optional Features
- Made in Canada

Power Consumption:

Rated Flow: 113 litres per minute (30 GPM)

6780 litres (6.8 m³)/hour, 162 m³/day (1,800 gallons/hour, 43,200 gallons/day)

Initial UV Dose at Rated Flow: 49 mJ/cm² (49,000 µsec/cm²) @ 95% UVT

34 mJ/cm² (34,000 μsec/cm²) @ 70% UVT

Electrical: 110-130 Volt AC / 50-60 Hz (Part # P3000/QS4E-1)

220-240 Volt AC / 50-60 Hz (Part # P3000/QS4E-2)

85 VA @ 120 V, 89 VA @ 240 V

Ballast: Electronic Ballast (Part # 4-BE-800WL30-1/2)

w/ Lamp Out Alarm, Power LED

Number of Lamps: 1 (Part # RL-100/1197T6)

Lamp Wattage and Current: 100 Watts, 800 mA

UV Monitor:Optional (Part # 4-UV/MS-1/2)Solenoid Valve:Optional (part # 4-SV-1500-1)Hour Meter:Optional (Part # 4-HM-R100)

Max. Operating Temperature: 37 °C (98.6 °F)

Max. Operating Pressure: 125 psi - 8.6 bar (tested to 500 psi)


Plumbing: 1.5" MNPT In/Out

Chamber Material: 304L Stainless Steel (316L available) (PVC available)

Shipping Size and Weight: 1 box 52x9x9 inches, 24 lbs / 11 kg

Dose Chart

UV-3000 UV Dose Response Curve

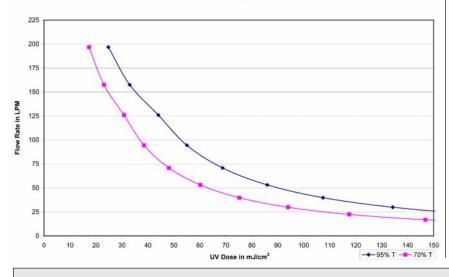

Additional Features (Optional):

- Electronic Deposit Control System with PVC or Stainless Reaction Chamber
- Volt-Free Contacts on Ballast for Remote Signaling
- Purge Valve at Out Port for Overheat Protection
- Ballast with Hour Meter for Total Runtime Display
- Panel- or Rack-Mounted for Easy Installation

Filtration

This UV sterilizer assumes certain water quality parameters to be met for proper operation. If the source water does not meet the following criteria, pretreatment has to be considered:

Turbidity (Suspended Solids): must be < 1 NTU at the time of disinfection. There must be a 5 micron or less sediment prefiltration system installed before the UV system.

Total Hardness (Sum of Calcium and Magnesium): Must be < 10 gpg (grains per gallon)

Iron: Must be < 0.3 ppm (parts per million)

Manganese: Must be < 0.05 ppm

This UV unit can be manifolded in parallel for higher flow rates and can be customized for many applications with pre-filtration into All-in-One panel-mounted systems (Part # SYS-MD1006-1/2)